


MULTI-PURPOSE FUSES (In junction block)

| Power supply circuit | No. | Rated capacity (A) | Load circuit | |
|----------------------|-------|--------------------|--|--|
| Battery | 1 | 20 | Rear A/C control unit | |
| Ignition switch | (IG2) | 2 | Overdrive control relay, ELC-4A/T control unit and auto-cruise control unit | |
| | | 3 | DRL control unit, blower relay, rear heater relay, headlamp washer relay, defogger relay, and wiper deicer timer | |
| | (ACC) | 4 | Radio, clock, accessory socket relay and auto-cruise control unit | |
| | | 5 | Remote control mirror, cigarette lighter | |
| Battery | 6 | 15 | Door lock control unit | |
| Ignition switch | (IG2) | 7 | Variable shock absorber control unit, ABS control unit, 4WD indicator control unit, 4WD indicator relay | |
| | | 8 | Power window relay and heated seat | |
| | (ACC) | 9 | Wiper and washer | |
| | | 10 | Horn | |
| | (IG1) | 11 | Combination meter and motor antenna control unit | |
| | | 12 | Turn-signal lamp and hazard lamp and SRS diagnosis unit | |
| Battery | 13 | 10 | Rear heater blower motor | |
| | 14 | 15 | Accessory socket relay | |
| | 15 | — | — | |
| | 16 | 25 | Blower motor | |
| | 17 | 15 | Stop lamp | |
| Ignition switch | (IG1) | 18 | 15 | Back-up lamp and rear differential lock control unit, SRS diagnosis unit |
| Battery | 19 | 10 | Engine control unit, ELC-4A/T control unit, room lamp, map lamp, cargo space lamp, combination meter, radio, clock, door lock control unit, auto-cruise control unit and ABS control unit and SRS diagnosis unit | |

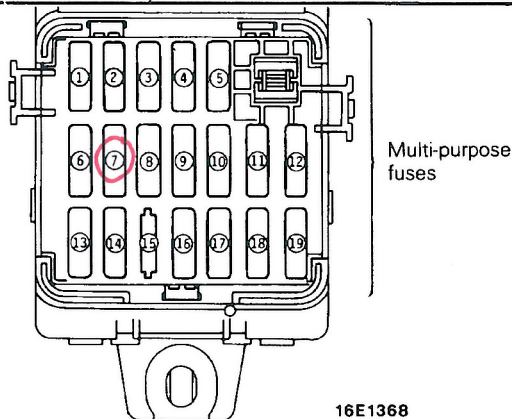

16E1368