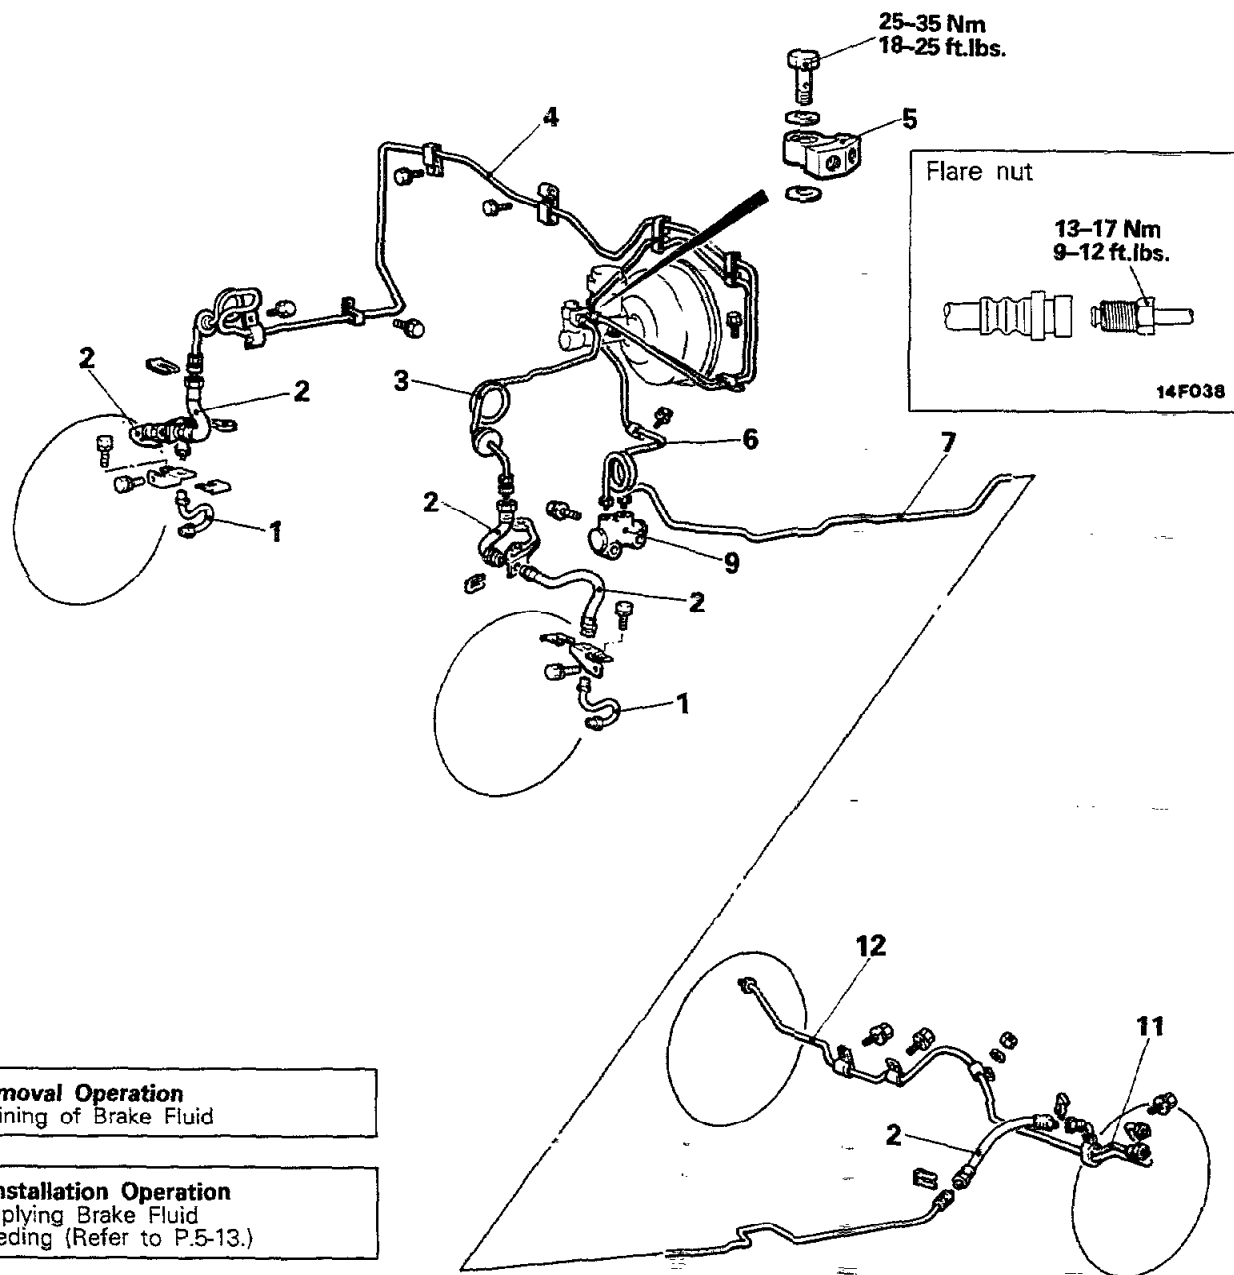


BRAKE LINE

REMOVAL AND INSTALLATION

NOSKA-

<2.6L Engine>

**Pre-removal Operation**

- Draining of Brake Fluid

Post-installation Operation

- Supplying Brake Fluid
- Bleeding (Refer to P.5-13.)

- 1. Brake tube
- ↔ ↔ 2. Brake hoses
- 3. Brake tube (front, L.H.)
- 4. Brake tube (front, R.H.)
- 5. Connector
- 6. Brake tube (A)
- 7. Brake tube (main)
- ↔ 9. Blend proportioning valve
- 11. Brake tube (rear, L.H.)
- 12. Brake tube (rear, R.H.)

NOTE

- (1) ↔ : Refer to "Service Points of Removal".
 (2) ↔ : Refer to "Service Points of Installation".