

Maintenance item			Maintenance operation	Maintenance interval	
OPERATIONS INSIDE THE VEHICLE					
C1	Check brake pedal and clutch pedal for free play		Inspection	Every 20,000 km or every 12 months	
C2	Check parking brake lever stroke and play		Inspection	Every 20,000 km or every 12 months	
C3	Replace air purifier filter		Replace	Every 15,000 km or every 12 months	
OPERATIONS OUTSIDE THE VEHICLE					
D1	Check wheel alignment		Inspection	Every 20,000 km or every 12 months	
D2	Check front and rear wheel bearings for play		Inspection	Every 60,000 km or every 3 years	
D3	Check brake hoses and pipes for leakage		Inspection	Every 20,000 km or every 12 months	
D4	Check brake pads and discs for wear		Inspection	Normal usage	Every 20,000 km or every 12 months
				Severe usage	Every 10,000 km or every 6 months
D5	Check brake shoe linings and drums (drum in disc) for wear		Inspection	Normal usage	Every 40,000 km or every 2 years
				Severe usage	Every 20,000 km or every 12 months
D6	Check fuel hoses and pipes for leakage or deterioration		Inspection	Every 40,000 km or every 2 years	
OPERATIONS AFTER ENGINE IS WARMED UP					
E1	Check fluid level in automatic transmission	V5A5A model	Inspection	Every 20,000 km or every 12 months	
E2	Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)	V5AWF model	Inspection	Every 20,000 km or every 12 months	
E3	Change automatic transmission fluid	V5A5A model	Change	Normal usage	Every 80,000 km
				Severe usage	Every 40,000 km
		V5AWF model	Change	Severe usage	Every 100,000 km
E4	Change engine oil		Change	Normal usage	Every 20,000 km or every 12 months
				Severe usage	Every 10,000 km
E5	Replace engine oil filter		Replace	Normal usage	Every 20,000 km or every 12 months
				Severe usage	Every 10,000 km