

## TRANSMISSION DISASSEMBLY INTERNAL COMPONENTS (CONT'D)

10. Remove the oil screen, low/reverse seal and 2nd brake seal from the transmission case, as shown in Figure 38.  
*Note: Discard all three, as they come in the Trans-Tec® overhaul kit.*
11. Remove the external snap ring from pass-thru connector as shown in Figure 37.  
*Note: The wire harness is one piece and does not disconnect externally.*
12. Remove the complete wiring harness through the inside of the case, as shown in Figure 38.

Continued on Page 33

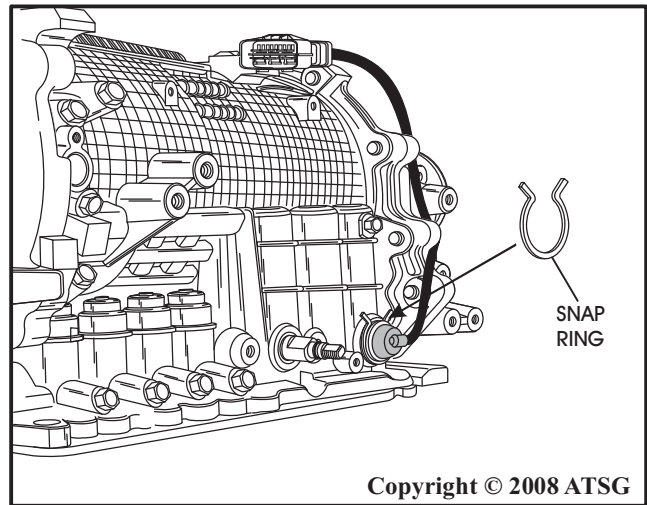


Figure 37

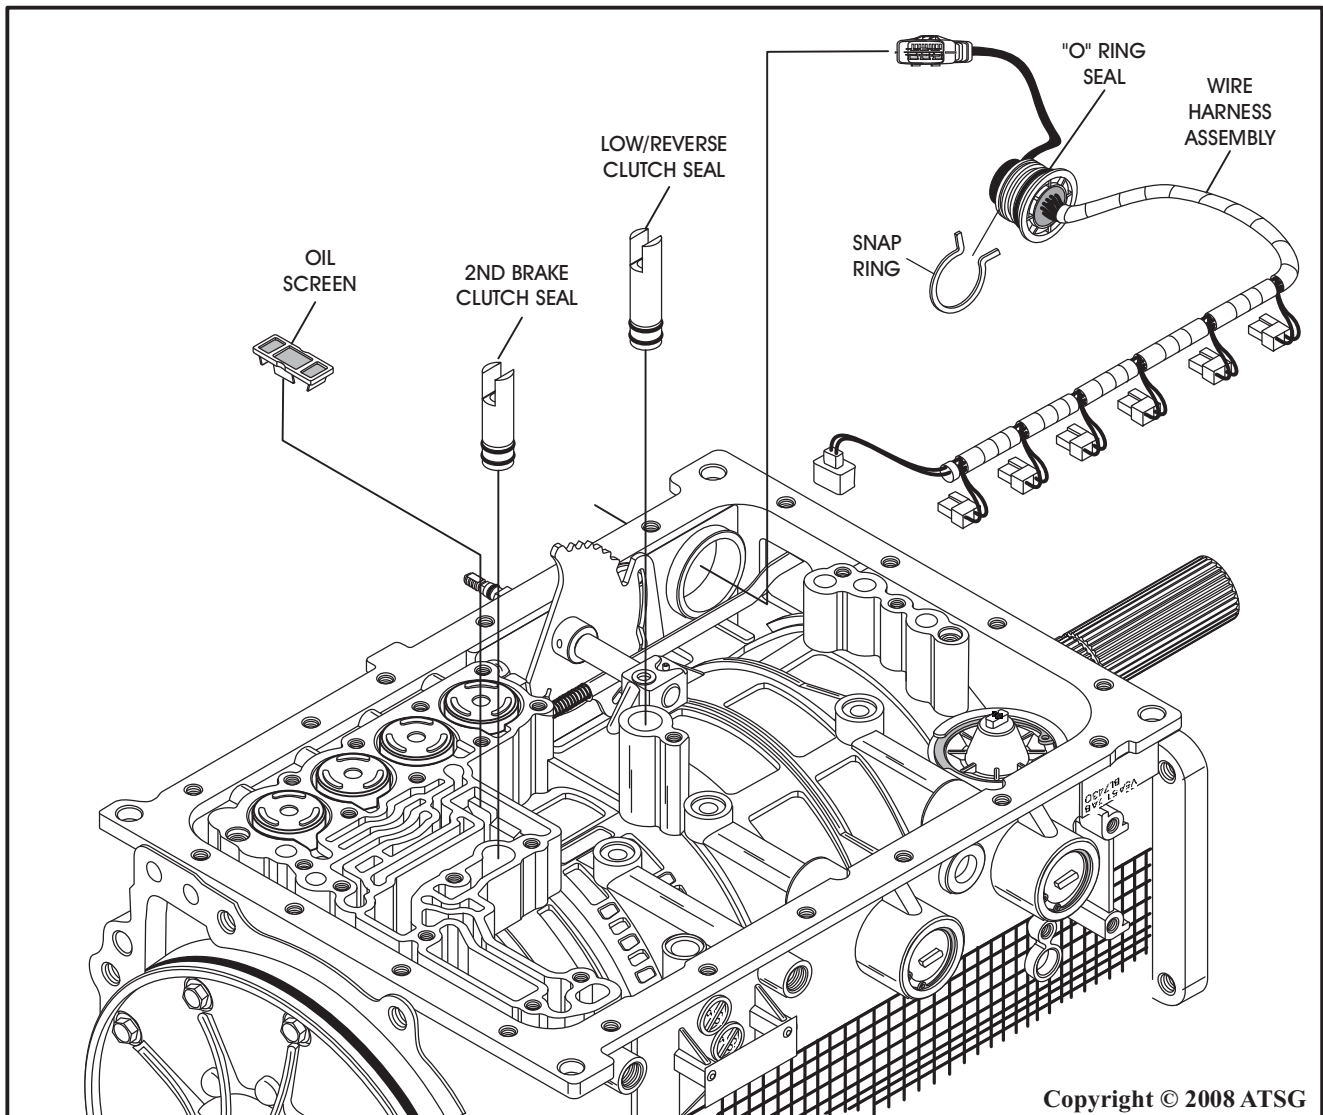


Figure 38