


MULTI-PURPOSE FUSES (In junction block)

Power supply circuit	No.	Rated capacity (A)	Load circuit	
Battery	1	20	Rear A/C control unit	
Ignition switch	(IG2)	2	Overdrive control relay, ELC-4A/T control unit and auto-cruise control unit	
		3	DRL control unit, blower relay, rear heater relay, headlamp washer relay, defogger relay, and wiper deicer timer	
	(ACC)	4	Radio, clock, accessory socket relay and auto-cruise control unit	
		5	Remote control mirror, cigarette lighter	
	Battery	6	15	Door lock control unit
Ignition switch	(IG2)	7	Variable shock absorber control unit, ABS control unit, 4WD indicator control unit, 4WD indicator relay	
		8	Power window relay and heated seat	
	(ACC)	9	Wiper and washer	
		10	Horn	
	(IG1)	11	Combination meter and motor antenna control unit	
		12	Turn-signal lamp and hazard lamp and SRS diagnosis unit	
Battery	13	10	Rear heater blower motor	
	14	15	Accessory socket relay	
	15	—	—	
	16	25	Blower motor	
	17	15	Stop lamp	
Ignition switch	(IG1)	18	15	Back-up lamp and rear differential lock control unit, SRS diagnosis unit
Battery	19	10	Engine control unit, ELC-4A/T control unit, room lamp, map lamp, cargo space lamp, combination meter, radio, clock, door lock control unit, auto-cruise control unit and ABS control unit and SRS diagnosis unit	

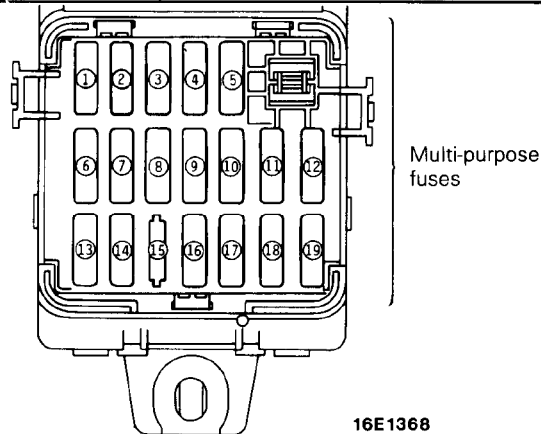

16E1368