

GROUP 80B

SPLICE LOCATIONS

CONTENTS

HOW TO READ SPLICE LOCATIONS.....	80B-2	STEERING COLUMN	80B-7
INDEX.....	80B-4	DASH PANEL.....	80B-8
ENGINE COMPARTMENT.....	80B-6	FLOOR AND ROOF	80B-10
RELAY BOX.....	80B-6	DOOR	80B-12
JUNCTION BLOCK	80B-7	LIFTGATE.....	80B-13

HOW TO READ SPlice LOCATIONS

M1802000100335


"Splice locations" describes splice points of each wiring harness on an actual vehicle.

Indicates a splice point number.
The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use.
In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

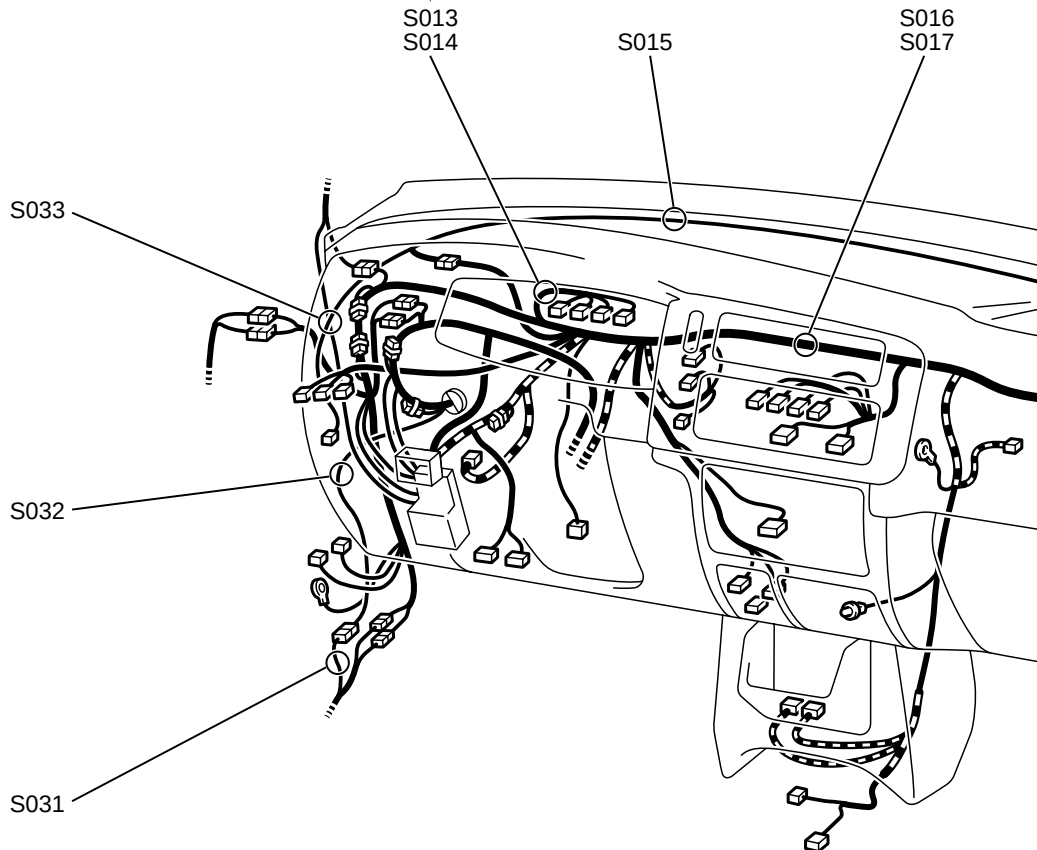

AC003556AB

NOTES

INDEX

M1802000900461

This index shows the page numbers where the splice locations are.

SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE
S001	P.80B-6	S032	P.80B-8	S065	P.80B-9	S105	P.80B-8
S002	P.80B-6	S033	P.80B-8	S066	P.80B-9	S106	P.80B-8
S003	P.80B-6	S034	P.80B-8	S067	P.80B-9	S108	P.80B-8
S004	P.80B-6	S035	P.80B-8	S068	P.80B-9	S110	P.80B-8
S005	P.80B-6	S036	P.80B-8	S070	P.80B-9	S111	P.80B-8
S006	P.80B-6	S037	P.80B-8	S072	P.80B-9	S113	P.80B-8
S007	P.80B-7	S038	P.80B-8	S076	P.80B-9	S114	P.80B-8
S008	P.80B-7	S039	P.80B-8	S077	P.80B-9	S116	P.80B-8
S009	P.80B-7	S040	P.80B-9	S079	P.80B-9	S117	P.80B-8
S010	P.80B-7	S041	P.80B-9	S080	P.80B-9	S118	P.80B-8
S012	P.80B-7	S042	P.80B-9	S082	P.80B-9	S119	P.80B-8
S013	P.80B-7	S043	P.80B-9	S083	P.80B-9	S121	P.80B-8
S014	P.80B-7	S044	P.80B-9	S084	P.80B-9	S122	P.80B-8
S015	P.80B-7	S045	P.80B-9	S085	P.80B-8	S123	P.80B-8
S016	P.80B-7	S046	P.80B-9	S086	P.80B-8	S124	P.80B-8
S017	P.80B-7	S047	P.80B-9	S087	P.80B-8	S125	P.80B-10
S018	P.80B-7	S048	P.80B-9	S089	P.80B-8	S126	P.80B-10
S019	P.80B-7	S049	P.80B-9	S090	P.80B-8	S131	P.80B-10
S020	P.80B-7	S051	P.80B-9	S091	P.80B-8	S132	P.80B-10
S021	P.80B-7	S052	P.80B-9	S092	P.80B-8	S133	P.80B-10
S022	P.80B-7	S054	P.80B-9	S093	P.80B-8	S134	P.80B-10
S023	P.80B-7	S055	P.80B-9	S094	P.80B-8	S135	P.80B-11
S024	P.80B-7	S056	P.80B-9	S095	P.80B-8	S136	P.80B-11
S025	P.80B-8	S057	P.80B-9	S096	P.80B-8	S137	P.80B-11
S026	P.80B-8	S058	P.80B-9	S097	P.80B-8	S138	P.80B-11
S027	P.80B-8	S059	P.80B-9	S099	P.80B-8	S139	P.80B-11
S028	P.80B-8	S060	P.80B-9	S100	P.80B-8	S140	P.80B-11
S029	P.80B-8	S061	P.80B-9	S101	P.80B-8	S141	P.80B-10
S030	P.80B-8	S063	P.80B-9	S102	P.80B-8	S144	P.80B-10
S031	P.80B-8	S064	P.80B-9	S103	P.80B-8	S145	P.80B-10


**SPLICE LOCATIONS
INDEX**

80B-5

SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE
S146	P.80B-10	S161	P.80B-10	S179	P.80B-10	S195	P.80B-9
S147	P.80B-10	S162	P.80B-10	S180	P.80B-12	S196	P.80B-10
S148	P.80B-10	S163	P.80B-10	S181	P.80B-12	S197	P.80B-10
S149	P.80B-10	S164	P.80B-10	S182	P.80B-12	S198	P.80B-10
S150	P.80B-10	S165	P.80B-10	S183	P.80B-12	S199	P.80B-10
S151	P.80B-10	S166	P.80B-10	S184	P.80B-13	S200	P.80B-6
S152	P.80B-10	S167	P.80B-10	S185	P.80B-13	S201	P.80B-6
S153	P.80B-10	S169	P.80B-10	S186	P.80B-8	S202	P.80B-7
S154	P.80B-10	S171	P.80B-10	S188	P.80B-9	S203	P.80B-6
S155	P.80B-10	S173	P.80B-10	S189	P.80B-9	S204	P.80B-6
S156	P.80B-10	S174	P.80B-10	S190	P.80B-9	S205	P.80B-6
S157	P.80B-10	S175	P.80B-10	S191	P.80B-9	S206	P.80B-6
S158	P.80B-10	S176	P.80B-10	S192	P.80B-9	S207	P.80B-6
S159	P.80B-10	S177	P.80B-10	S193	P.80B-9	S208	P.80B-6
S160	P.80B-10	S178	P.80B-10	S194	P.80B-9		

ENGINE COMPARTMENT


M1802000200387

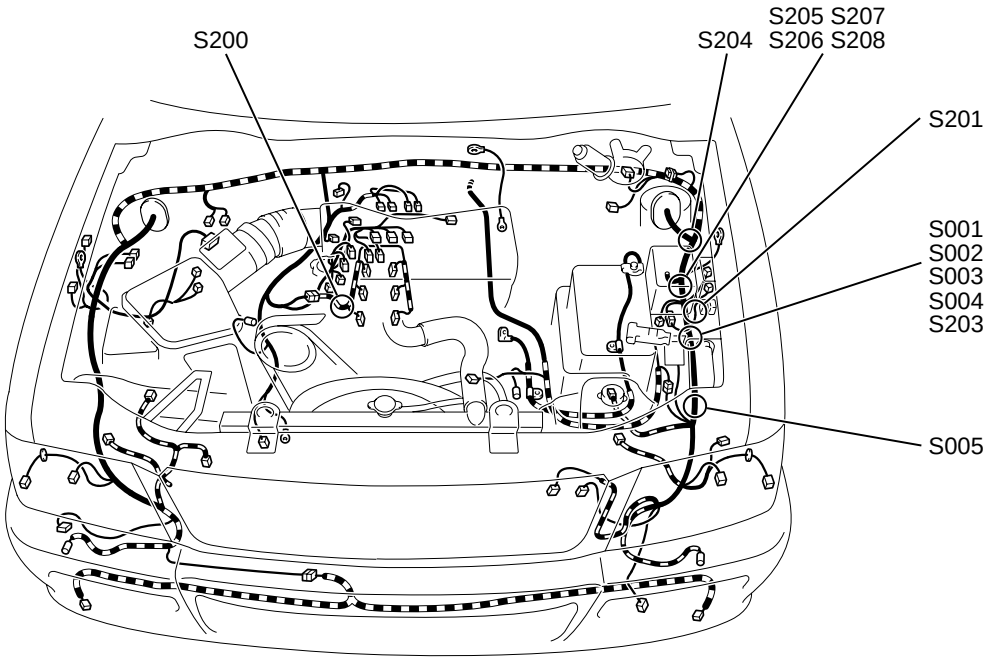

AC201572AB

RELAY BOX

M1802001000115

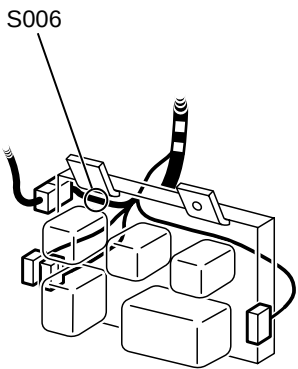


AC003558AB


JUNCTION BLOCK

M1802001100112

FRONT SIDE

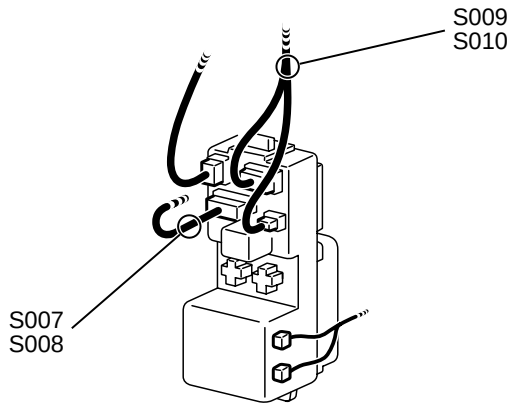


REAR SIDE

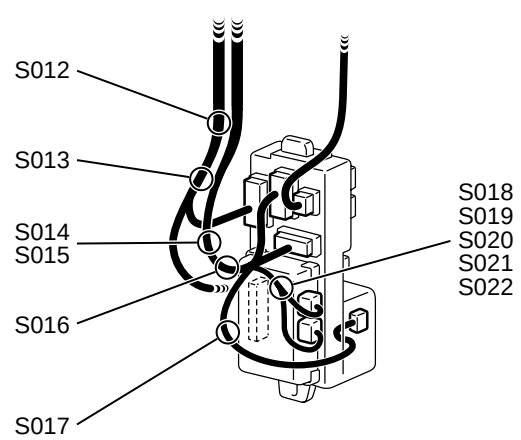

AC003559 AC

STEERING COLUMN


M1802000400109

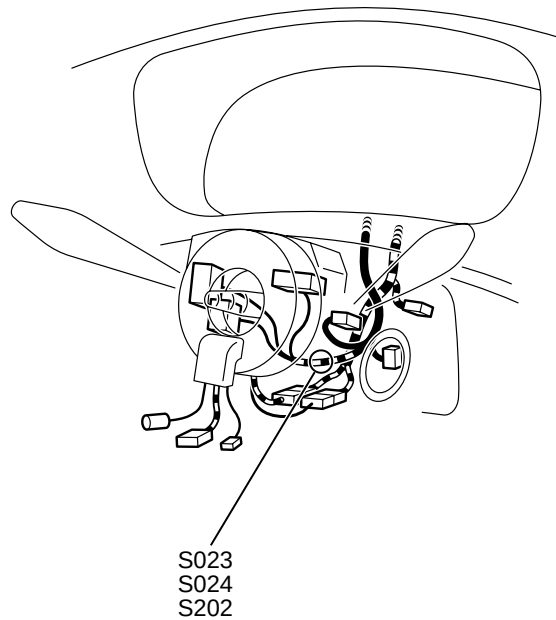


AC003560 AC

DASH PANEL

M1802000300384

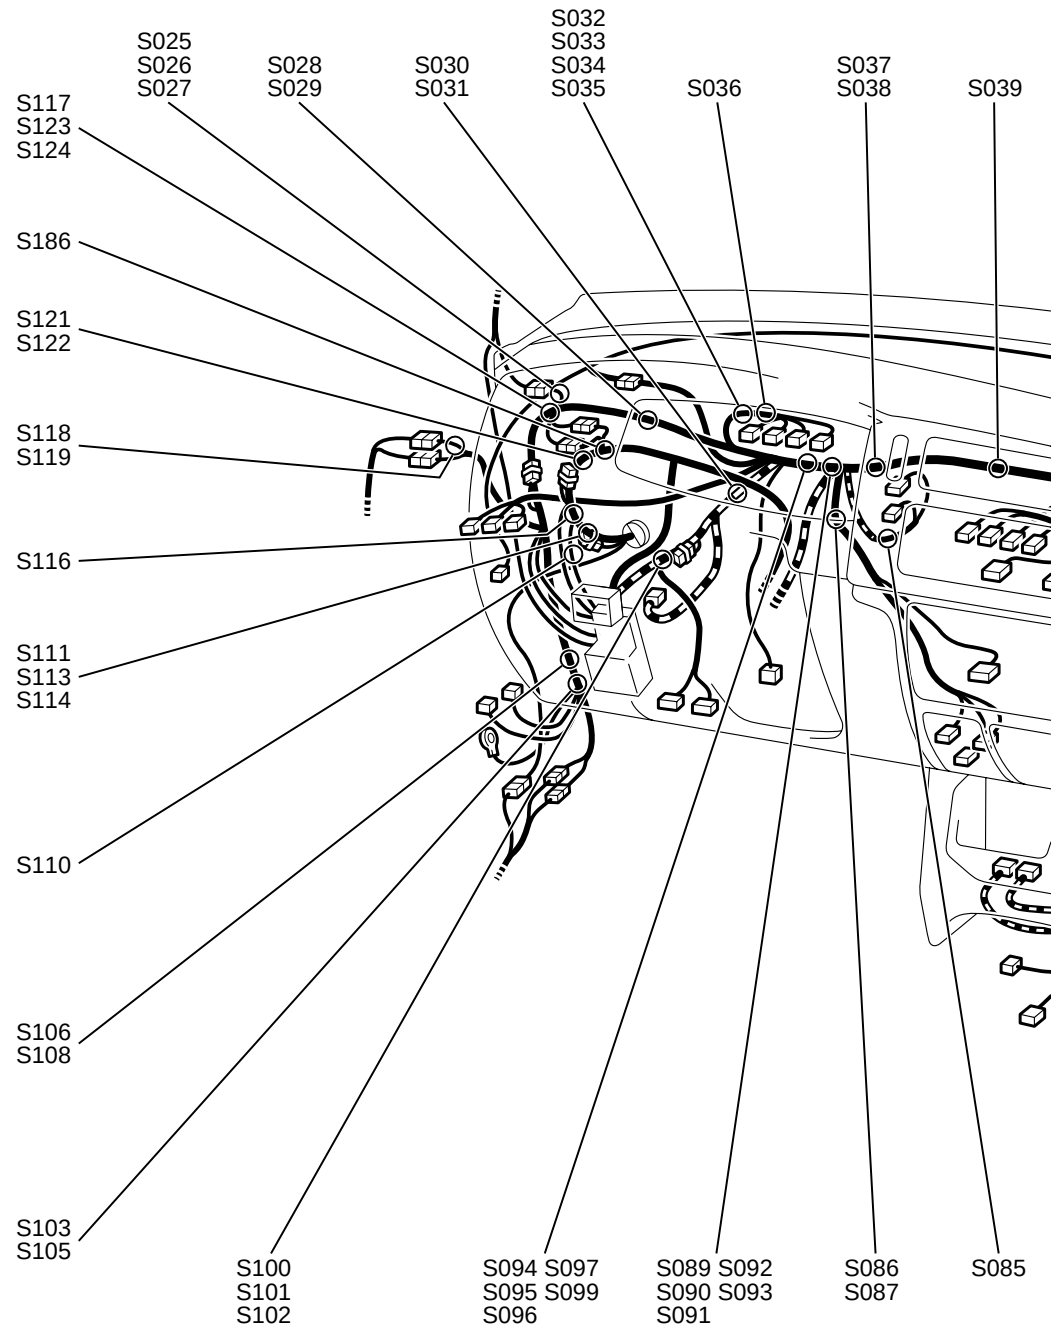


AC102434AB

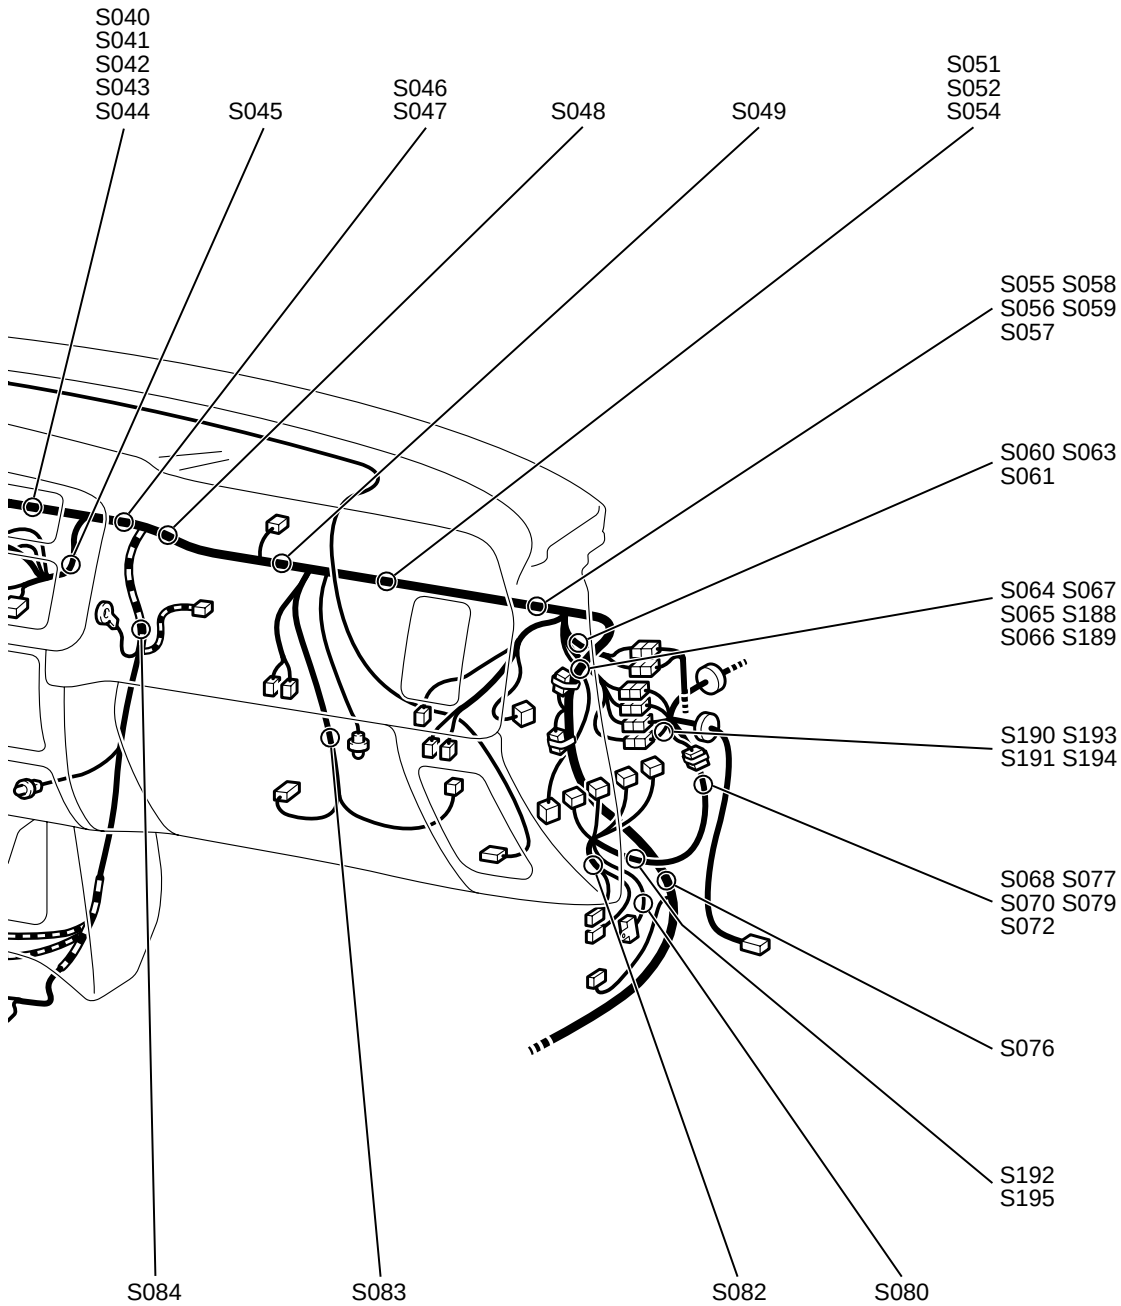


AC102435AC

FLOOR AND ROOF

M1802001200391

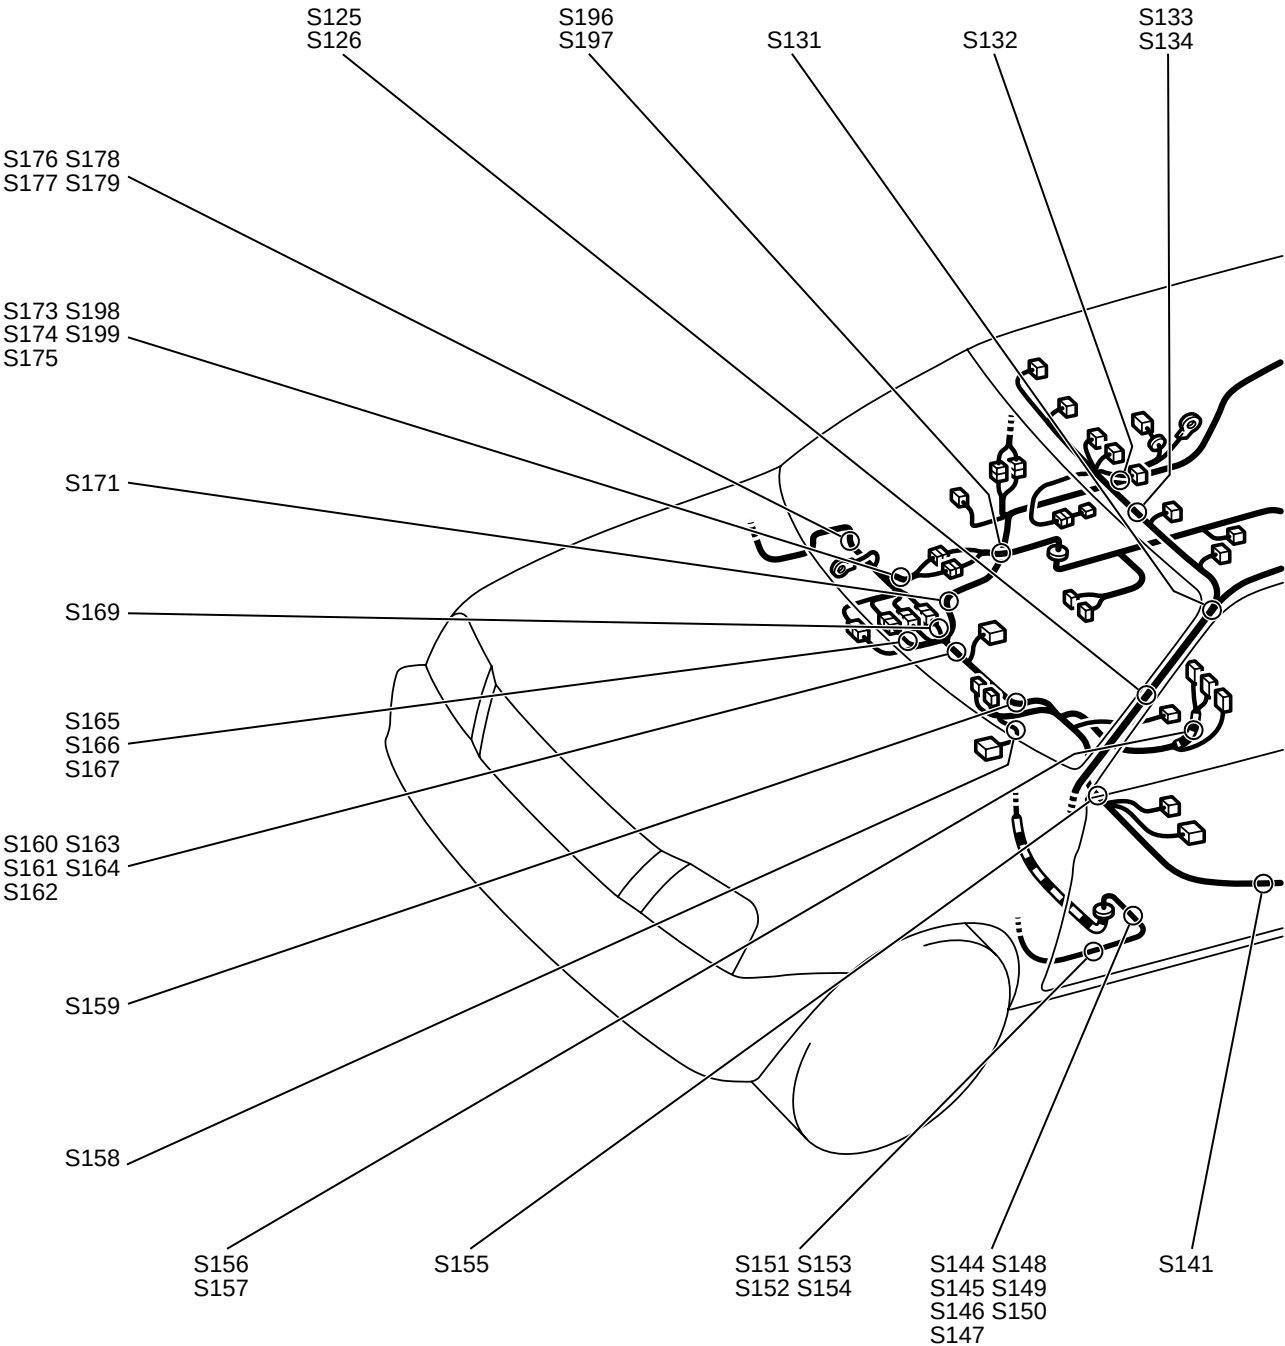

AC003563AC

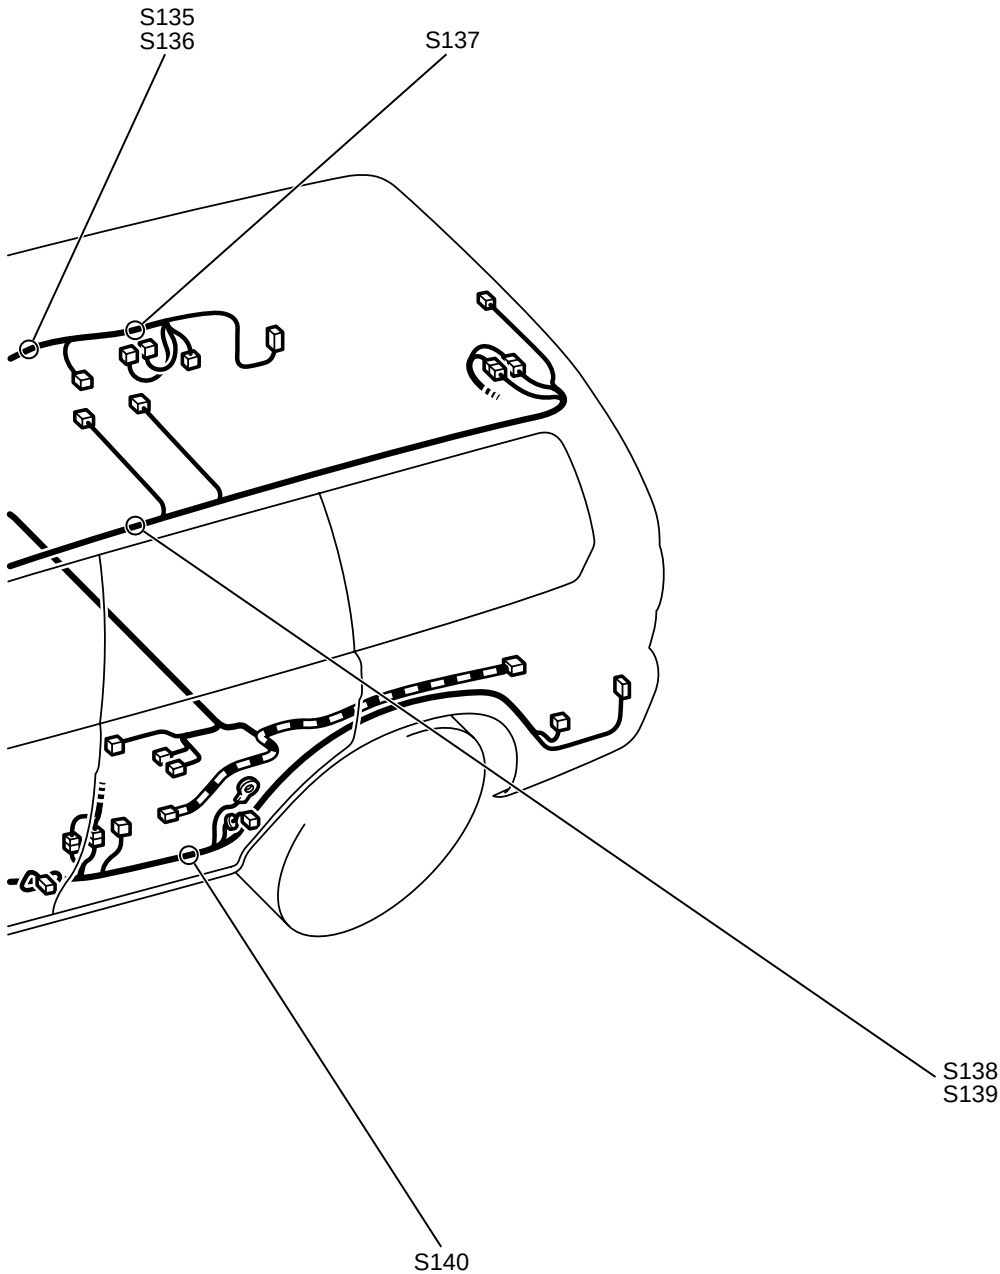


AC003564AB


DOOR

M1802000800367

<DRIVER'S SIDE>

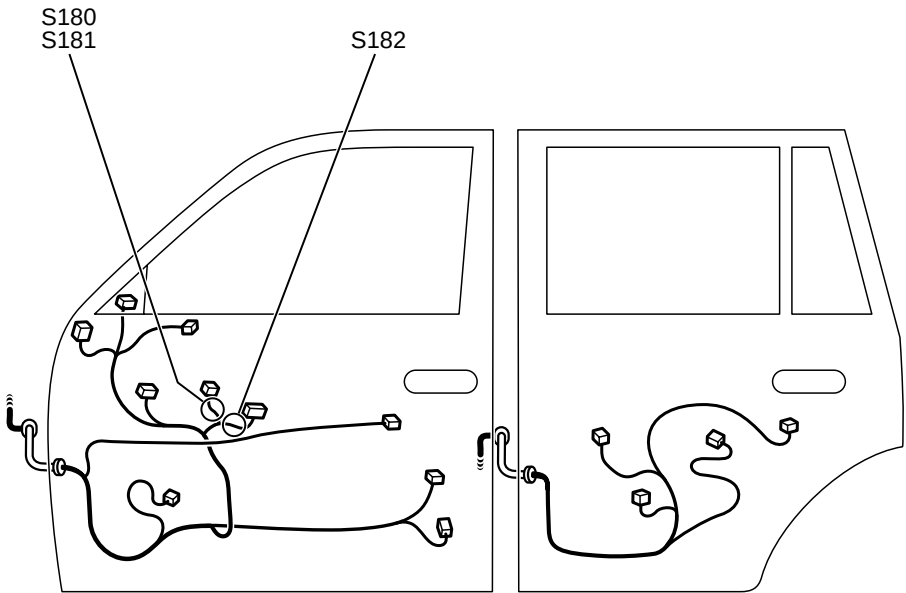


<PASSENGER'S SIDE>

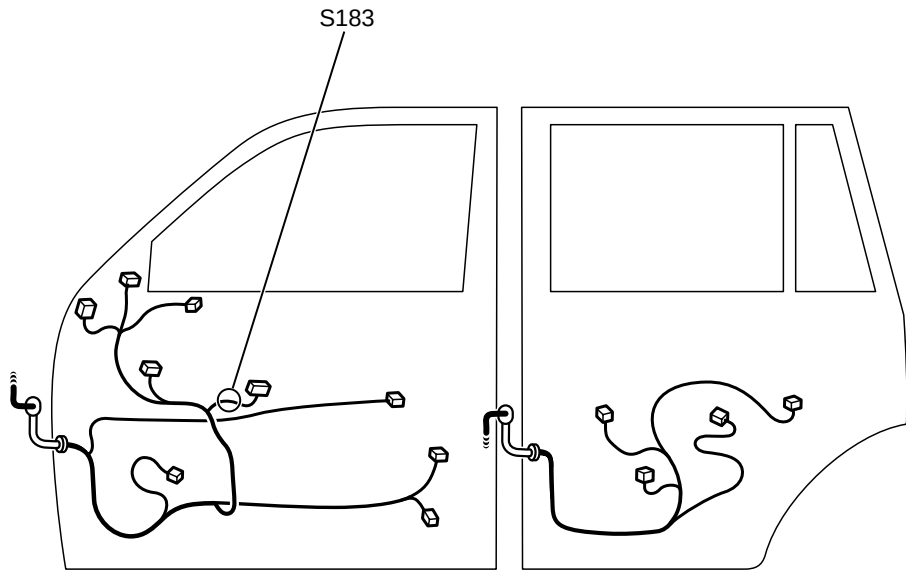

AC003565AB

LIFTGATE

M1802001300127

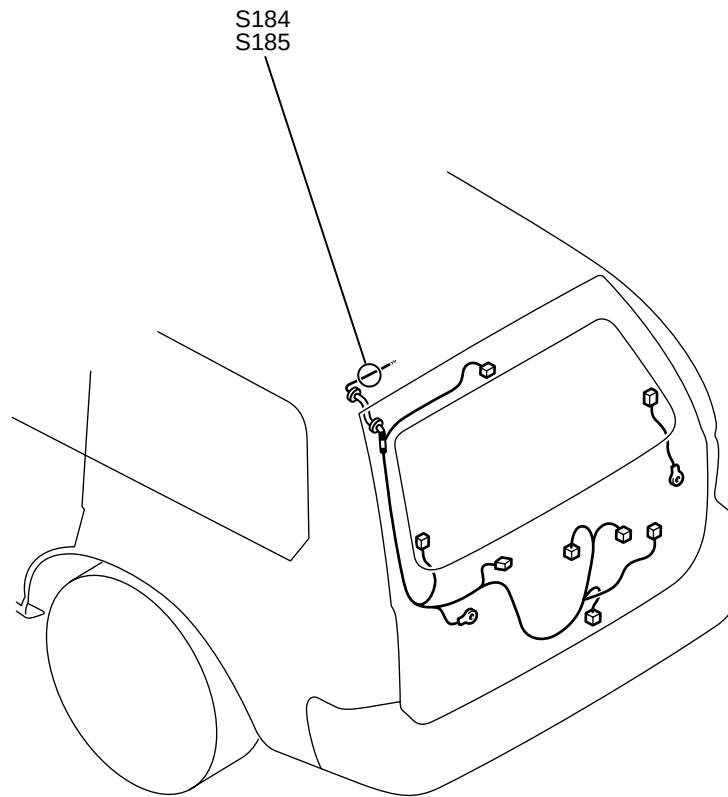

AC003566AB

NOTES