

GROUP 70

COMPONENT
LOCATIONS

 
CONTENTS

FUSIBLE LINK, FUSE AND STORAGE CONNECTOR.	70-2	GROUND CABLE.	70-13
INSPECTION TERMINAL	70-3	CONTROL UNIT.	70-14
GROUNDING.	70-4	SOLENOID AND SOLENOID VALVE	70-16
RELAY.	70-6	DIODE.	70-17
SENSOR.	70-8	OTHER DEVICES.	70-18





FUSIBLE LINK, FUSE AND STORAGE CONNECTOR


M1701000100272

NAME	SYMBOL	NAME	SYMBOL
Fuses No.1 to 5, 15, 16 (Engine compartment)	A	Fusible links No.6 to 13 (Engine compartment)	A
Fuses No.1 to 17 (Passenger compartment)	C	Fusible link No.14 (Battery positive terminal)	B
Fuses No.18 to 20 (Relay box in passenger compartment)	D	Storage connector (Engine compartment)	A

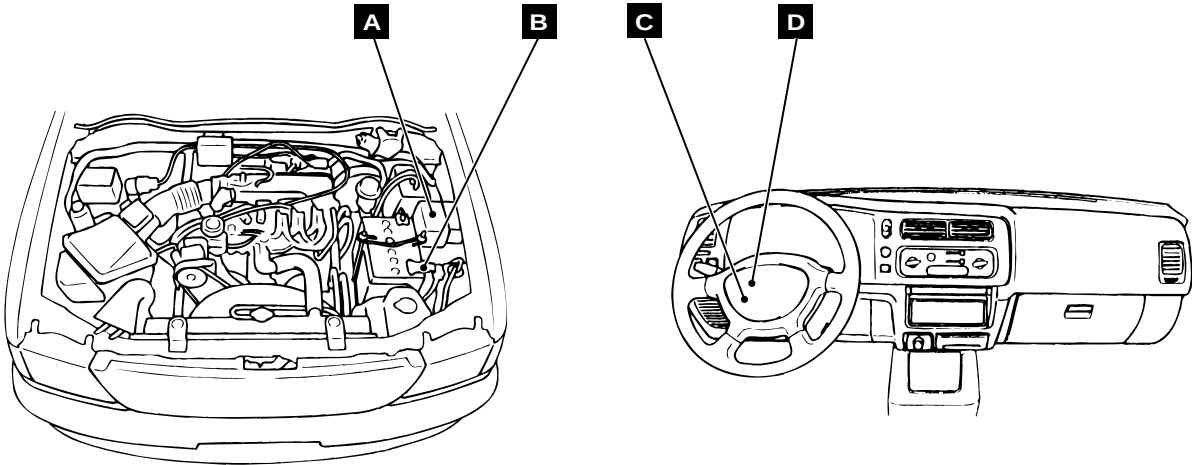

AC002556AB

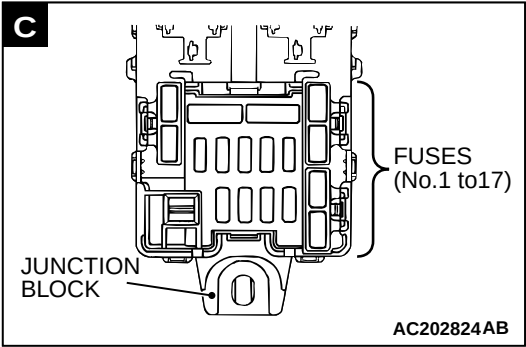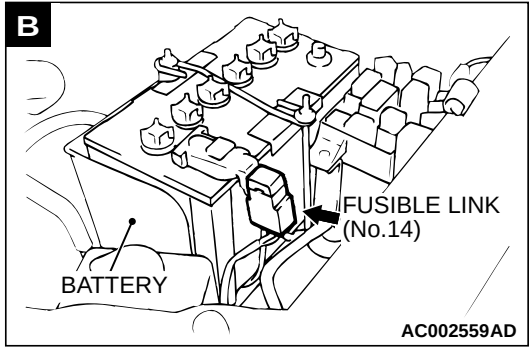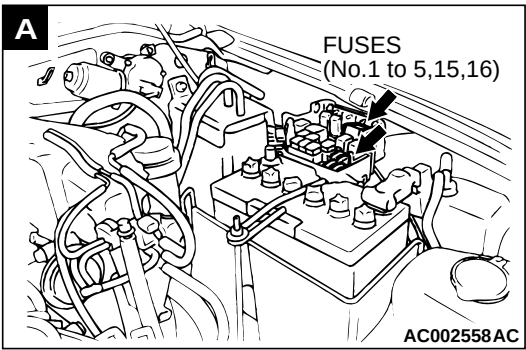   
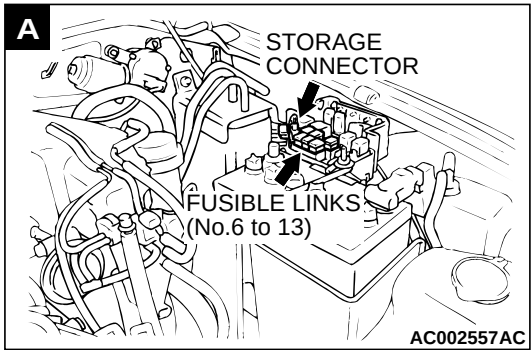 


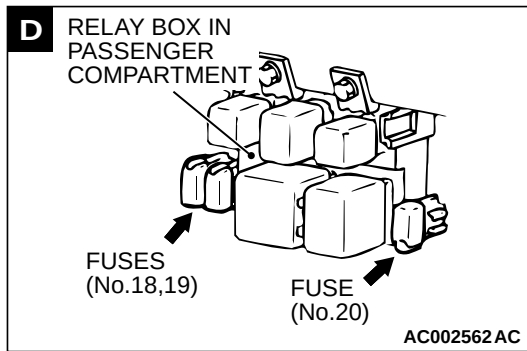 



INSPECTION TERMINAL

M1701000200268

NAME	SYMBOL	NAME	SYMBOL
Data link connector (1), (2)	B	Engine speed detection connector	A

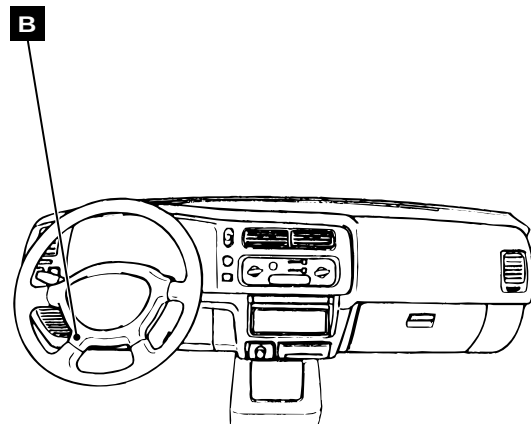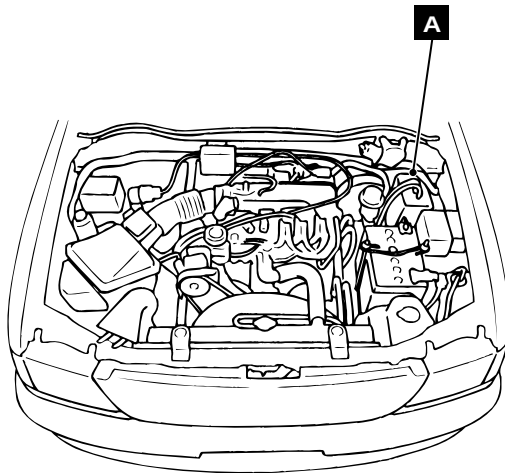  


AC002556AC

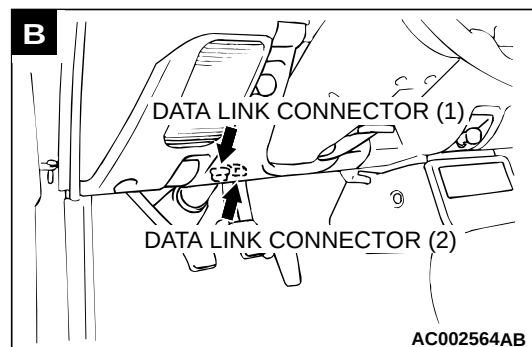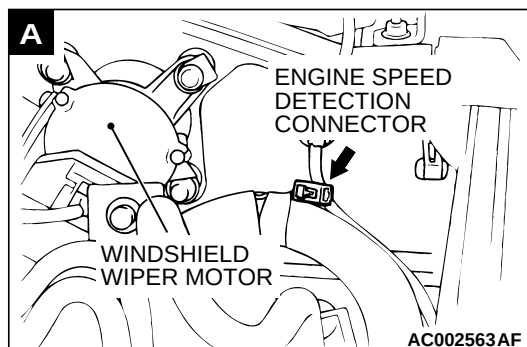  





GROUNDING








 
M1701000300276

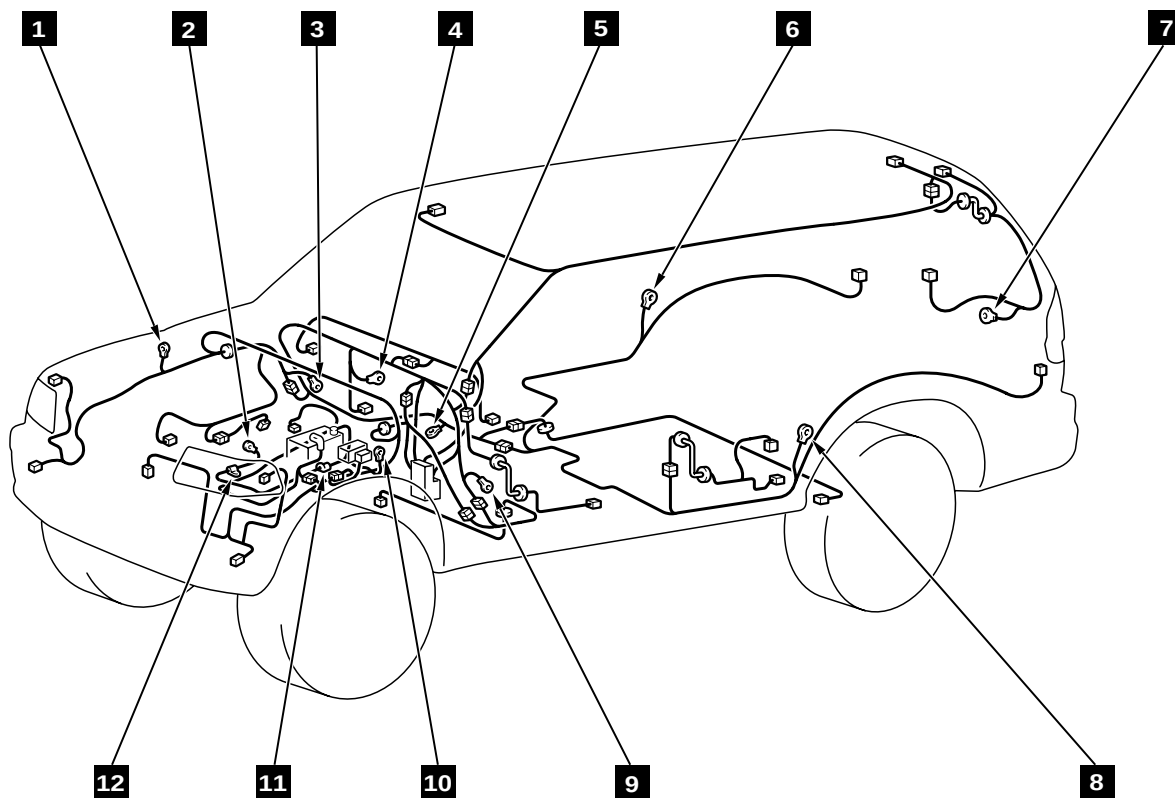

AC002723AB

            NOTE: 1 to 12 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

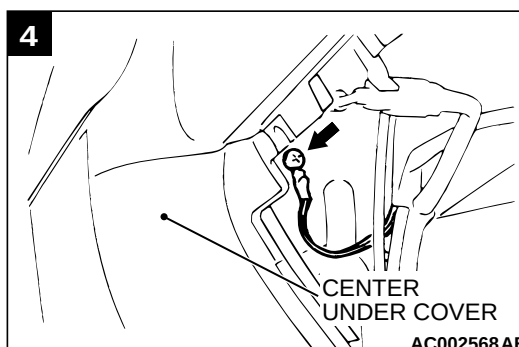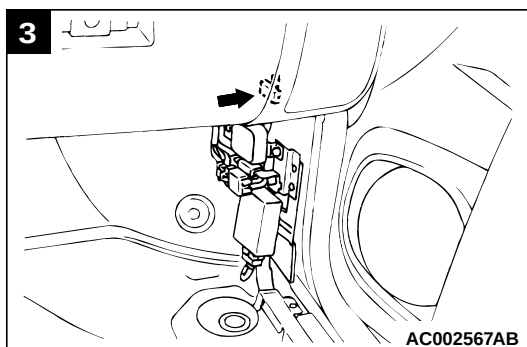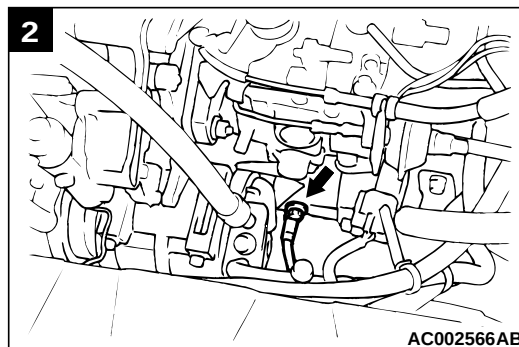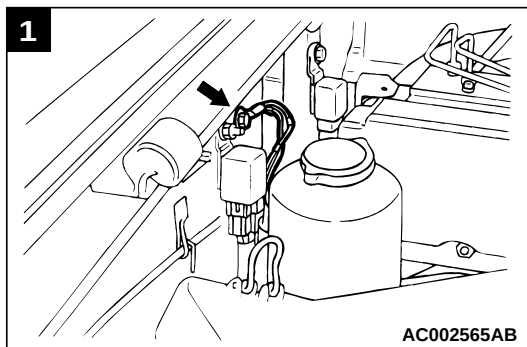


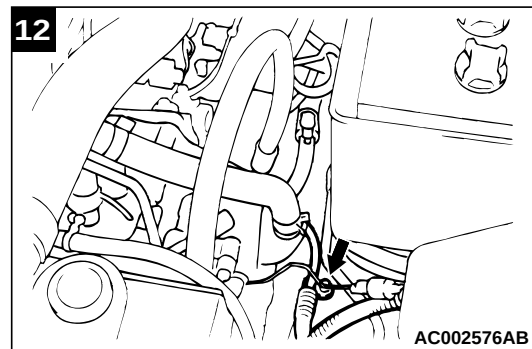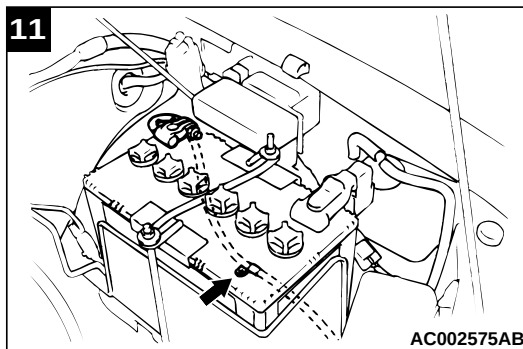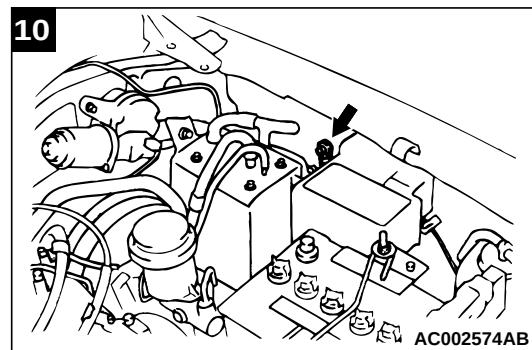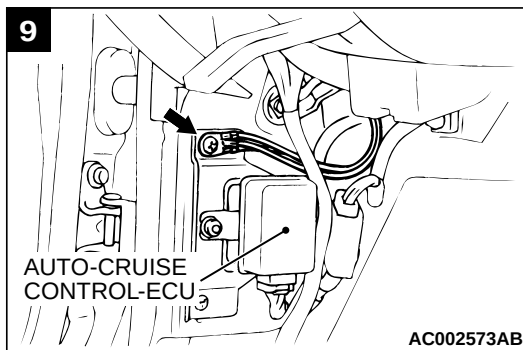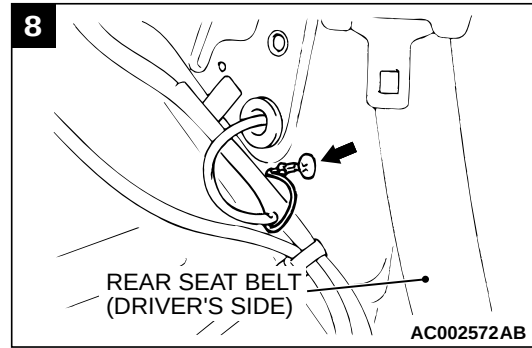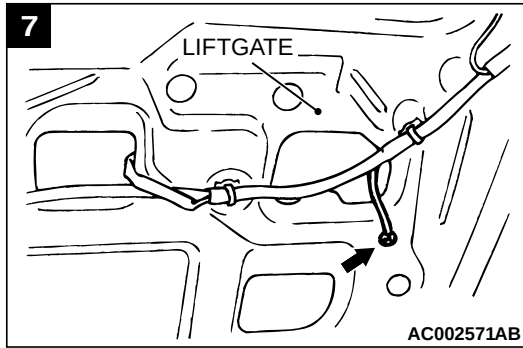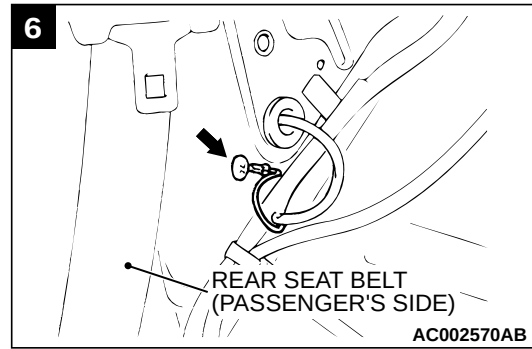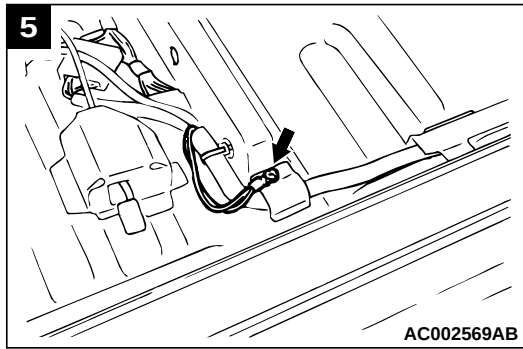



RELAY








M1701000400251

NAME	SYMBOL	NAME	SYMBOL
ABS relay	A	Hazard warning relay	G
A/C compressor relay	C	Headlight relay	B
Accessory socket relay	E	Horn relay	A
A/T control relay	H	Intermittent wiper relay	F
Blower relay	B	Multiport fuel injection relay	H
Condenser fan motor relay	C	Power window relay	E
Defogger relay	G	Rear heater relay	E
DRL lower relay	C	Rear intermittent wiper relay	E
DRL upper relay	C	Starter relay	B
Fuel pump relay	H	Theft-alarm horn relay	G
Fog light relay	B	Turn-signal and hazard warning flasher unit	D

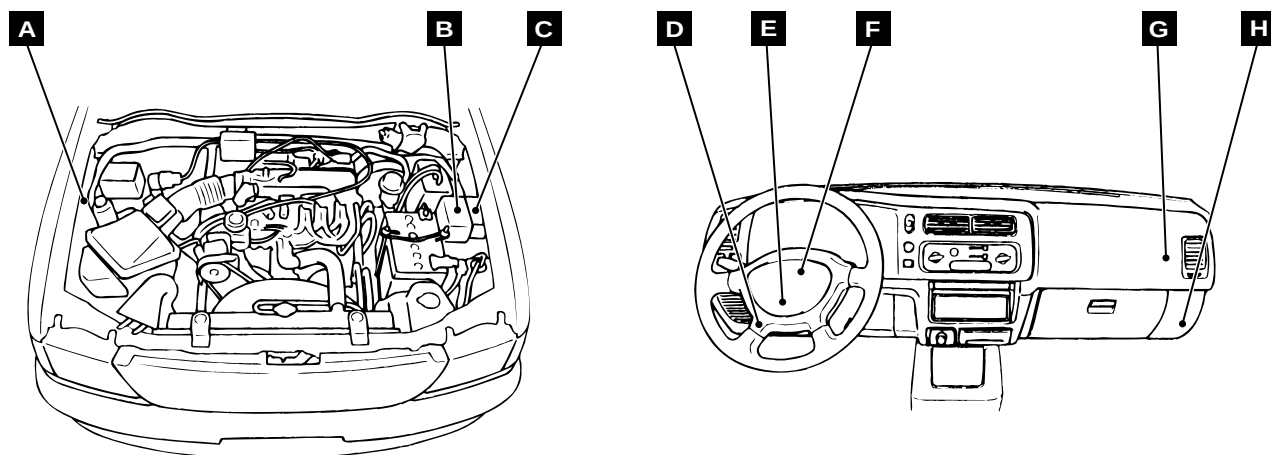 

AC002556AD

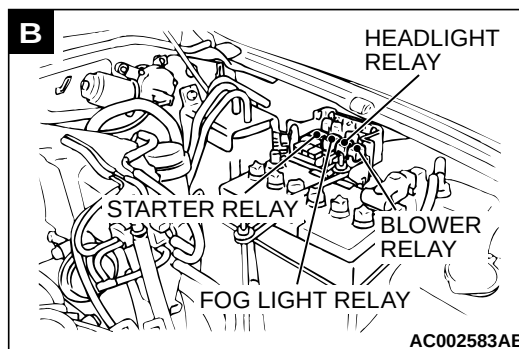 
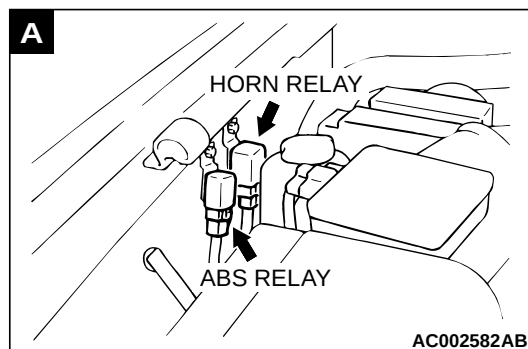 


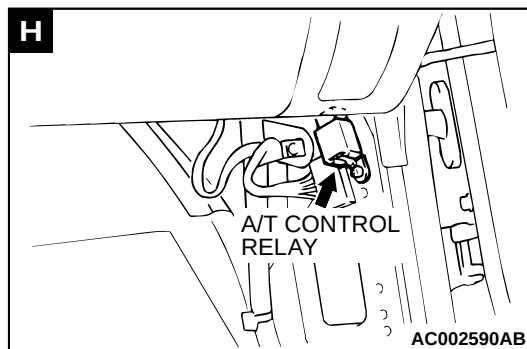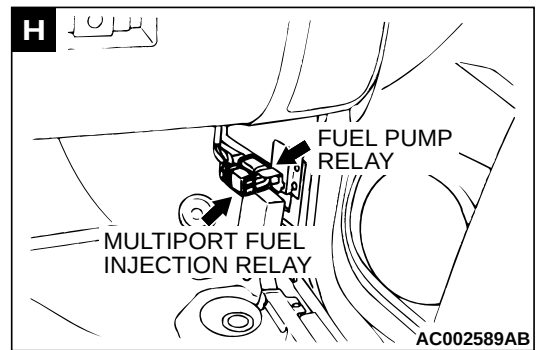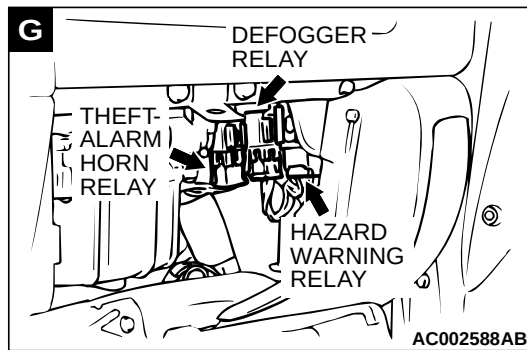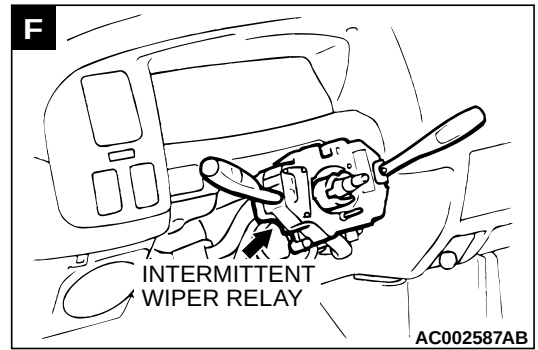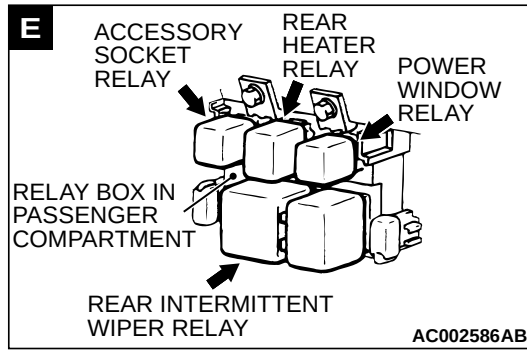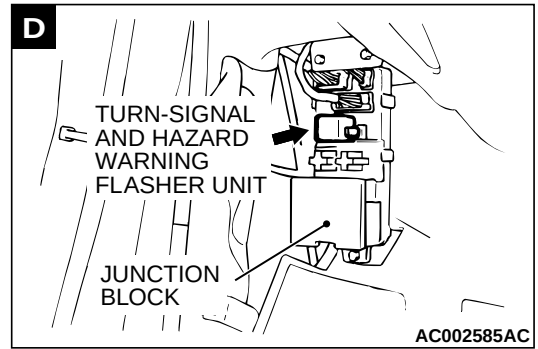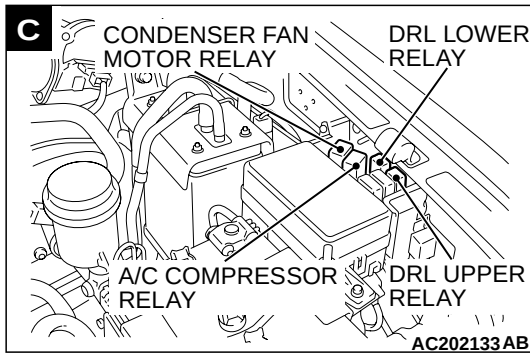       


SENSOR

M1701000600299







NAME	SYMBOL	NAME	SYMBOL
Air thermo sensor <A/C>	K	Left bank heated oxygen sensor (front)	F
Ambient temperature sensor <Compass and temperature display>	J	Left bank heated oxygen sensor (rear)	S
Automatic transmission fluid temperature sensor	M	Manifold differential pressure sensor	E
Camshaft position sensor	Q	Output shaft speed sensor	P
Crankshaft position sensor	G	Rear light sensor	O
Engine coolant temperature sensor	D	Right bank heated oxygen sensor (front)	C
Fuel tank differential pressure sensor	I	Right bank heated oxygen sensor (rear)	R
Fuel temperature sensor	I	Throttle position sensor	B
Front impact sensor <SRS>	H	Vehicle speed sensor	P
Front light sensor	O	Volume air flow sensor	A
G-sensor <4WD-ABS>	L	Wheel speed sensor (front) <ABS>	N
Input shaft speed sensor	P	Wheel speed sensor (rear) <ABS>	T

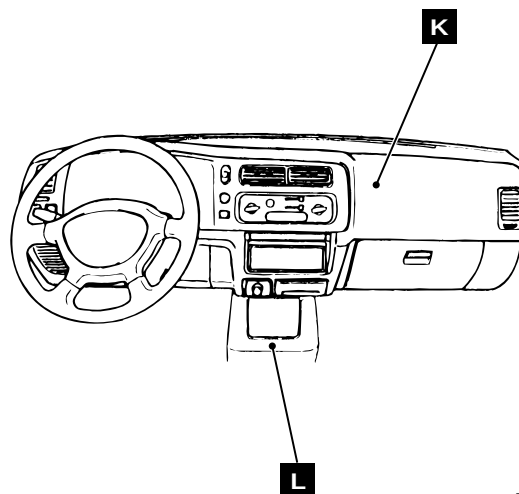 
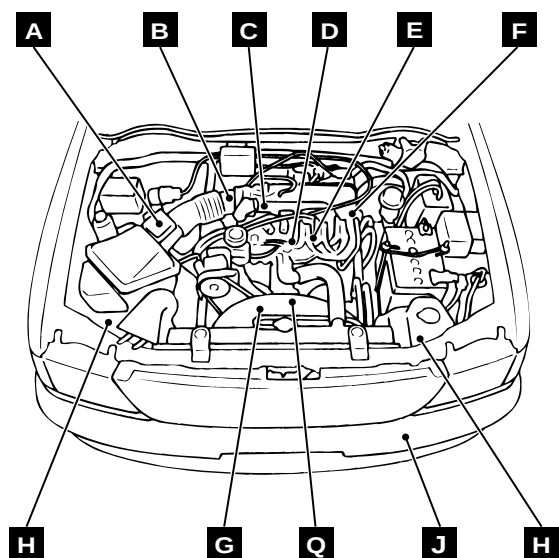 


AC002556AF


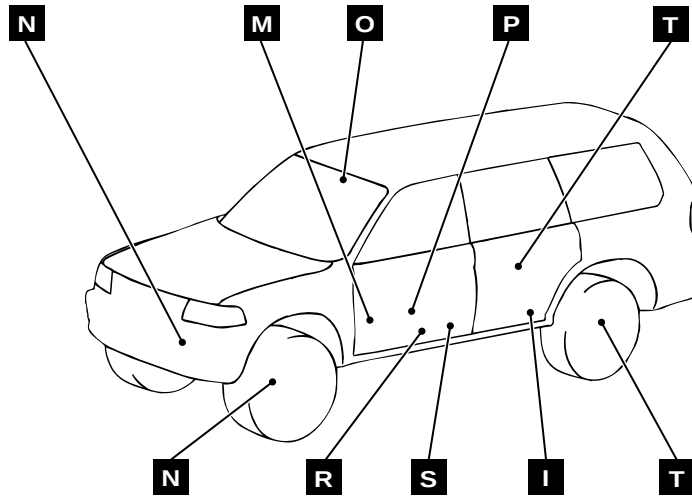 


AC002591AC

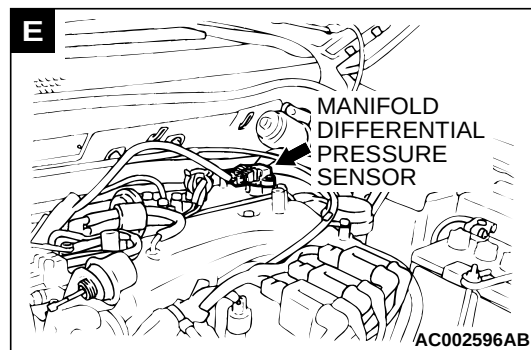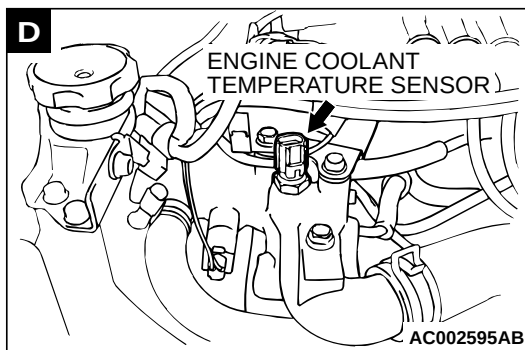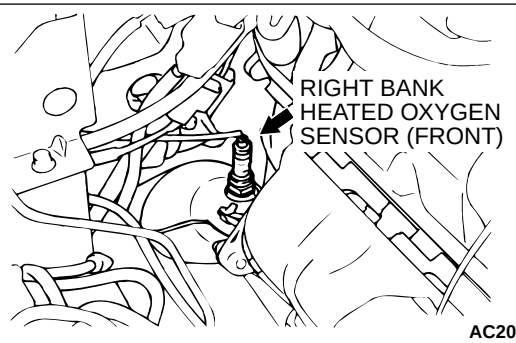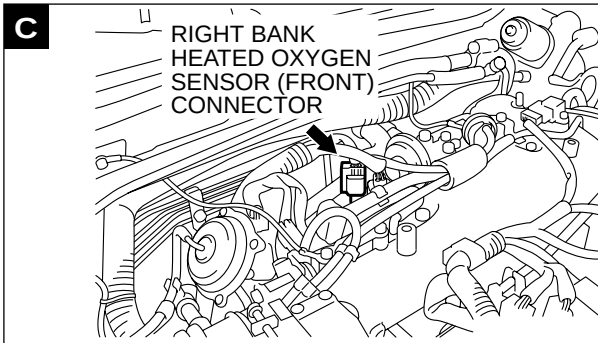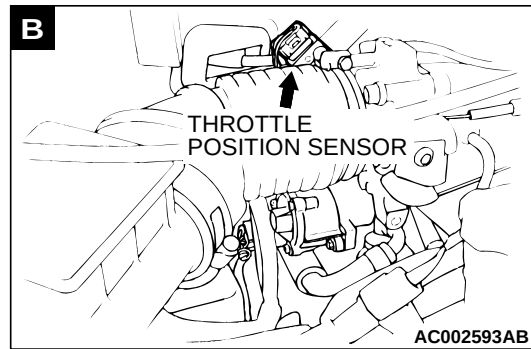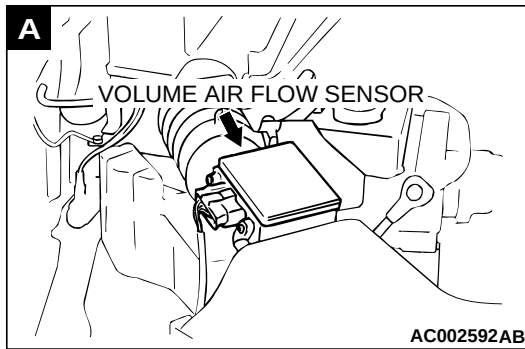      


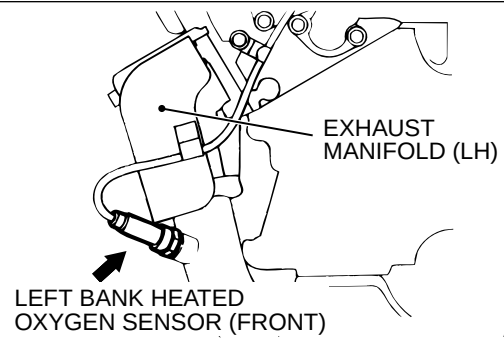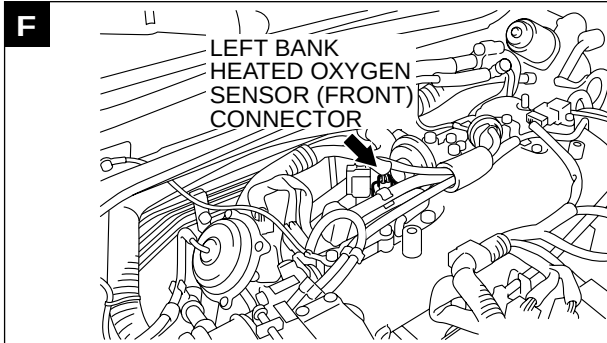  


AC201603 AB

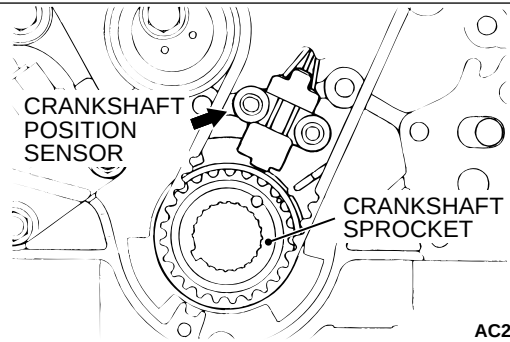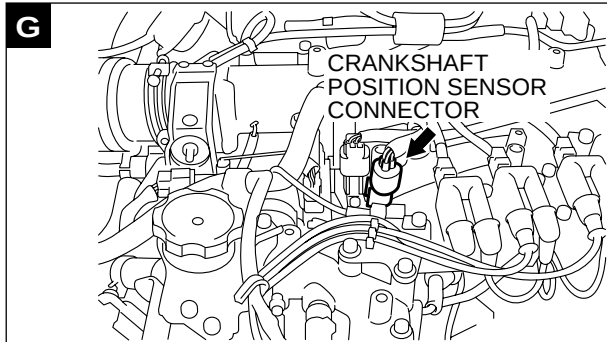  


AC201604 AB

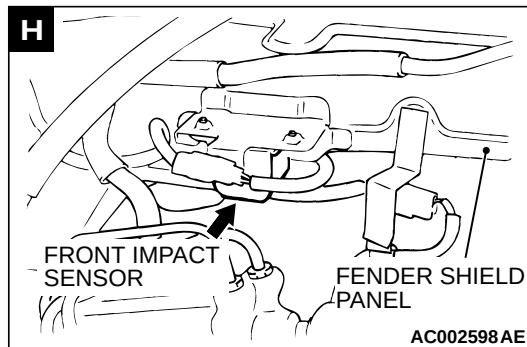 


AC002598 AE

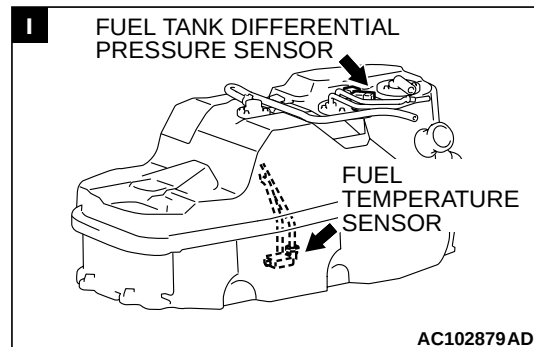 









AC102879 AD









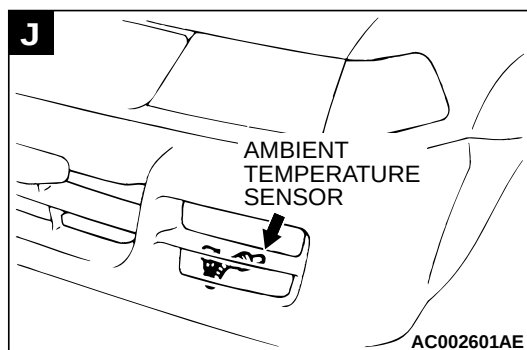 


AC002601 AE

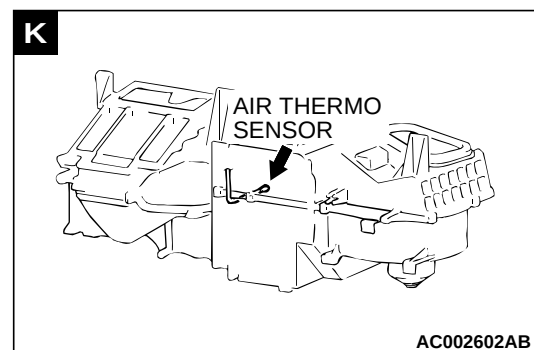 



AC002602 AB

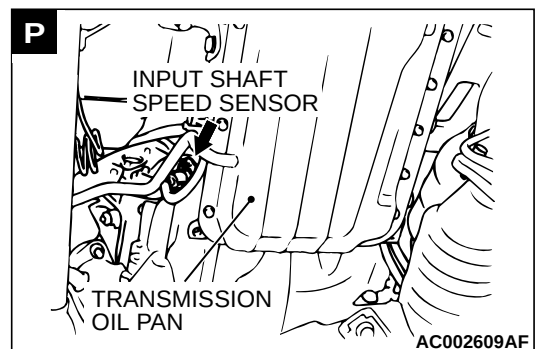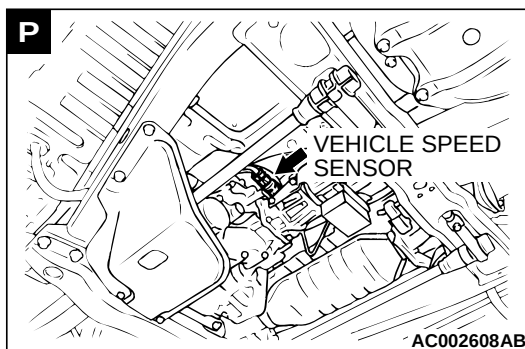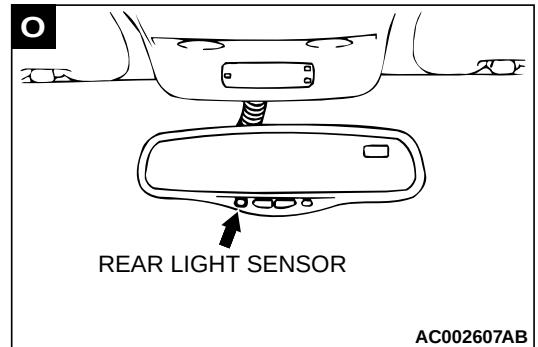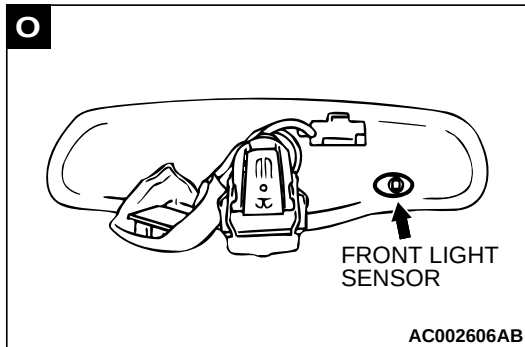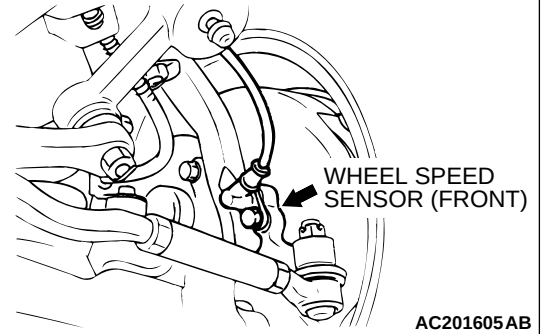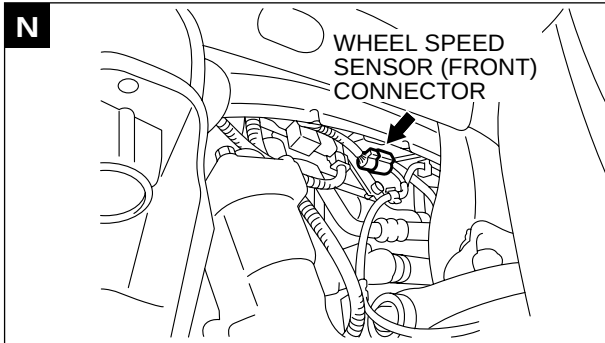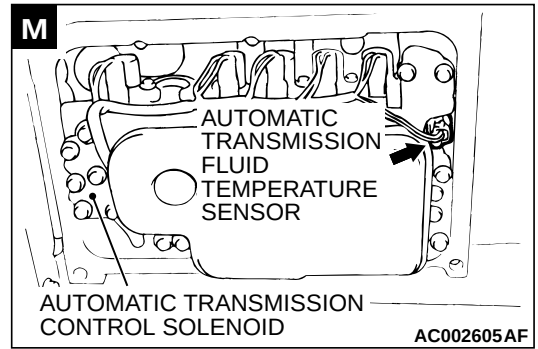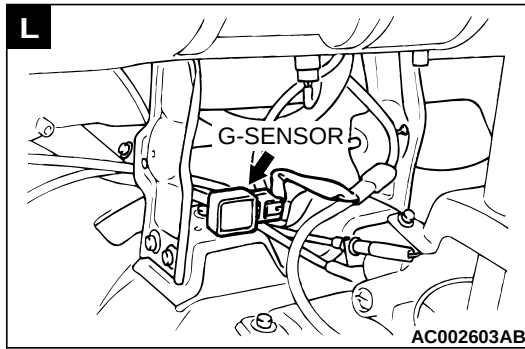        

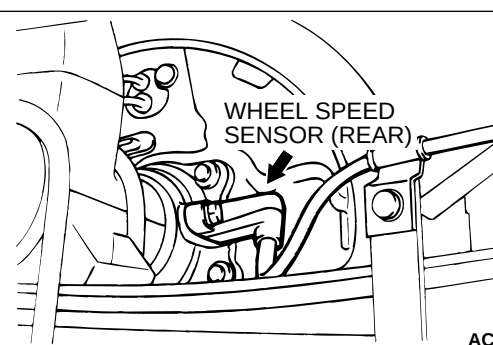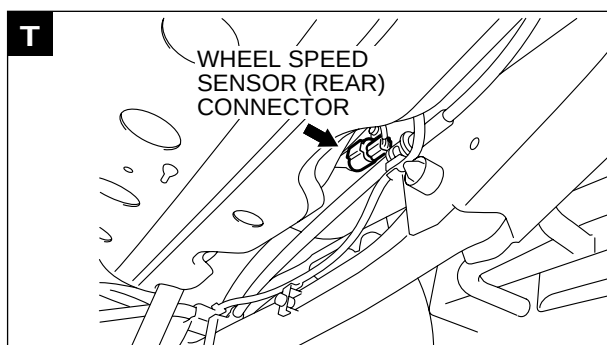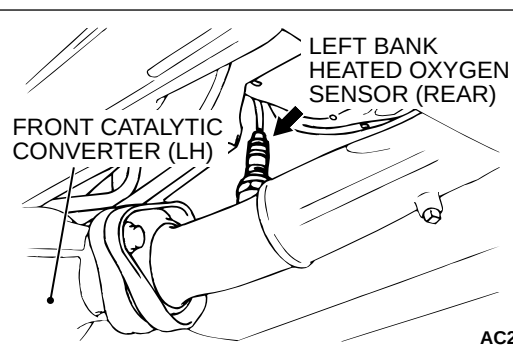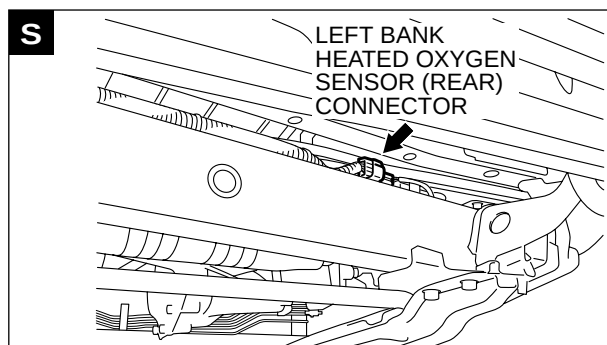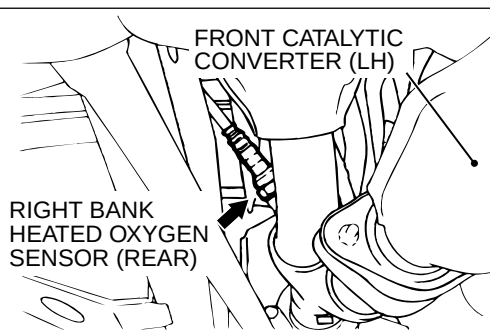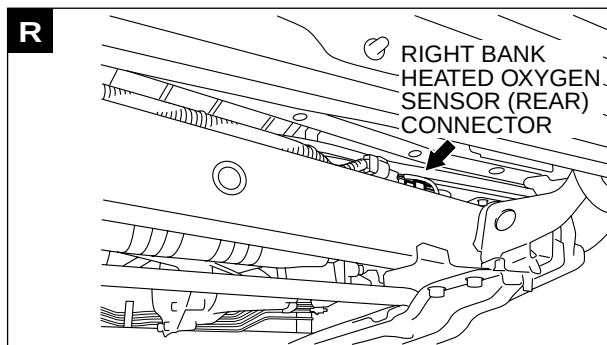      
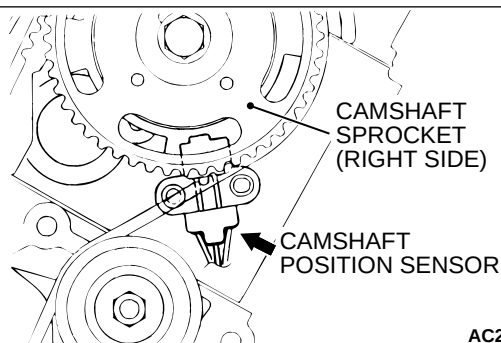 
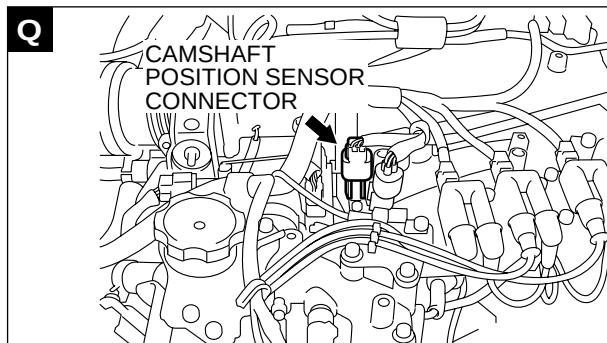 
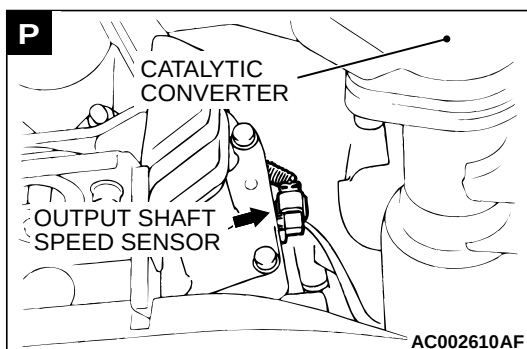 


GROUND CABLE

  M1701001000223

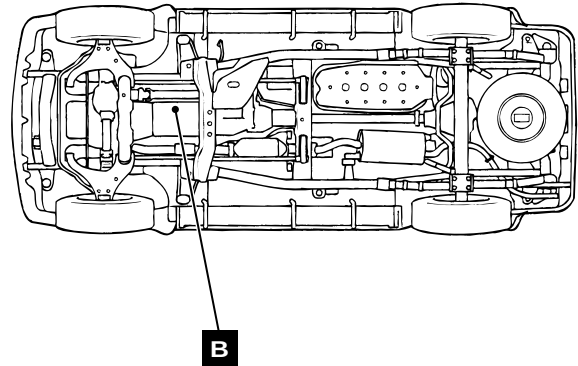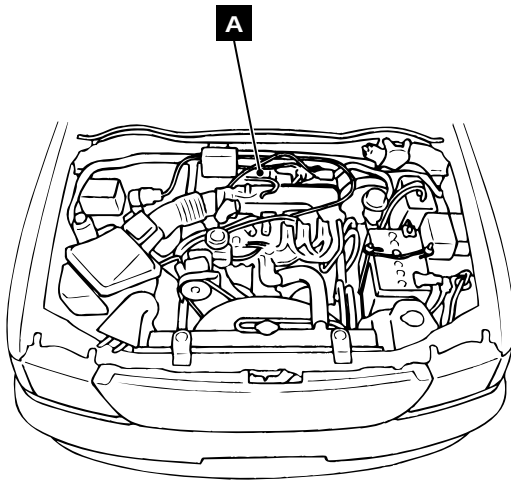


AC002577AB

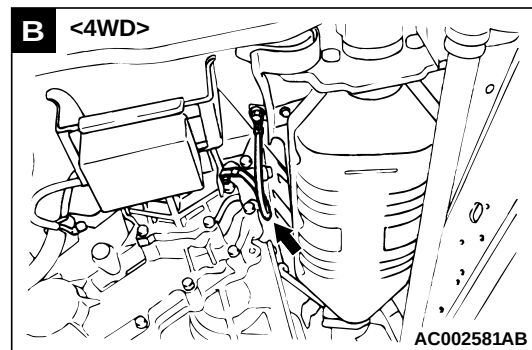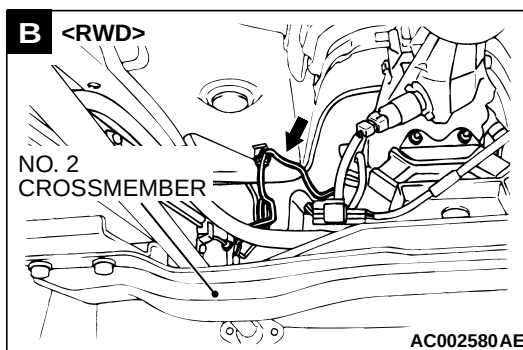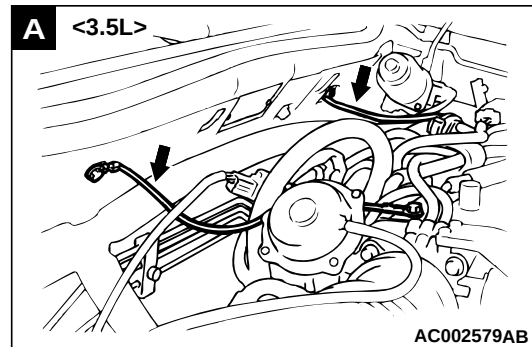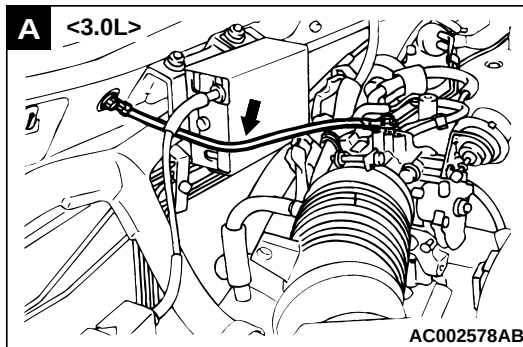    



CONTROL UNIT











M1701000700241

NAME	SYMBOL	NAME	SYMBOL
4WD indicator-ECU	F	ETACS-ECU	C
ABS-ECU (built in hydraulic unit)	A	Immobilizer-ECU	I
Antenna motor-ECU	B	Keyless entry receiver-ECU	K
Auto-cruise control-ECU	H	SRS-ECU	D
Automatic compressor controller	E	Sunroof-ECU	J
Defogger timer	I	Powertrain control module	G
DRL-ECU	L		

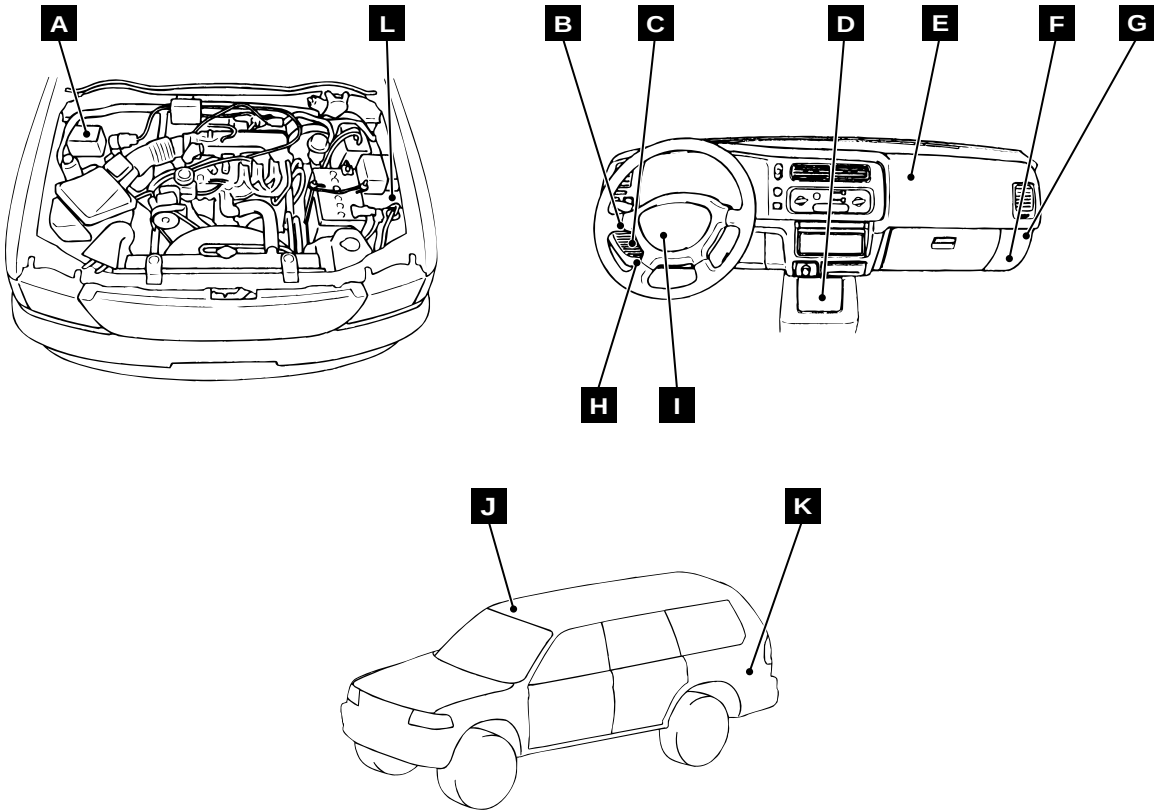 

AC002615AD

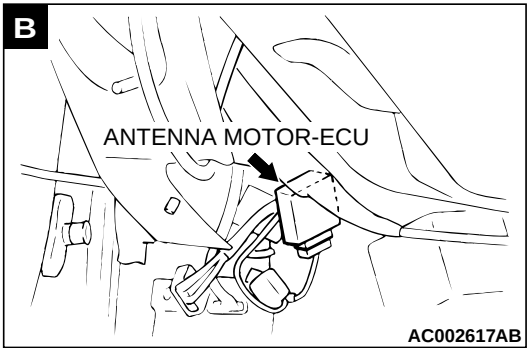 
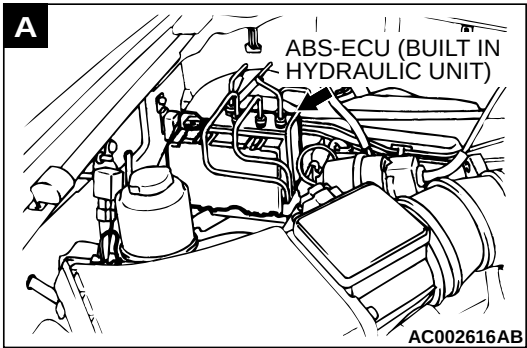 


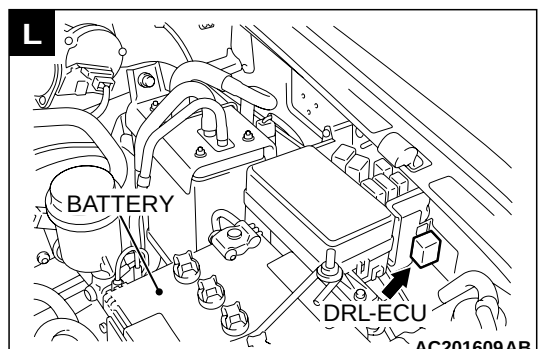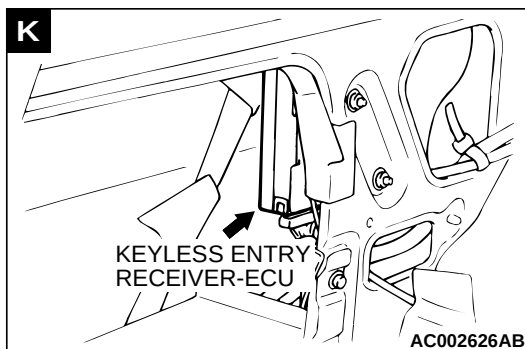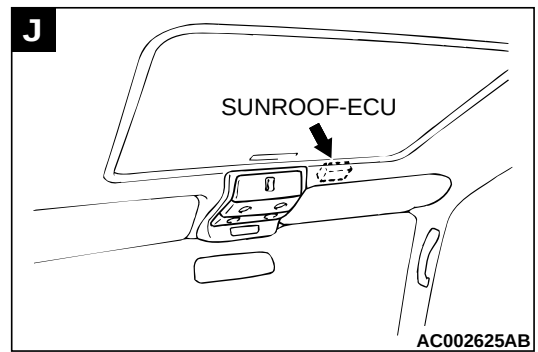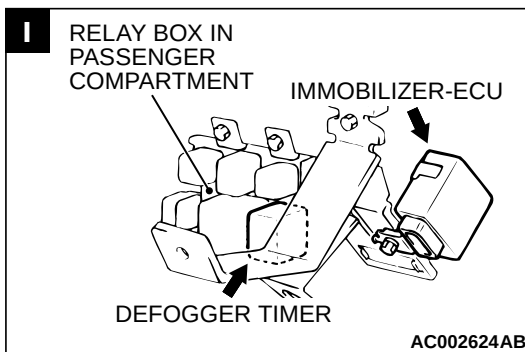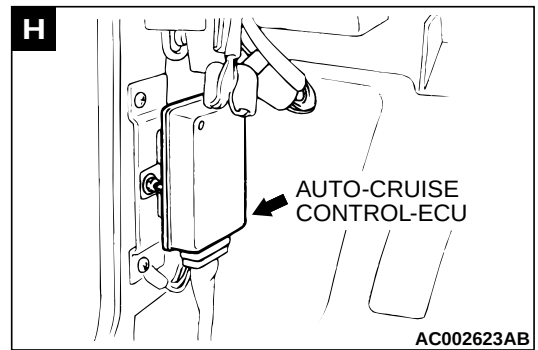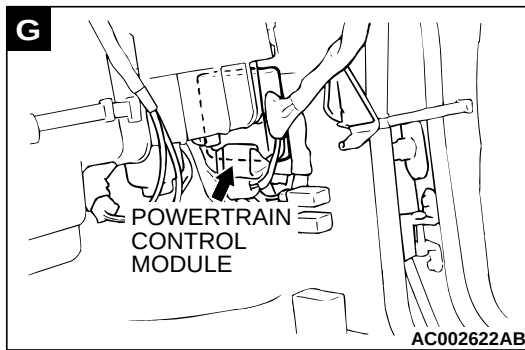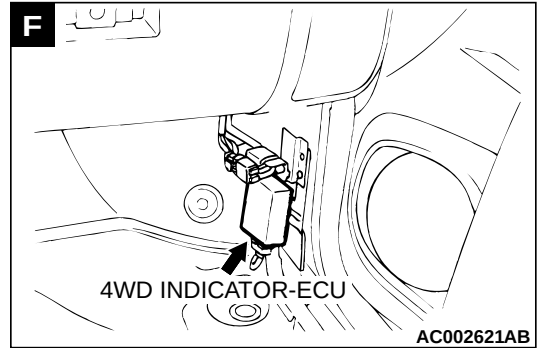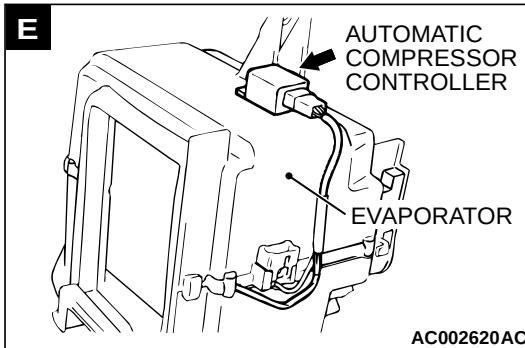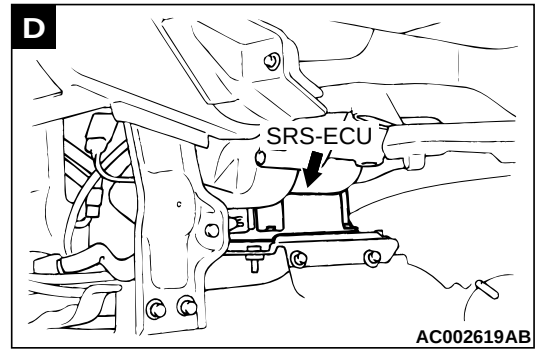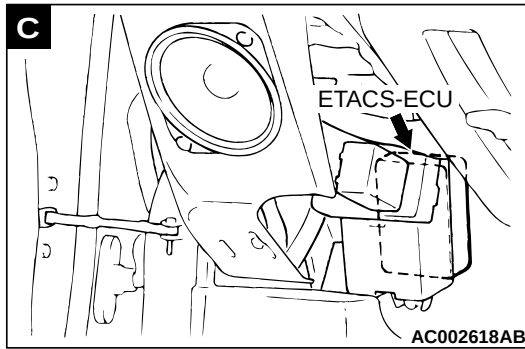          





SOLENOID AND SOLENOID VALVE

M1701000800259

NAME	SYMBOL	NAME	SYMBOL
Auto-cruise control vacuum pump	A	Evaporative emission purge solenoid	B
EGR solenoid	B		
Automatic transmission control solenoid	D	Evaporative ventilation solenoid	C

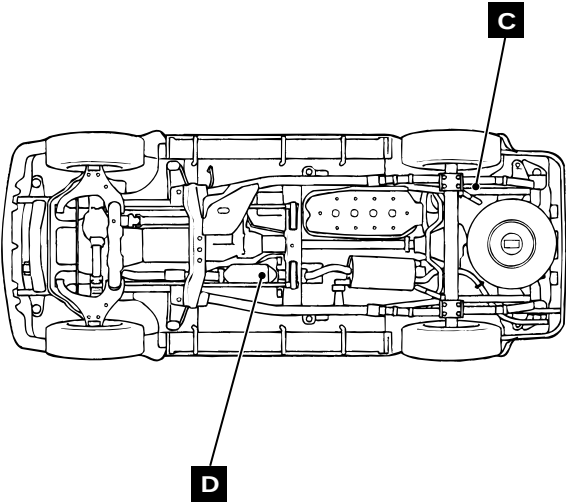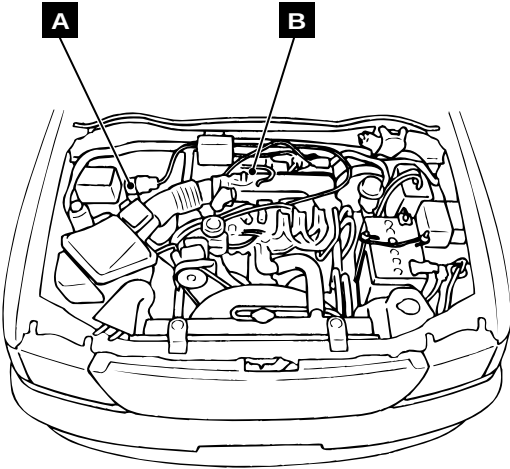  


AC002577AD

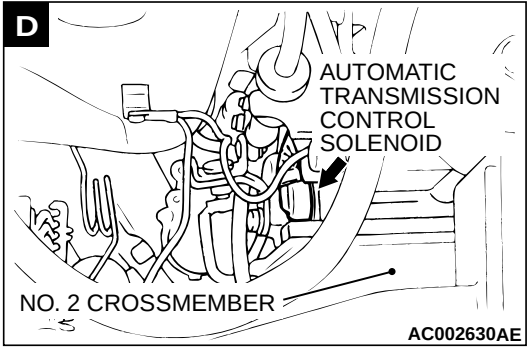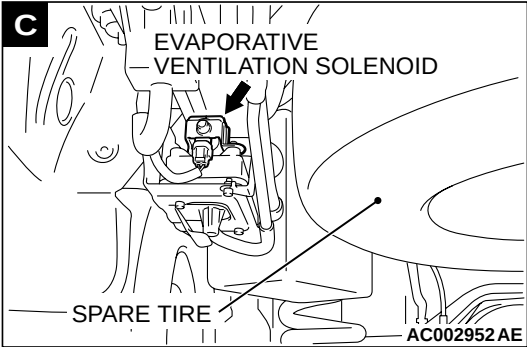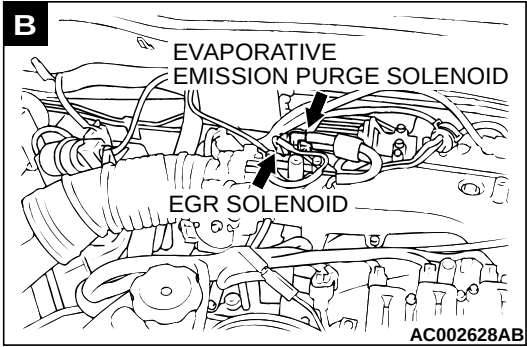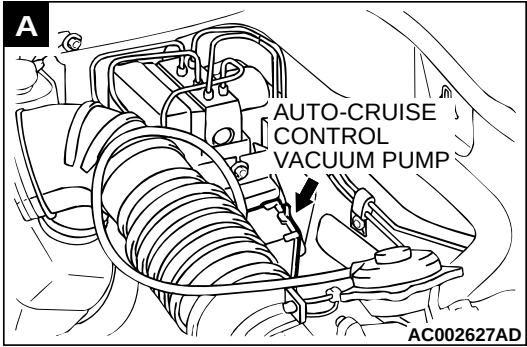    



DIODE

M1701000900104

NAME	SYMBOL	NAME	SYMBOL
Diode (for fog light circuit)	B	Diode (for theft-alarm horn circuit)	A

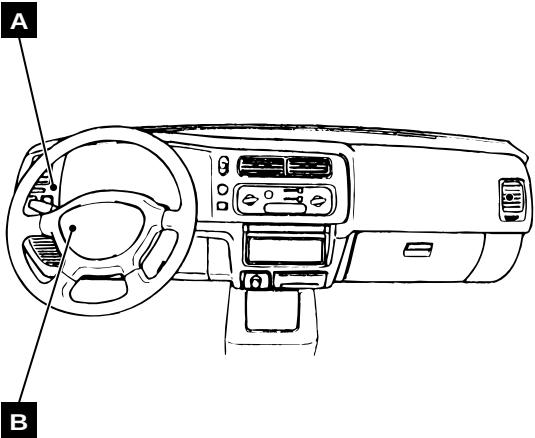 


AC002631AC

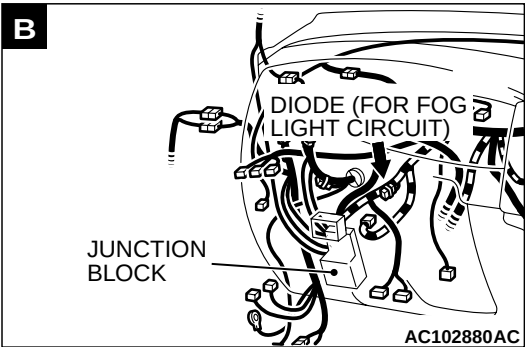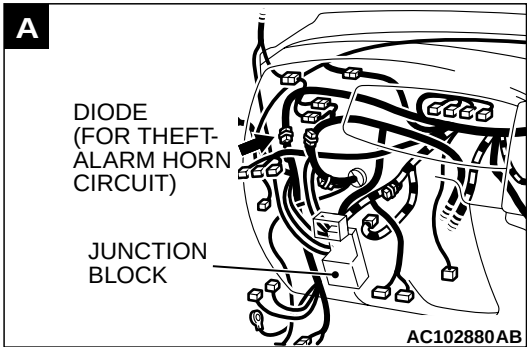  





OTHER DEVICES


M1701005600227

NAME	SYMBOL	NAME	SYMBOL
A/C refrigerant temperature switch	B	Oil pressure switch	D
Dual pressure switch	E	Power steering pressure switch	C
Idle air control motor	A		

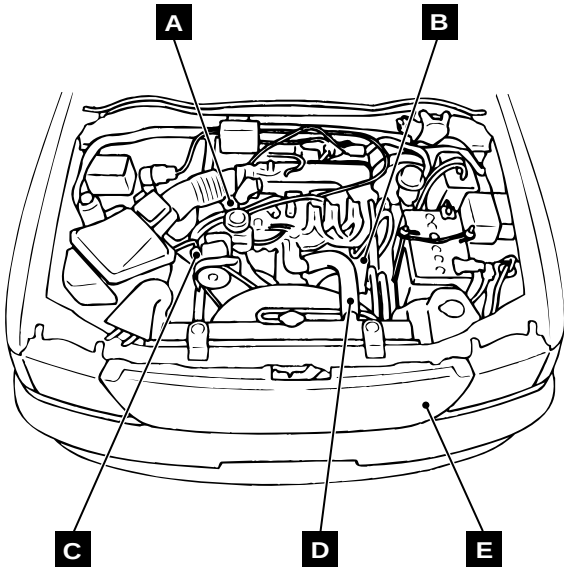 

AC002635AB

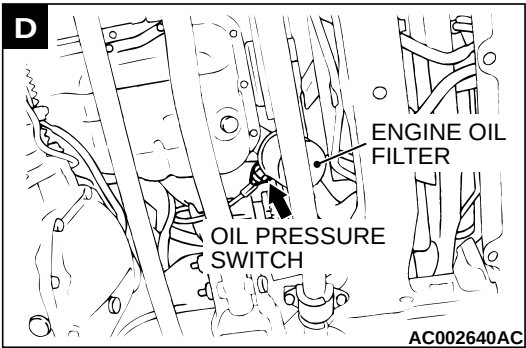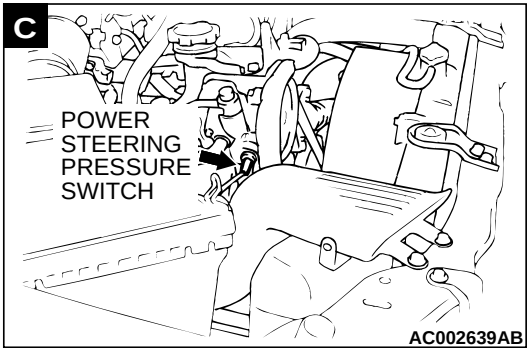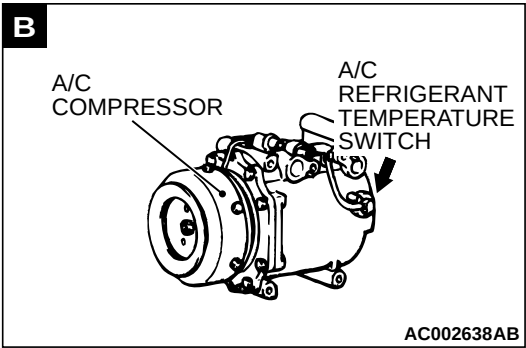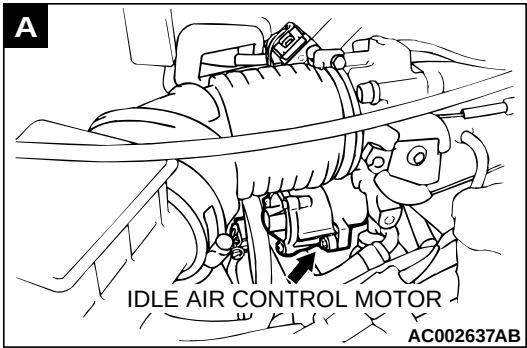    

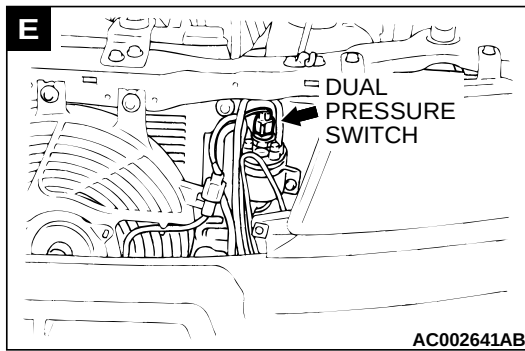 

NOTES