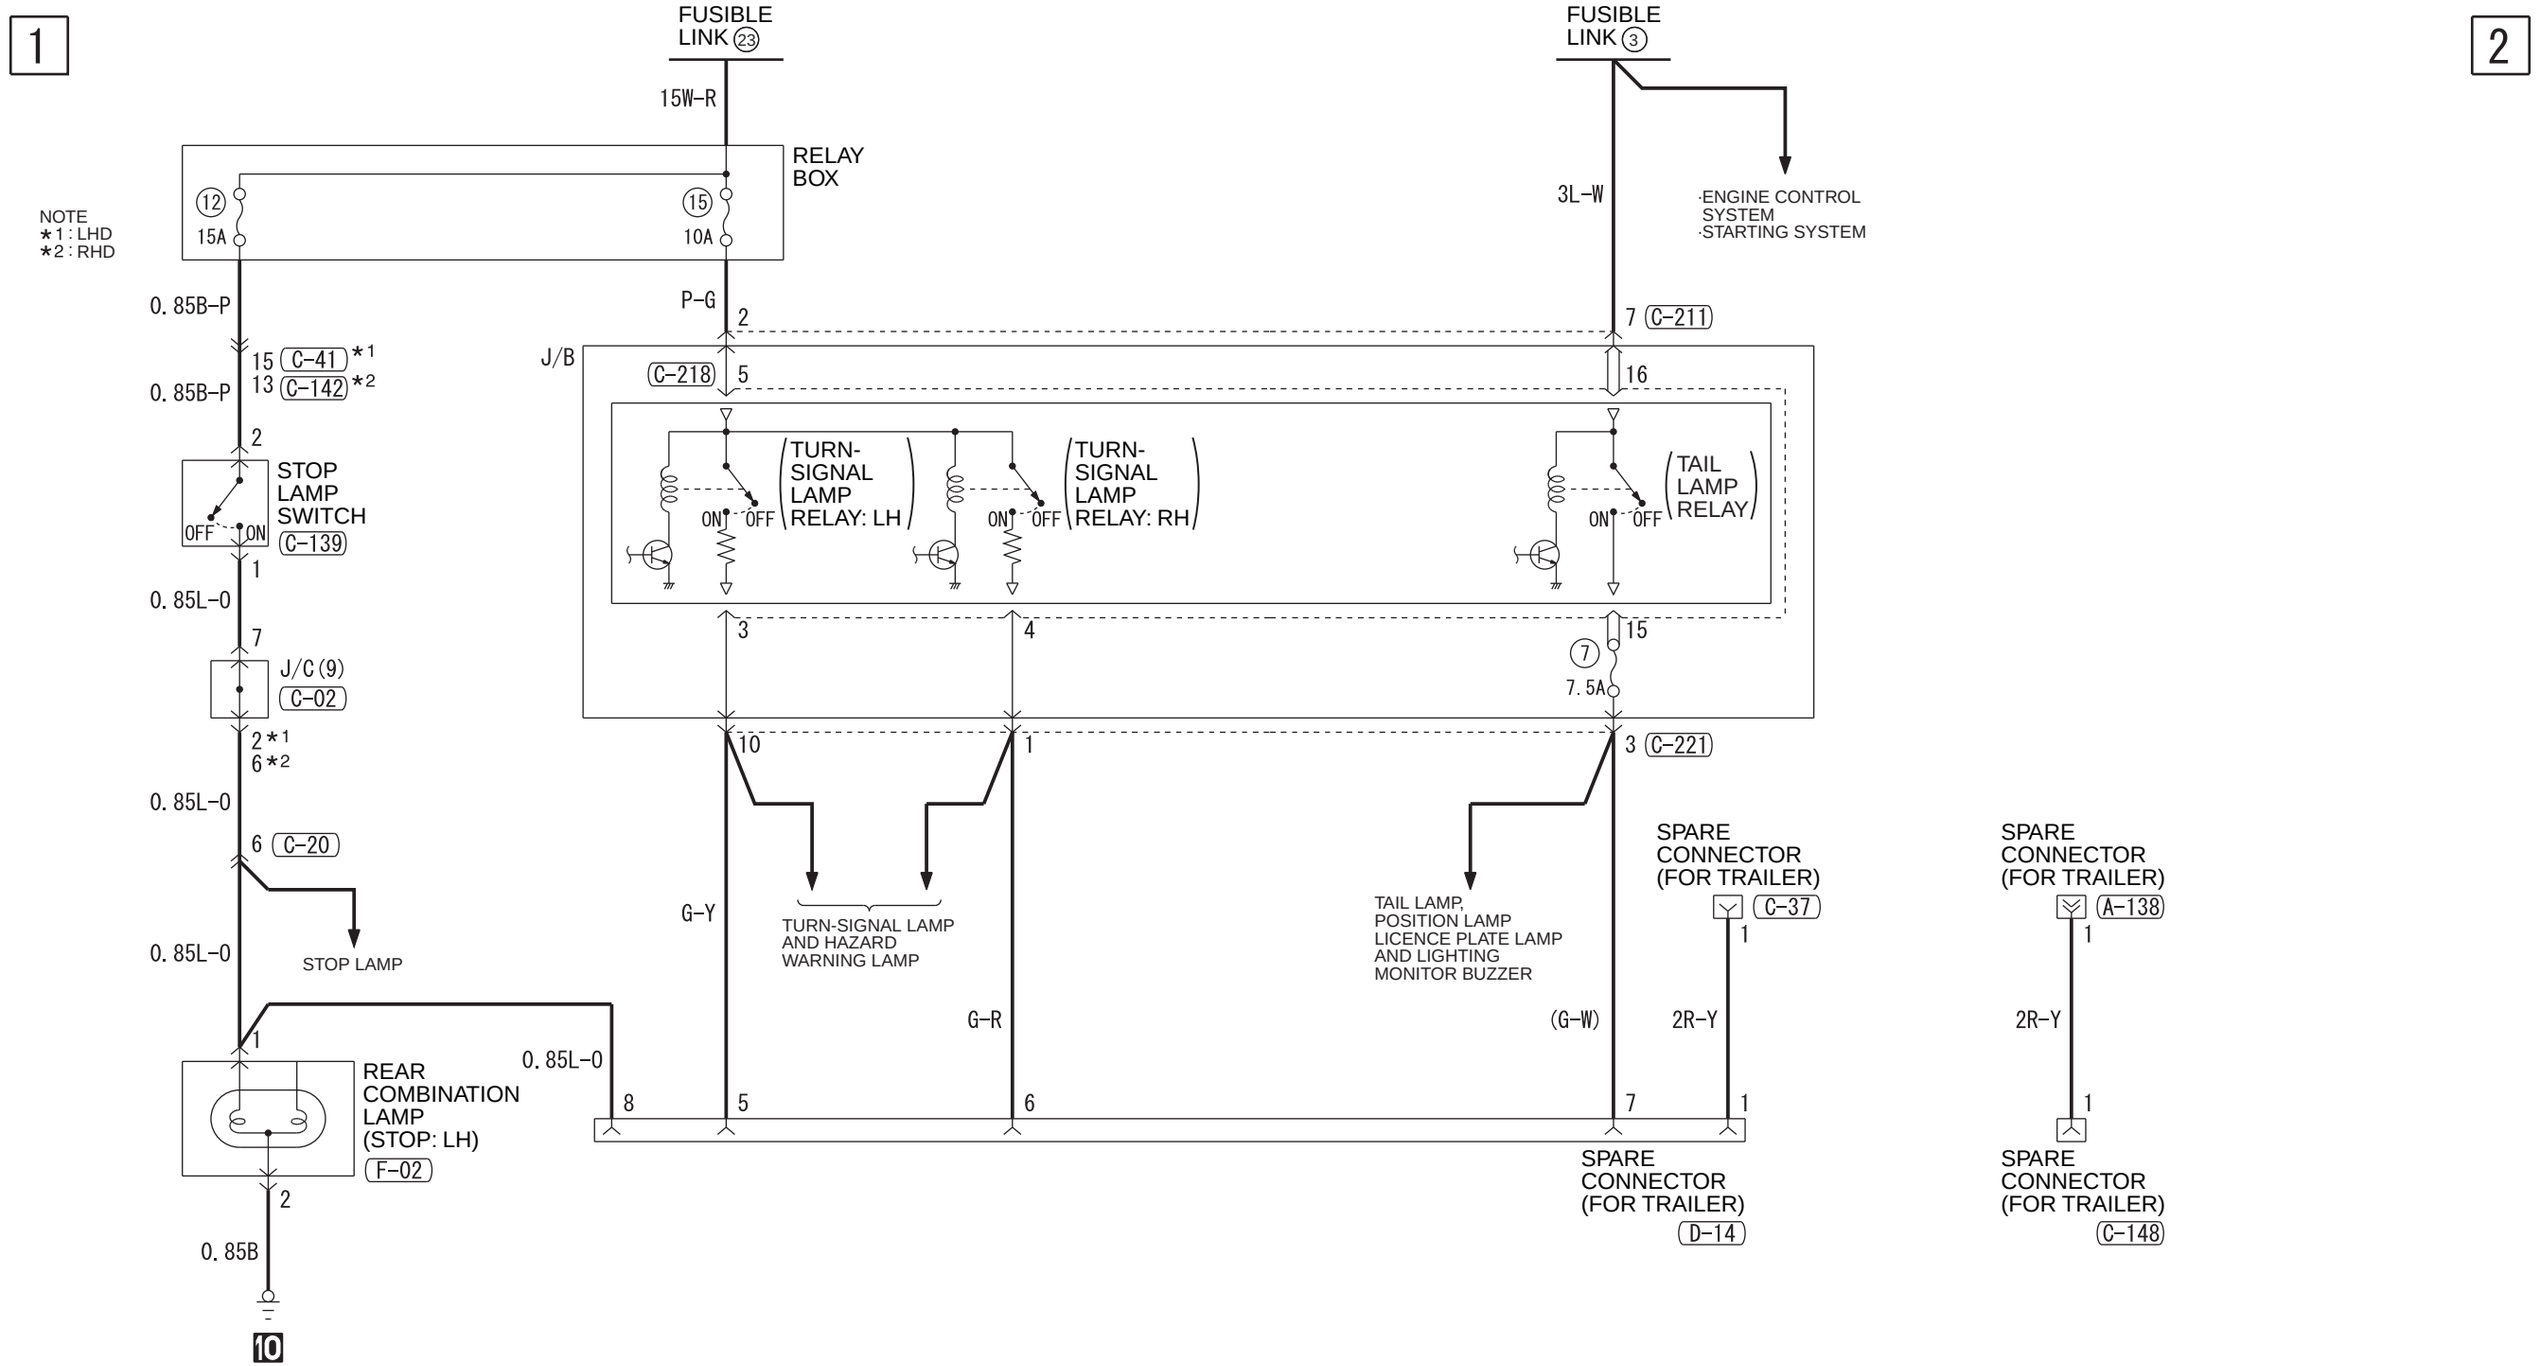
1
2
FUSIBLE LINK 23
FUSIBLE LINK 3
15W-R
RELAY BOX
12
15A
15
10A
3L-W
·ENGINE CONTROL SYSTEM
·STARTING SYSTEM
NOTE
*1 : LHD
*2 : RHD
0.85B-P
P-G
2
7 C-211
15 C-41 *1
13 C-142 *2
J/B
C-218
5
16
STOP LAMP SWITCH
C-139
OFF
ON
TURN-SIGNAL LAMP RELAY: LH
TURN-SIGNAL LAMP RELAY: RH
TAIL LAMP RELAY
0.85L-O
7
J/C (9)
C-02
3
4
15
7
7.5A
2 *1
6 *2
10
1
3 C-221
6 C-20
STOP LAMP
G-Y
TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
TAIL LAMP, POSITION LAMP LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
SPARE CONNECTOR (FOR TRAILER)
C-37
A-138
G-R
(G-W)
2R-Y
REAR COMBINATION LAMP (STOP: LH)
F-02
8
5
6
7
D-14
C-148
0.85B
10
A-138
C-02
(MU801852)
C-20
C-37
C-41
MU801885
C-139
MU801491
C-142
C-148
C-211
MU801867
C-218
J/B SIDE
C-221
(MU801845)
D-14
F-02
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver
HAM15X35AC