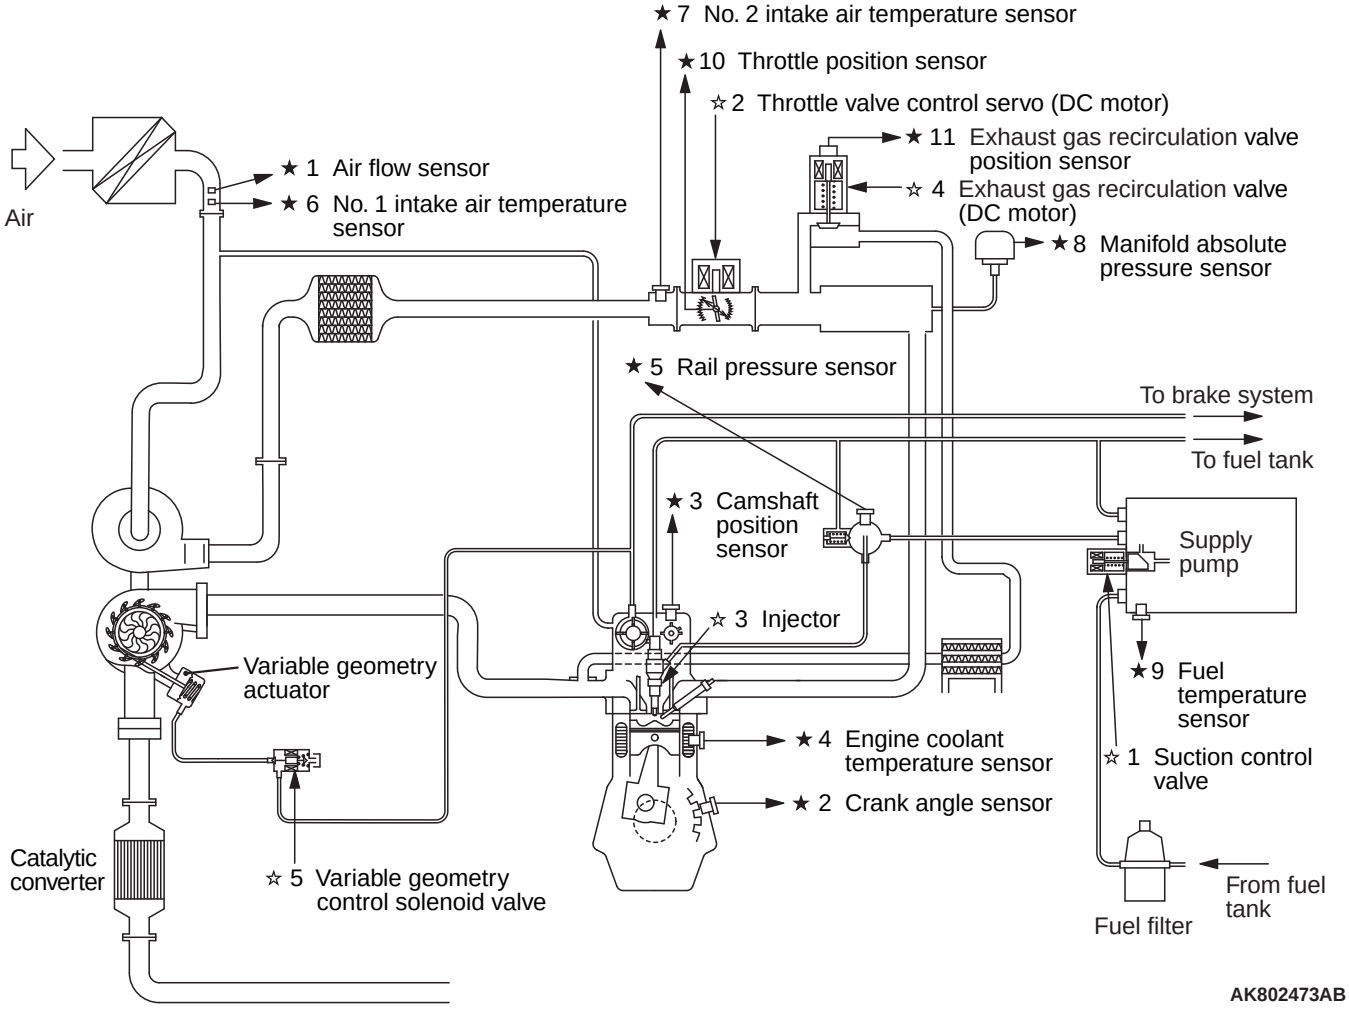★1 Air flow sensor ★2 Crank angle sensor ★3 Camshaft position sensor ★4 Engine coolant temperature sensor ★5 Rail pressure sensor ★6 No. 1 intake air temperature sensor ★7 No. 2 intake air temperature sensor ★8 Manifold absolute pressure sensor ★9 Fuel temperature sensor ★10 Throttle postion sensor ★11 Exhaust gas recirculation valve position sensor	● Accelerator pedal position sensor (main) ● Accelerator pedal position sensor (sub) ● Power steering fluid pressure switch ● Vehicle speed sensor ● Power supply ● Ignition switch-IG ● Ignition switch-ST ● A/C switch ● A/C load signal ● Back-up lamp switch <M/T> ● 1st and 2nd rail switch <M/T> ● 4LLc switch <M/T> ● CAN communication (input signal)	⇨	Engine-ECU ● Barometric pressure sensor	⇨	☆1 Suction control valve ☆2 Throttle valve control servo (DC motor) ☆3 Injector ☆4 Exhaust gas recirculation valve (DC motor) ☆5 Variable geometry control solenoid valve ● Engine control relay ● A/C relay ● Condenser fan relay ● Glow plug relay ● Glow indicator lamp ● Engine warning lamp ● Tachometer ● CAN communication (output signal)