

GROUP 80A


CONFIGURATION
DIAGRAMS

CONTENTS

OVERALL CONFIGURATION DIAGRAM.....	80A-2	TRANSMISSION.....	80A-12
HOW TO READ CONFIGURATION DIAGRAMS	80A-3	DASH PANEL.....	80A-14
ENGINE COMPARTMENT <3.0L ENGINE>	80A-4	JUNCTION BLOCK AND STEERING COLUMN.....	80A-20
ENGINE COMPARTMENT <3.5L ENGINE>	80A-8	FLOOR AND ROOF	80A-22
		DOOR	80A-26
		LIFTGATE.....	80A-28

OVERALL CONFIGURATION DIAGRAM

M1801000100428

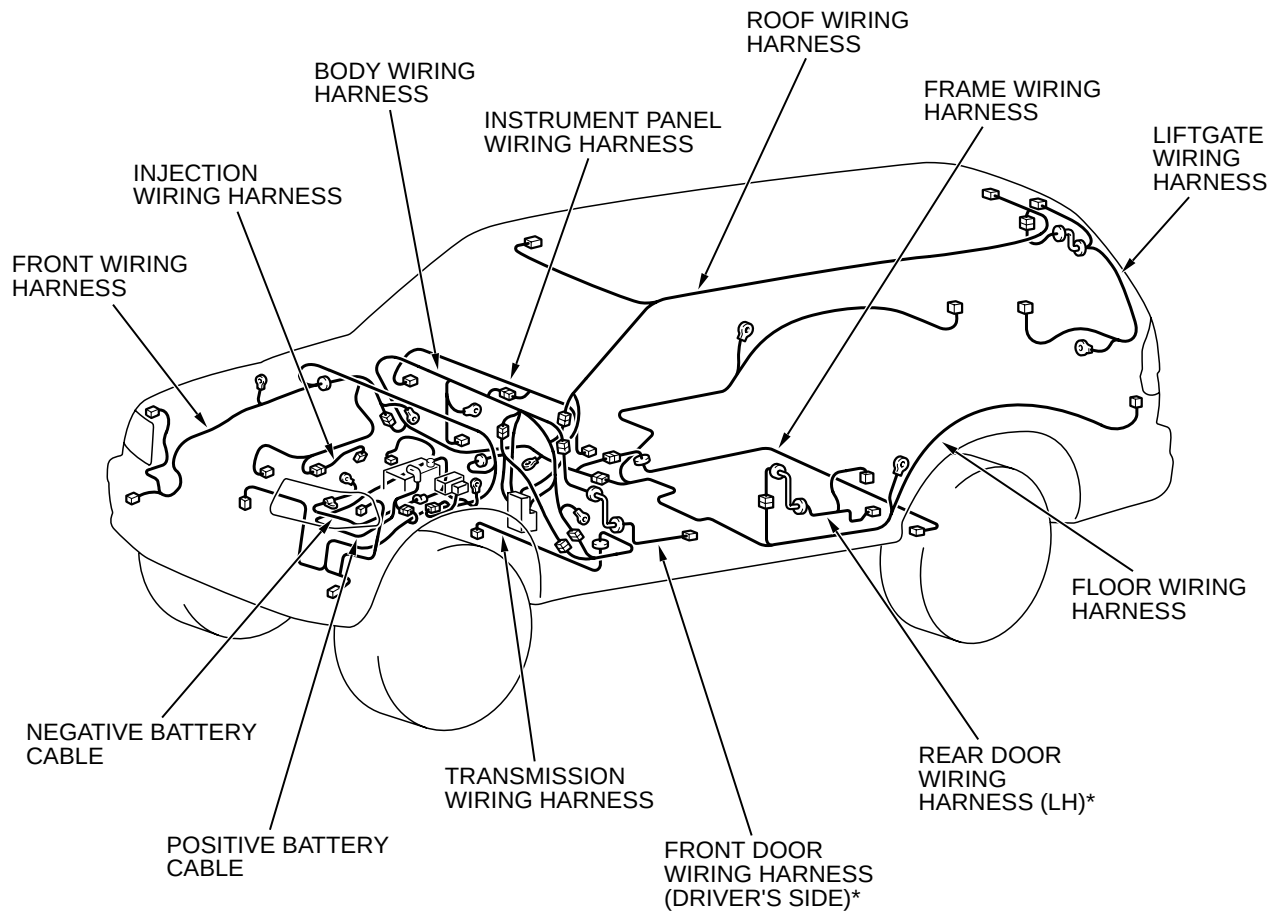

AC002402AC

NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

HOW TO READ CONFIGURATION DIAGRAMS

M1801000200339

The wiring harness diagrams clearly show the connector locations and harness routings at each site on actual vehicles.

Denotes connector No.
The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.
The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number.
Numbers are usually assigned to parts in clockwise order on the diagram.

Example: A-19

Number specific to connector (serial number)

Connector location site symbol

A: ENGINE COMPARTMENT

B: TRANSMISSION

C: DASH PANEL

D: JUNCTION BLOCK AND
STEERING COLUMN

E: FLOOR AND ROOF

F: DOOR

G: LIFTGATE

Denotes ground point.
Same ground number is used throughout circuit diagrams to facilitate search of ground point.
Refer to GROUP 70 SINGLE PART INSTALLATION POSITION - GROUND MOUNTING LOCATIONS for details of ground points.

Denotes harness name.

The mark ★ shows the standard mounting position of wiring harness.

Denotes a section covered by a corrugated tube.

Denotes the color of harness outer tube (If not specified, it is black.)
R: Red
Y: Yellow

The number of connector pins and the connector color (except milk white)* are shown for ease of retrieval.

Example: (2-B)

Connector color
(milk white if no color is indicated)

Number of connector pins

*: Typical connector colors

B: Black
Y: Yellow
L: Blue
G: Green
R: Red

BR: Brown
V: Violet
O: Orange
GR: Gray
NONE: Milk white

A-19

1

FRONT
WIRING
HARNESS

A-18

A-17

A-16

A-16 (1)
A-17 (3-B)

A-18 (2-B)
A-19 (7-BR)


HORN (LOW)
FRONT COMBINATION
LIGHT (RH)
FRONT IMPACT SENSOR (RH)
VOLUME AIR FLOW SENSOR

Indicates the device to which the connector is connected.

AC002715AD

ENGINE COMPARTMENT <3.0L ENGINE>


M1801000300530

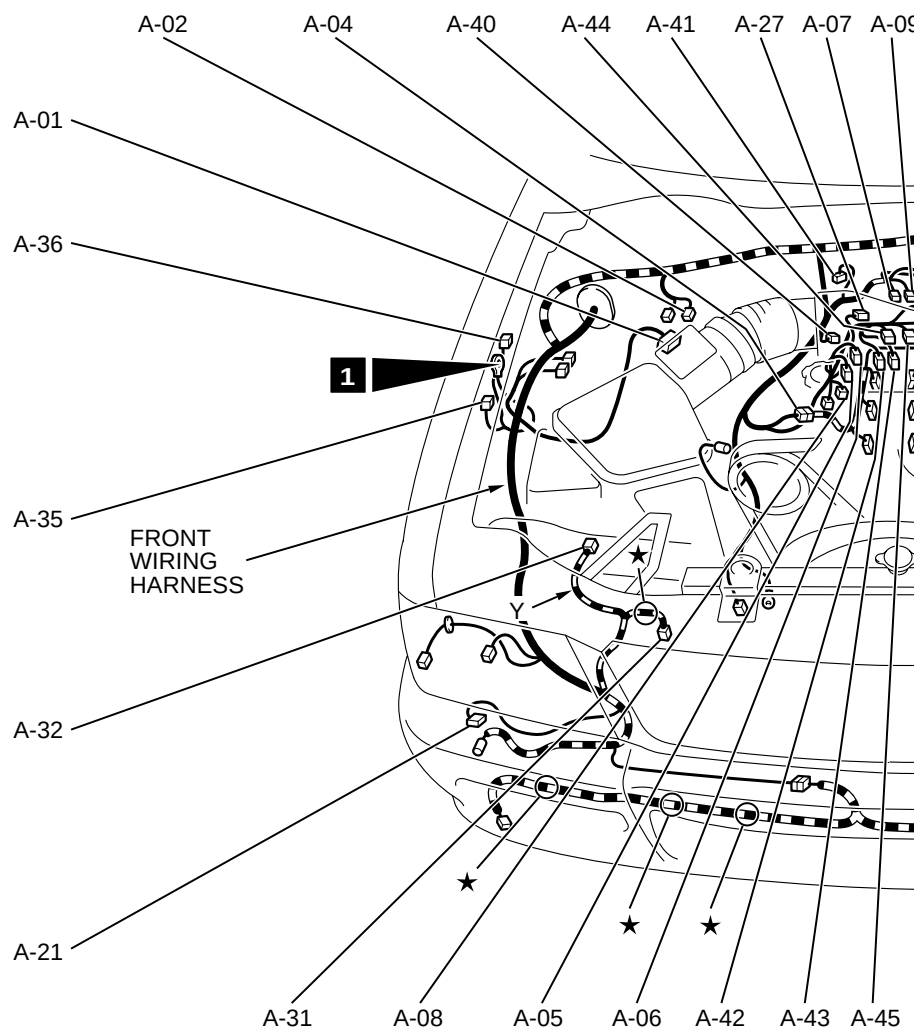Connector
symbol**A** -01
thru
-47

AC201564AB

A-01	(7-B)	VOLUME AIR FLOW SENSOR
A-02	(4-B)	AUTO-CRUISE VACUUM PUMP
A-04	(8-B)	FRONT WIRING HARNESS AND INJECTION WIRING HARNESS COMBINATION
A-05	(6-B)	IGNITION POWER TRANSISTOR
A-06	(3-B)	IGNITION POWER TRANSISTOR
A-07	(4-B)	RIGHT BANK HEATED OXYGEN SENSOR (FRONT)
A-08	(1-B)	ENGINE COOLANT TEMPERATURE GAUGE UNIT
A-09	(4-GR)	LEFT BANK HEATED OXYGEN SENSOR (FRONT)



A-10	(2-B)	EVAPORATIVE EMISSION PURGE SOLENOID
A-11	(2-BR)	EGR SOLENOID
A-12	(3-B)	MANIFOLD DIFFERENTIAL PRESSURE SENSOR
A-15	(4-B)	WINDSHIELD WIPER MOTOR
A-17	(10-B)	FRONT WIRING HARNESS AND A/C WIRING HARNESS COMBINATION
A-18	(2-B)	WHEEL SPEED SENSOR (FRONT: LH) <ABS>
A-20	(2-Y)	FRONT IMPACT SENSOR (LH)
A-21	(2-B)	WINDSHIELD WASHER MOTOR

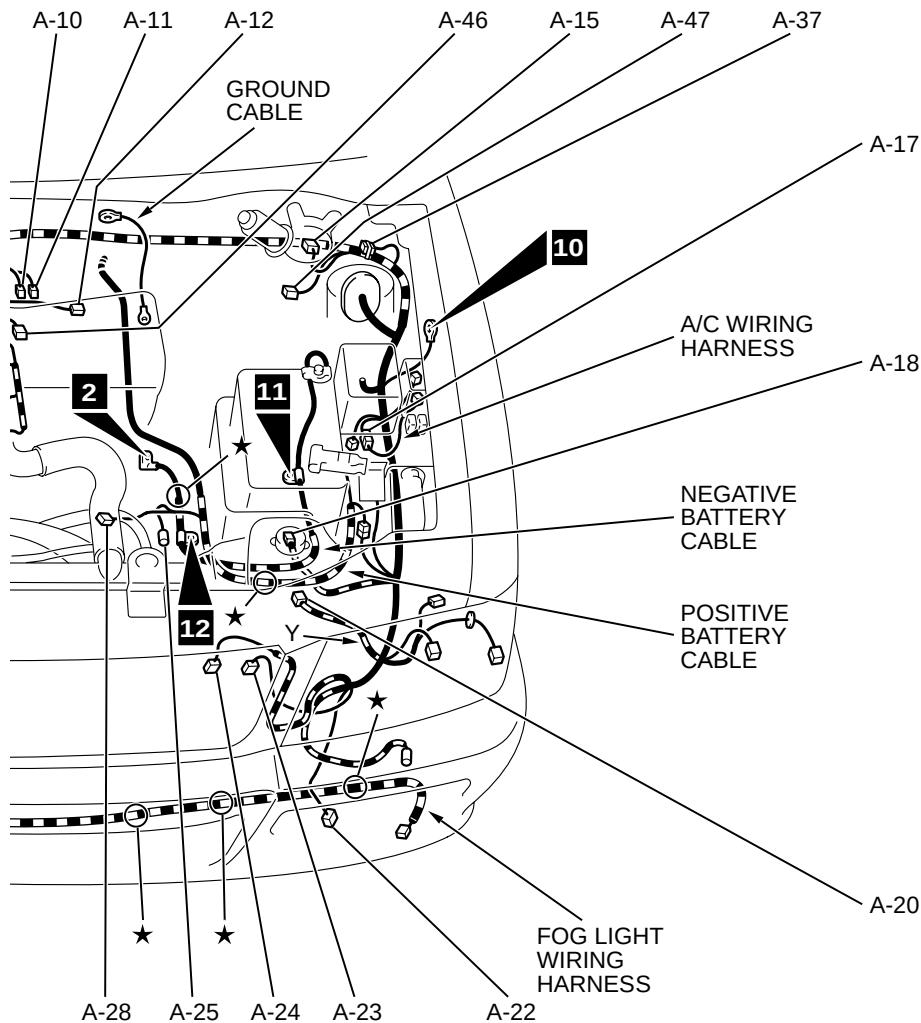

AC201565AB

A-22	(2-BR)	AMBIENT TEMPERATURE SENSOR <COMPASS AND TEMPERATURE DISPLAY>	A-35	(4-B)	ABS RELAY
A-23	(2-BR)	DUAL PRESSURE SWITCH	A-36	(4-B)	HORN RELAY
A-24	(2-B)	CONDENSER FAN MOTOR	A-37	(1-L)	ENGINE SPEED DETECTION CONNECTOR
A-25	(3-B)	MAGNETIC CLUTCH AND REFRIGERANT TEMPERATURE SWITCH	A-40	(6-B)	IDLE AIR CONTROL MOTOR
A-27	(1-B)	CAPACITOR	A-41	(4-B)	THROTTLE POSITION SENSOR
A-28	(1-B)	OIL PRESSURE SWITCH	A-42	(3-GR)	CAMSHAFT POSITION SENSOR
A-31	(2-B)	WHEEL SPEED SENSOR (FRONT: RH) <ABS>	A-43	(3-B)	CRANKSHAFT POSITION SENSOR
A-32	(2-Y)	FRONT IMPACT SENSOR (RH)	A-44	(2-B)	IGNITION COIL (2)
			A-45	(2-B)	IGNITION COIL (1)
			A-46	(2-B)	IGNITION COIL (3)
			A-47	(2-B)	BRAKE FLUID LEVEL SWITCH


ENGINE COMPARTMENT <3.0L ENGINE> (CONTINUED)

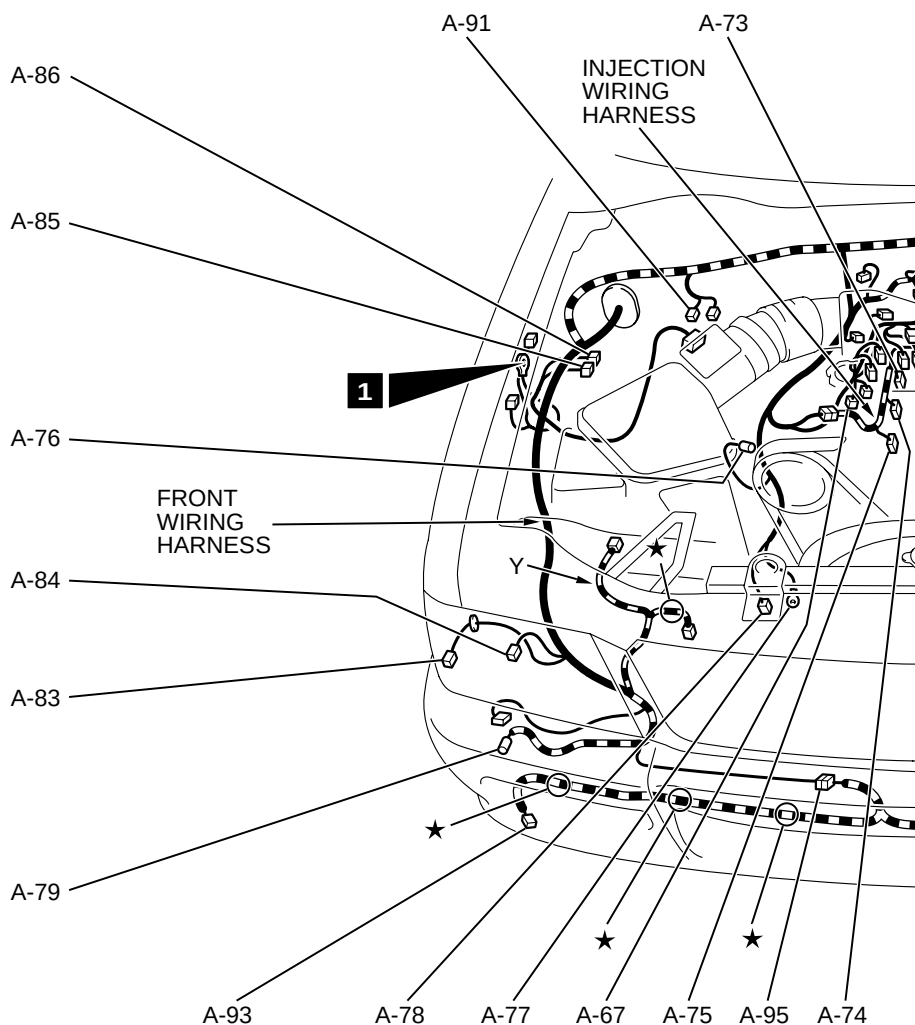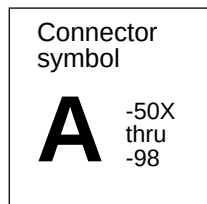

AC201566AB

A-50X (5)	STARTER RELAY
A-51X (5)	FOG LIGHT RELAY
A-52X (5)	HEADLIGHT RELAY
A-53X (5)	BLOWER RELAY
A-54X (2)	IOD OR STORAGE CONNECTOR
A-55X (4)	A/C COMPRESSOR RELAY
A-56X (4)	CONDENSER FAN MOTOR RELAY
A-57X (4)	NO CONNECTION
A-58 (3-B)	HEADLIGHT (LH)
A-59 (3)	FRONT COMBINATION LIGHT (LH)
A-62 (1-B)	HORN (HIGH)


A-67 (2-B)	ENGINE COOLANT TEMPERATURE SENSOR
A-70 (2-GR)	INJECTOR NO. 6
A-71 (2-GR)	INJECTOR NO. 4
A-72 (2-GR)	INJECTOR NO. 2
A-73 (2-GR)	INJECTOR NO. 5
A-74 (2-GR)	INJECTOR NO. 3
A-75 (2-GR)	INJECTOR NO. 1
A-76 (1)	POWER STEERING PRESSURE SWITCH

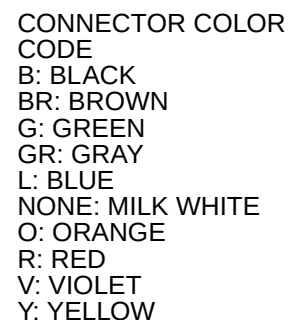

A-91	(1-B)	THEFT-ALARM HORN
A-93	(2-B)	FOG LIGHT (RH)
A-94	(2-B)	HOOD SWITCH <WITH THEFT- ALARM SYSTEM>
A-95	(2-BR)	FRONT WIRING HARNESS AND FOG LIGHT WIRING HARNESS COMBINATION
A-96	(6-GR)	DRL-ECU
A-97	(4)	DRL LOWER RELAY
A-98	(4)	DRL UPPER RELAY


ENGINE COMPARTMENT <3.5L ENGINE>

M1801000300541

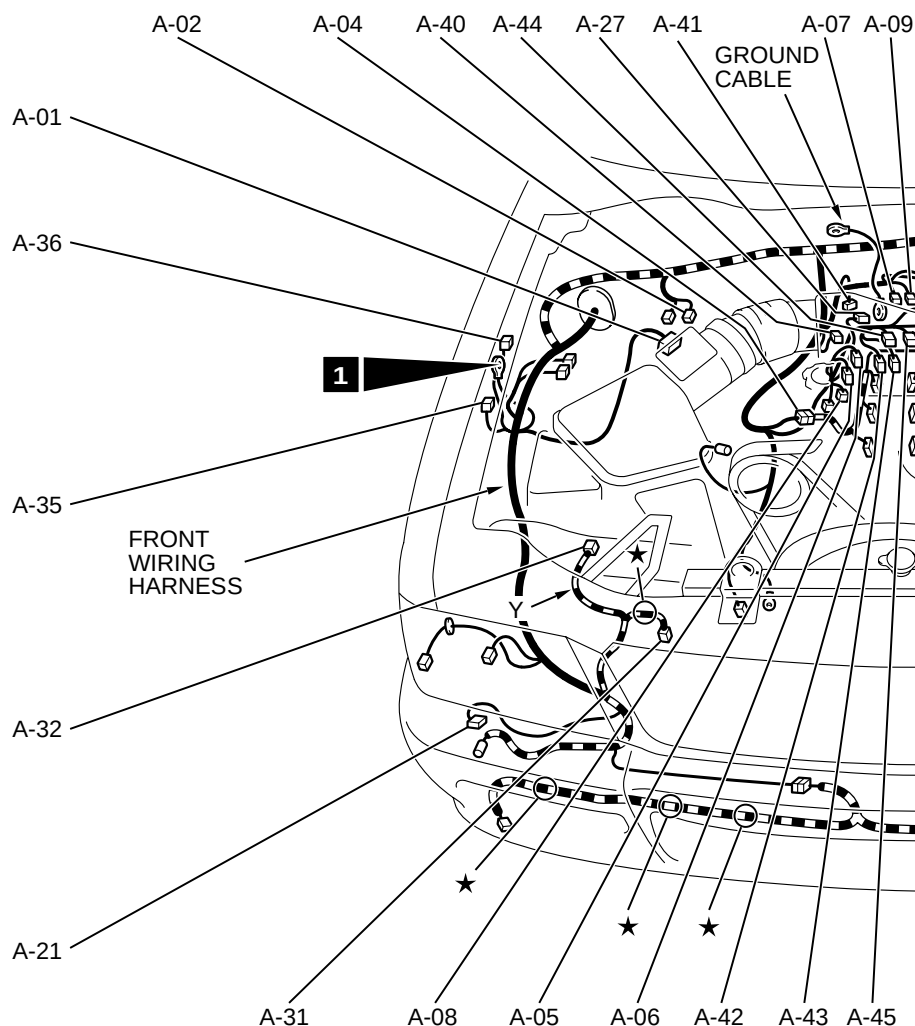Connector
symbol**A** -01
thru
-47

AC201568AB



A-01	(7-B)	VOLUME AIR FLOW SENSOR	A-10	(2-B)	EVAPORATIVE EMISSION PURGE SOLENOID
A-02	(4-B)	AUTO-CRUISE VACUUM PUMP	A-11	(2-BR)	EGR SOLENOID
A-04	(8-B)	FRONT WIRING HARNESS AND INJECTION WIRING HARNESS COMBINATION	A-12	(3-B)	MANIFOLD DIFFERENTIAL PRESSURE SENSOR
A-05	(6-B)	IGNITION POWER TRANSISTOR	A-15	(4-B)	WINDSHIELD WIPER MOTOR
A-06	(3-B)	IGNITION POWER TRANSISTOR	A-17	(10-B)	FRONT WIRING HARNESS AND A/C WIRING HARNESS COMBINATION
A-07	(4-B)	RIGHT BANK HEATED OXYGEN SENSOR (FRONT)	A-18	(2-B)	WHEEL SPEED SENSOR (FRONT: LH) <ABS>
A-08	(1-B)	ENGINE COOLANT TEMPERATURE GAUGE UNIT	A-20	(2-Y)	FRONT IMPACT SENSOR (LH)
A-09	(4-GR)	LEFT BANK HEATED OXYGEN SENSOR (FRONT)	A-21	(2-B)	WINDSHIELD WASHER MOTOR

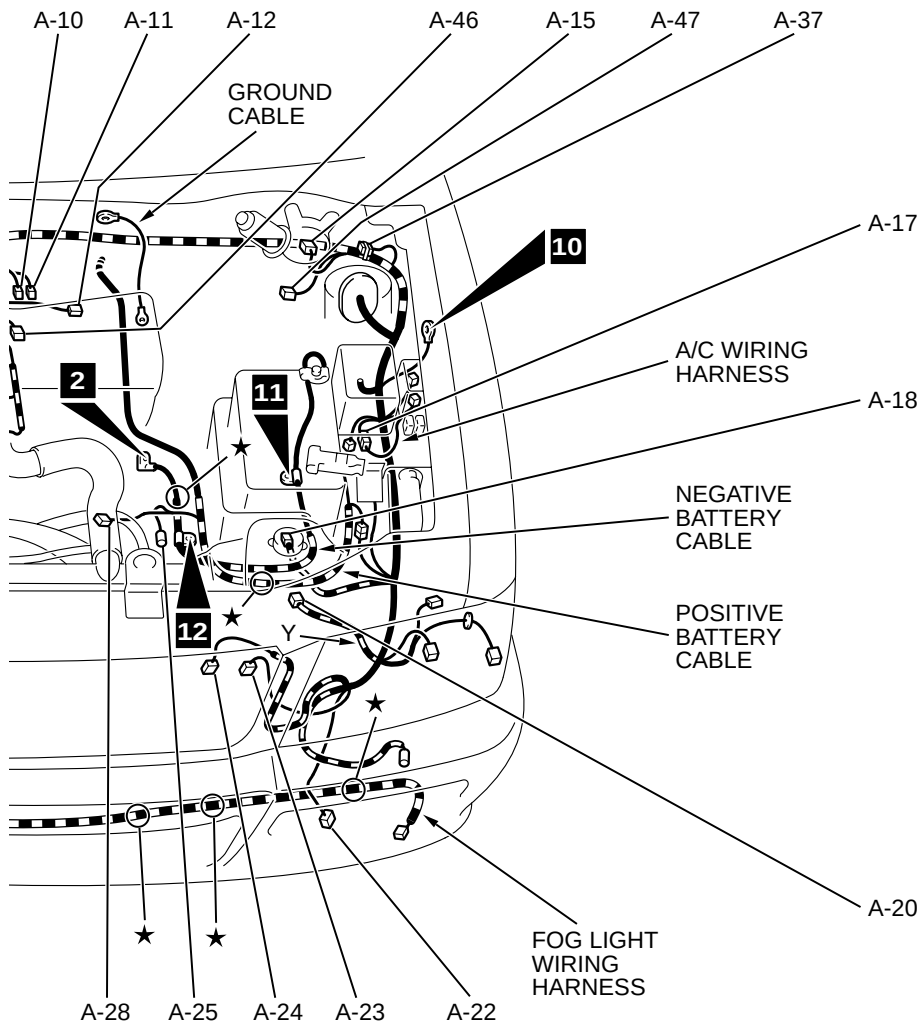

AC201569AB

A-22	(2-BR)	AMBIENT TEMPERATURE SENSOR <COMPASS AND TEMPERATURE DISPLAY>	A-35	(4-B)	ABS RELAY
A-23	(2-BR)	DUAL PRESSURE SWITCH	A-36	(4-B)	HORN RELAY
A-24	(2-B)	CONDENSER FAN MOTOR	A-37	(1-L)	ENGINE SPEED DETECTION CONNECTOR
A-25	(3-B)	MAGNETIC CLUTCH AND REFRIGERANT TEMPERATURE SWITCH	A-40	(6-B)	IDLE AIR CONTROL MOTOR
A-27	(1-B)	CAPACITOR	A-41	(4-B)	THROTTLE POSITION SENSOR
A-28	(1-B)	OIL PRESSURE SWITCH	A-42	(3-GR)	CAMSHAFT POSITION SENSOR
A-31	(2-B)	WHEEL SPEED SENSOR (FRONT: RH) <ABS>	A-43	(3-B)	CRANKSHAFT POSITION SENSOR
A-32	(2-Y)	FRONT IMPACT SENSOR (RH)	A-44	(2-B)	IGNITION COIL (2)
			A-45	(2-B)	IGNITION COIL (1)
			A-46	(2-B)	IGNITION COIL (3)
			A-47	(2-B)	BRAKE FLUID LEVEL SWITCH


ENGINE COMPARTMENT <3.5L ENGINE> (CONTINUED)

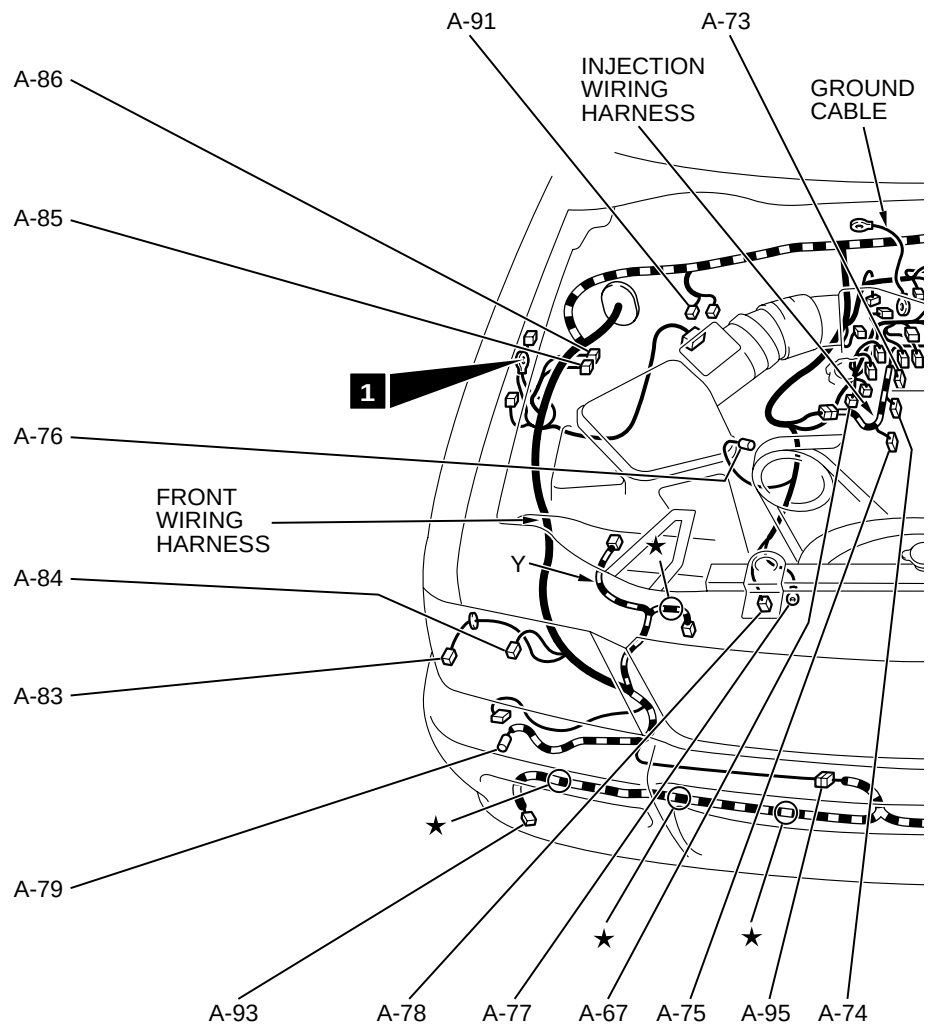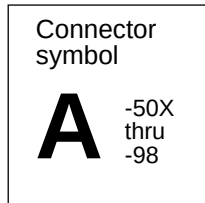

AC201570 AB

A-50X (5)	STARTER RELAY
A-51X (5)	FOG LIGHT RELAY
A-52X (5)	HEADLIGHT RELAY
A-53X (5)	BLOWER RELAY
A-54X (2)	IOD OR STORAGE CONNECTOR
A-55X (4)	A/C COMPRESSOR RELAY
A-56X (4)	CONDENSER FAN MOTOR RELAY
A-57X (4)	NO CONNECTION
A-58 (3-B)	HEADLIGHT (LH)
A-59 (3)	FRONT COMBINATION LIGHT (LH)
A-62 (1-B)	HORN (HIGH)

A-67 (2-B)	ENGINE COOLANT TEMPERATURE SENSOR
A-70 (2-GR)	INJECTOR NO. 6
A-71 (2-GR)	INJECTOR NO. 4
A-72 (2-GR)	INJECTOR NO. 2
A-73 (2-GR)	INJECTOR NO. 5
A-74 (2-GR)	INJECTOR NO. 3
A-75 (2-GR)	INJECTOR NO. 1
A-76 (1)	POWER STEERING PRESSURE SWITCH

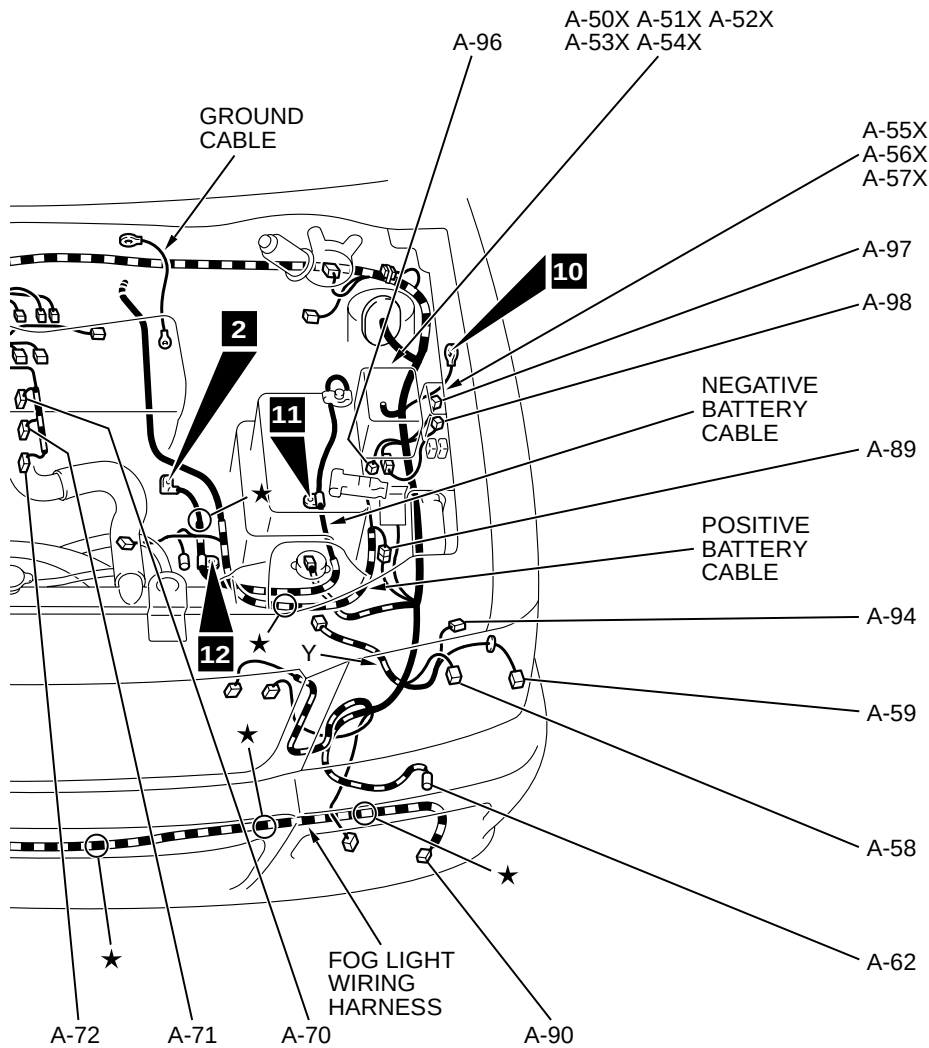

CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC201571AB

A-77	(1)	GENERATOR
A-78	(2-B)	GENERATOR
A-79	(1-B)	HORN (LOW)
A-83	(3)	FRONT COMBINATION LIGHT (RH)
A-84	(3-B)	HEADLIGHT (RH)
A-85	(26-B)	ABS-ECU
A-86	(4-GR)	ABS-ECU
A-89	(6-B)	POSITIVE BATTERY CABLE AND FRONT WIRING HARNESS COMBINATION
A-90	(2-B)	FOG LIGHT (LH)


A-91	(1-B)	THEFT-ALARM HORN
A-93	(2-B)	FOG LIGHT (RH)
A-94	(2-B)	HOOD SWITCH <WITH THEFT- ALARM SYSTEM>
A-95	(2-BR)	FRONT WIRING HARNESS AND FOG LIGHT WIRING HARNESS COMBINATION
A-96	(6-GR)	DRL-ECU
A-97	(4)	DRL LOWER RELAY
A-98	(4)	DRL UPPER RELAY

TRANSMISSION


M1801000500169

Connector
symbol**B**

<RWD>

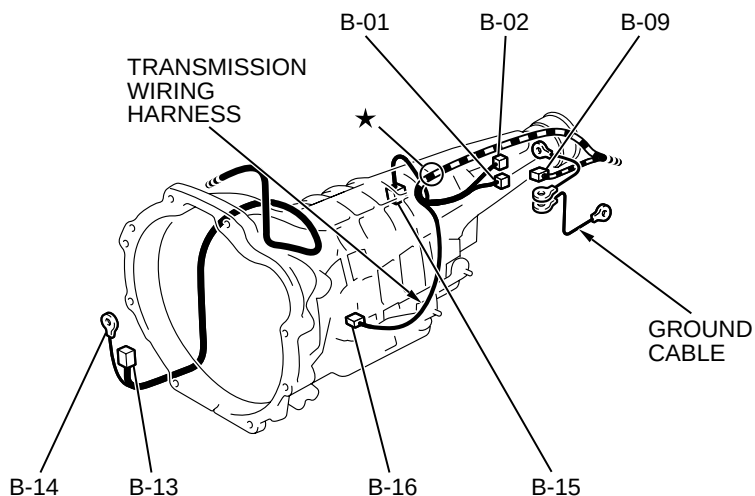

<4WD>

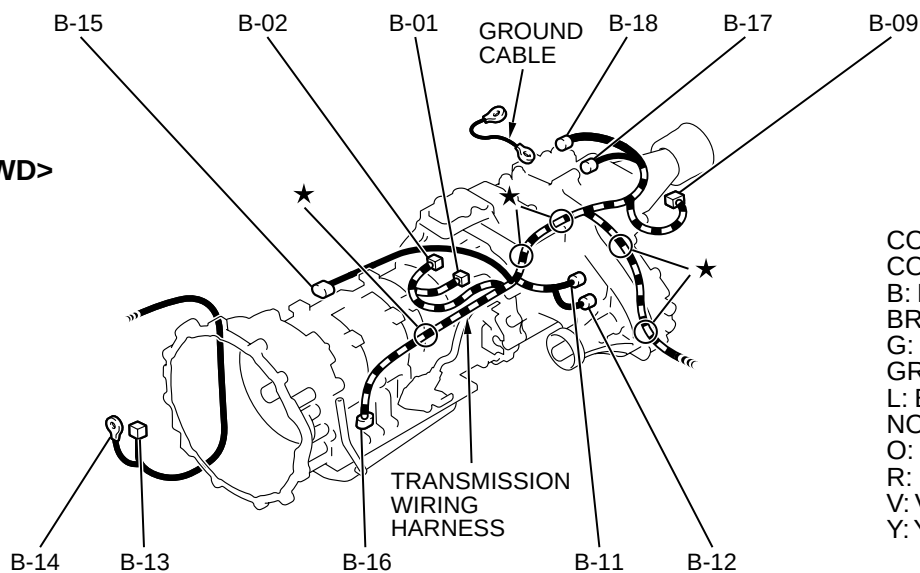CONNECTOR COLOR
CODE

B: BLACK
 BR: BROWN
 G: GREEN
 GR: GRAY
 L: BLUE
 NONE: MILK WHITE
 O: ORANGE
 R: RED
 V: VIOLET
 Y: YELLOW


AC102761AC

B-01	(10-B)	PARK/NEUTRAL POSITION SWITCH	B-14	(1)	STARTER
B-02	(10-B)	AUTOMATIC TRANSMISSION CONTROL SOLENOID	B-15	(3-GR)	OUTPUT SHAFT SPEED SENSOR
B-09	(3-B)	VEHICLE SPEED SENSOR	B-16	(3-B)	INPUT SHAFT SPEED SENSOR
B-11	(1)	HIGH RANGE/LOW RANGE DETECTION SWITCH	B-17	(1)	TRANSFER LOW DETECTION SWITCH
B-12	(1-BR)	CENTER DIFFERENTIAL LOCK DETECTION SWITCH	B-18	(1-BR)	CENTER DIFFERENTIAL LOCK OPERATION DETECTION SWITCH
B-13	(1-B)	STARTER			

NOTES


DASH PANEL

M1801000600478

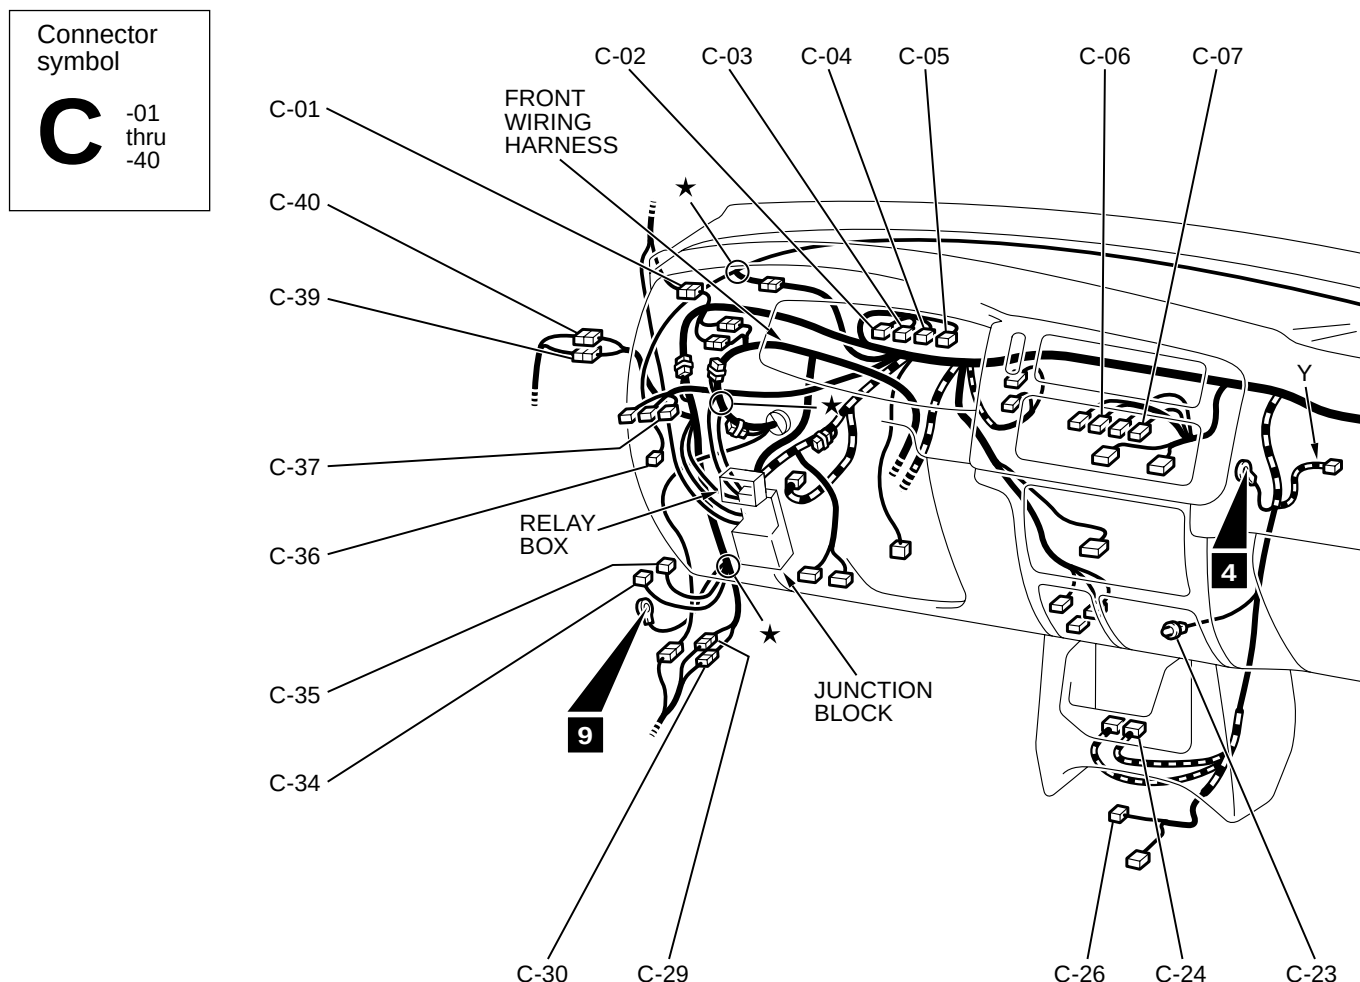

AC102427 AD

C-01	(22)	BODY WIRING HARNESS AND ROOF WIRING HARNESS COMBINATION	C-13	(6)	BODY WIRING HARNESS AND FRONT DOOR WIRING HARNESS (PASSENGER'S SIDE) COMBINATION
C-02	(12-B)	COMBINATION METER	C-14	(33)	JOINT CONNECTOR (5)
C-03	(10)	COMBINATION METER	C-16	(22)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-04	(12)	COMBINATION METER	C-17	(17)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-05	(14)	COMBINATION METER	C-18	(1)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-06	(6)	AIR CONDITIONING SWITCH			
C-07	(8)	BLOWER MOTOR SWITCH			
C-09	(4)	AUTOMATIC COMPRESSOR CONTROLLER			
C-10	(19)	JOINT CONNECTOR (2)			
C-11	(19)	JOINT CONNECTOR (1)			
C-12	(19)	BODY WIRING HARNESS AND FRONT DOOR WIRING HARNESS (PASSENGER'S SIDE) COMBINATION			

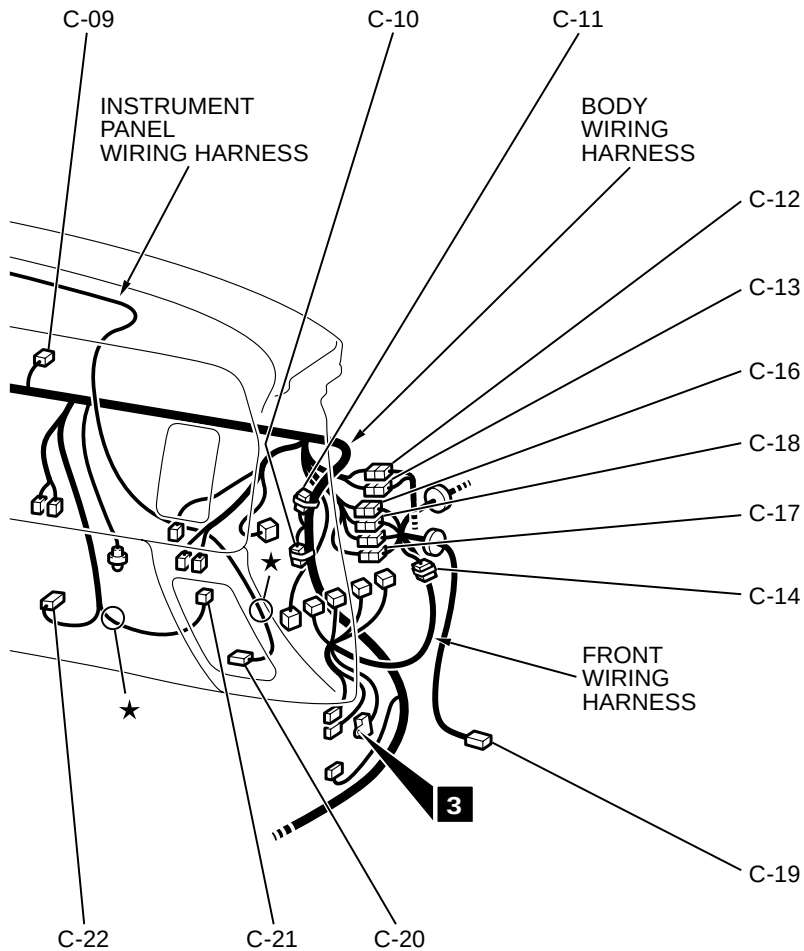


CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW


AC102428 AD

C-19	(2)	MOTOR ANTENNA	C-34	(9)	ANTENNA MOTOR-ECU
C-20	(2-B)	FRONT SPEAKER (RH) <WITH AMPLIFIER>	C-35	(16-B)	AUTO-CRUISE CONTROL-ECU
			C-36	(2-B)	FRONT SPEAKER (LH) <WITH AMPLIFIER>
C-21	(2)	BLOWER MOTOR	C-37	(4)	RHEOSTAT
C-22	(4)	BLOWER RESISTOR	C-39	(19)	BODY WIRING HARNESS AND FRONT DOOR WIRING HARNESS (DRIVER'S SIDE) COMBINATION
C-23	(2)	ASHTRAY ILLUMINATION LIGHT			
C-24	(20-Y)	SRS-ECU	C-40	(10)	BODY WIRING HARNESS AND FRONT DOOR WIRING HARNESS (DRIVER'S SIDE) COMBINATION
C-26	(3-B)	G-SENSOR <4WD-ABS>			
C-29	(9)	BODY WIRING HARNESS AND TRANSMISSION WIRING HARNESS COMBINATION			
C-30	(12)	BODY WIRING HARNESS AND TRANSMISSION WIRING HARNESS COMBINATION			

DASH PANEL (CONTINUED)

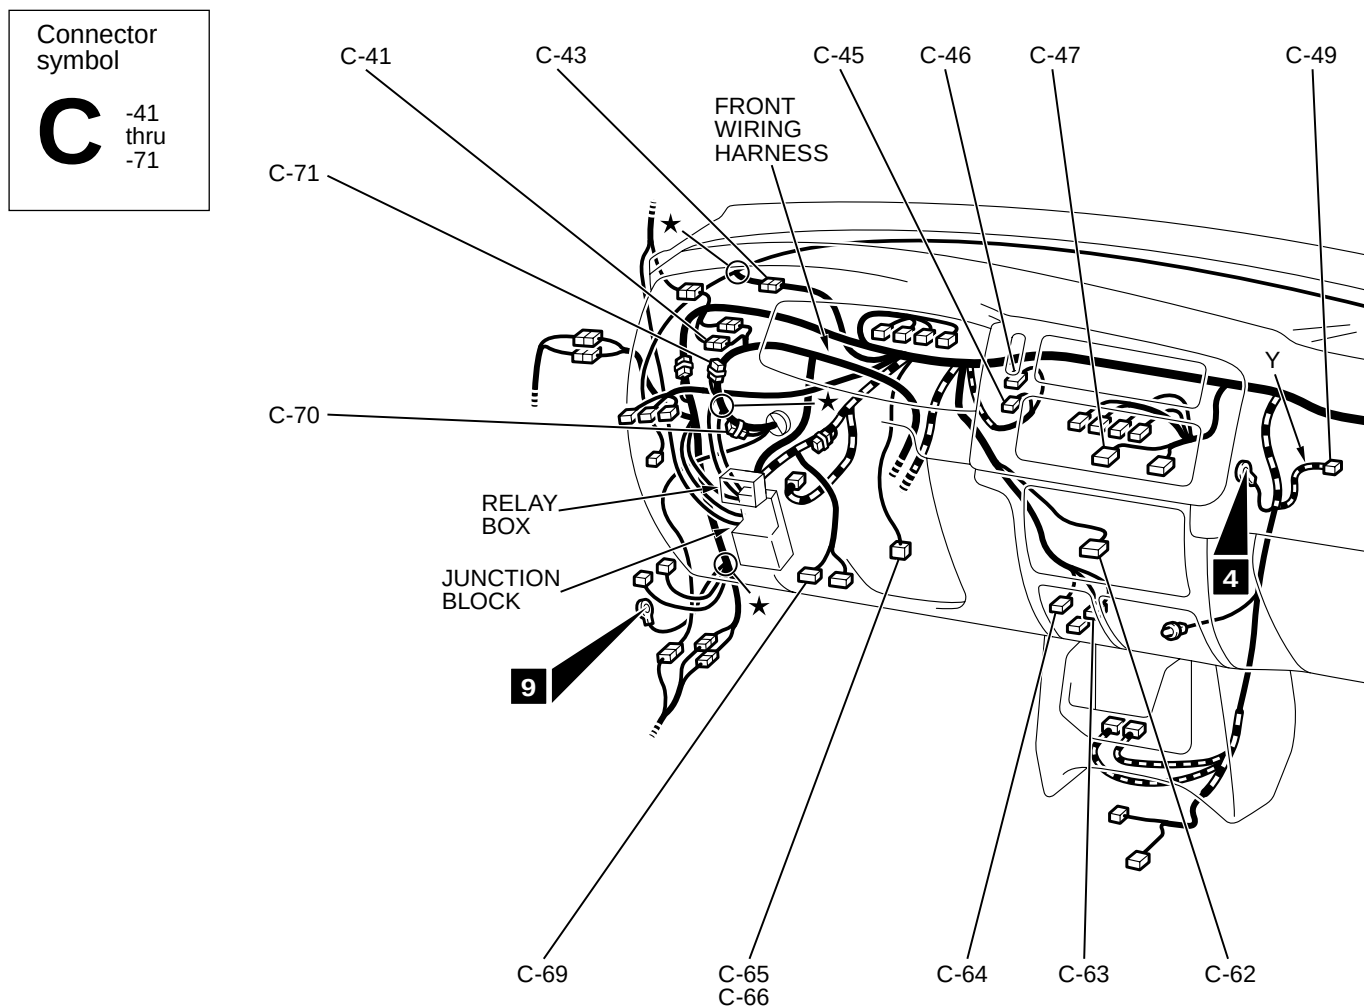

C-41	(22)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION	C-46	(10)	HAZARD WARNING SWITCH
C-43	(5)	BODY WIRING HARNESS AND INSTRUMENT PANEL WIRING HARNESS COMBINATION <WITH AMPLIFIER>	C-47	(2)	HEATER CONTROL PANEL ILLUMINATION LIGHT
C-45	(6)	DEFOGGER SWITCH	C-48	(4-L)	DEFOGGER RELAY
			C-49	(2-R)	AIR BAG MODULE (SQUIB) (PASSENGER'S SIDE)
			C-58	(10)	4WD INDICATOR-ECU

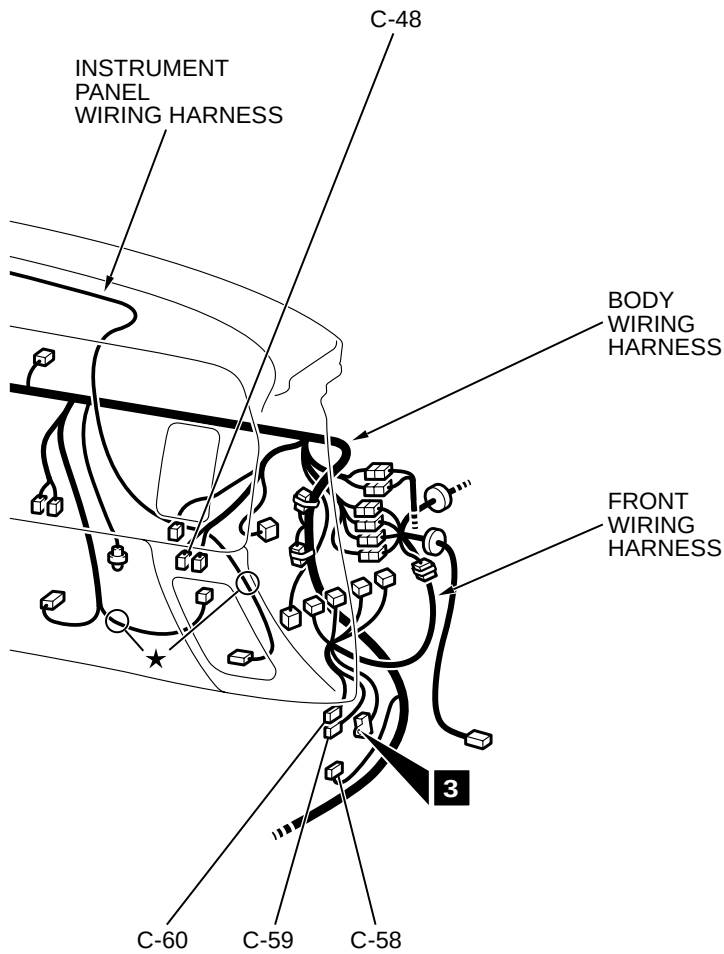


CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC102428AE



C-59	(4)	MULTIPOINT FUEL INJECTION RELAY	C-65	(2-B)	STOPLIGHT SWITCH <WITHOUT AUTO-CRUISE CONTROL SYSTEM>
C-60	(4)	FUEL PUMP RELAY	C-66	(4-B)	STOPLIGHT SWITCH <WITH AUTO-CRUISE CONTROL SYSTEM>
C-62	(14)	RADIO, TAPE PLAYER AND CD PLAYER	C-69	(16-B)	DATA LINK CONNECTOR (1)
C-63	(1-B)	CIGARETTE LIGHTER	C-70	(33)	JOINT CONNECTOR (3)
C-64	(1)	CIGARETTE LIGHTER	C-71	(33)	JOINT CONNECTOR (4)

DASH PANEL (CONTINUED)

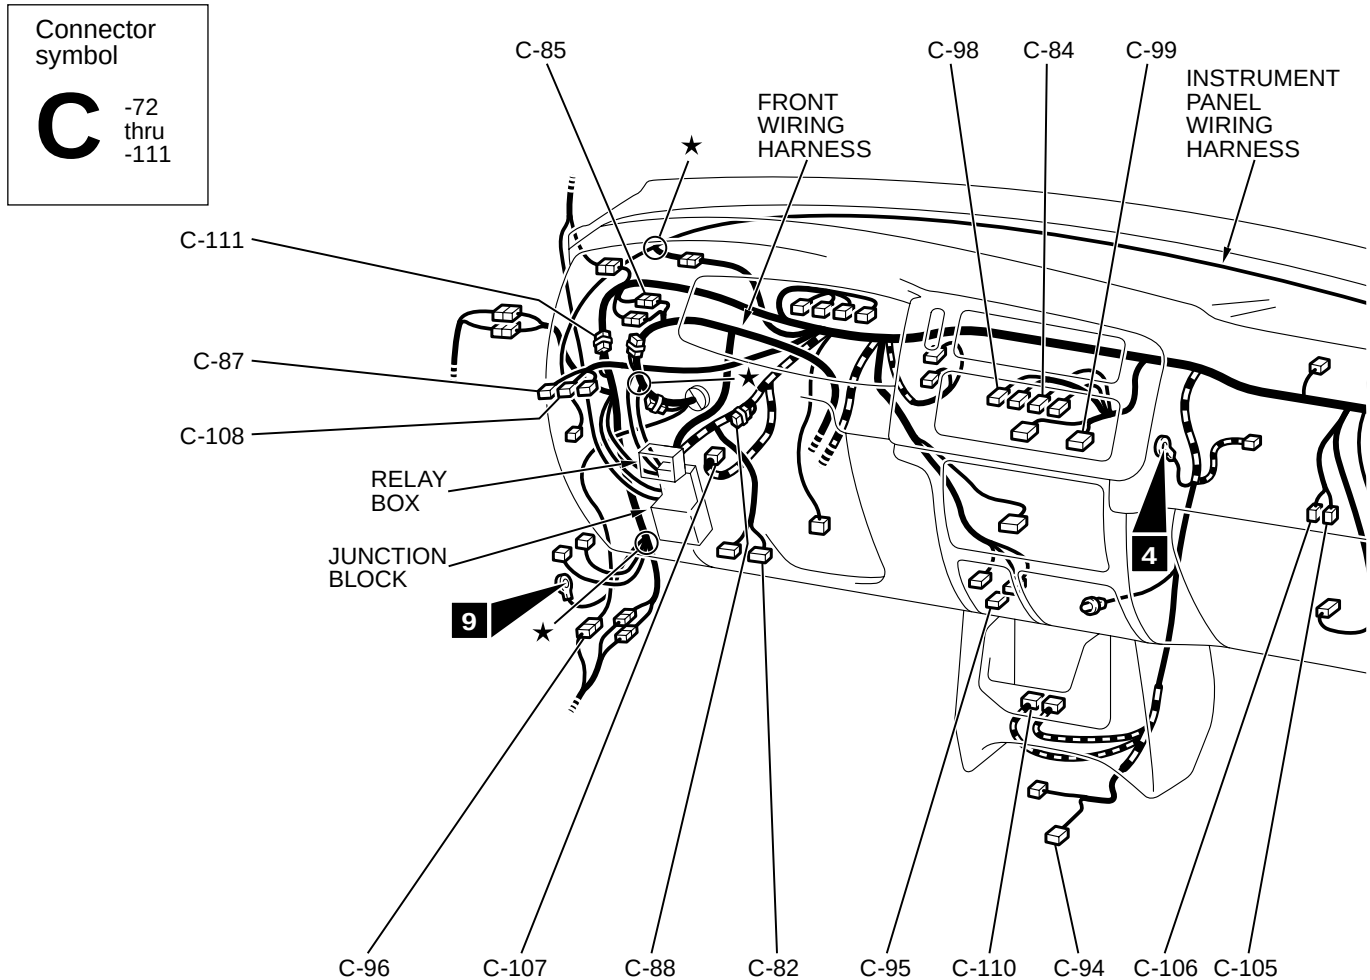

AC102429AC

C-72 (19-B)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION	C-82 (12)	DATA LINK CONNECTOR (2)
C-73X (4)	ACCESSORY SOCKET RELAY	C-84 (4)	REAR HEATER INDICATOR
C-74X (4)	REAR HEATER RELAY	C-85 (11)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION
C-75X (4)	POWER WINDOW RELAY	C-87 (6)	FOG LIGHT SWITCH
C-76X (6)	DEFOGGER TIMER	C-88 (2-B)	DIODE (FOR FOG LIGHT CIRCUIT)
C-77X (8)	REAR INTERMITTENT WIPER RELAY	C-89 (35-GR)	POWERTRAIN CONTROL MODULE
C-79 (13)	BODY WIRING HARNESS AND FRONT WIRING HARNESS COMBINATION	C-90 (26-GR)	POWERTRAIN CONTROL MODULE

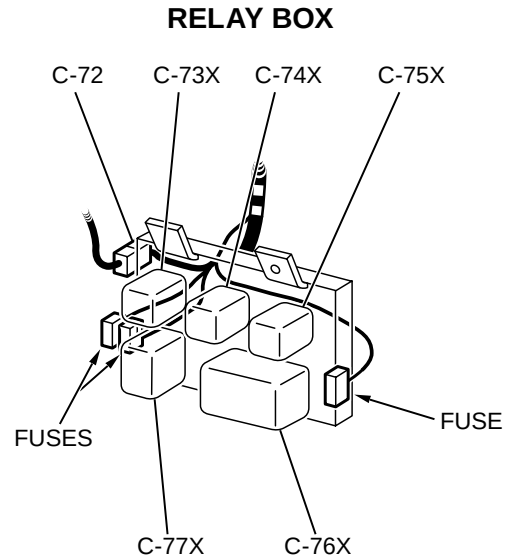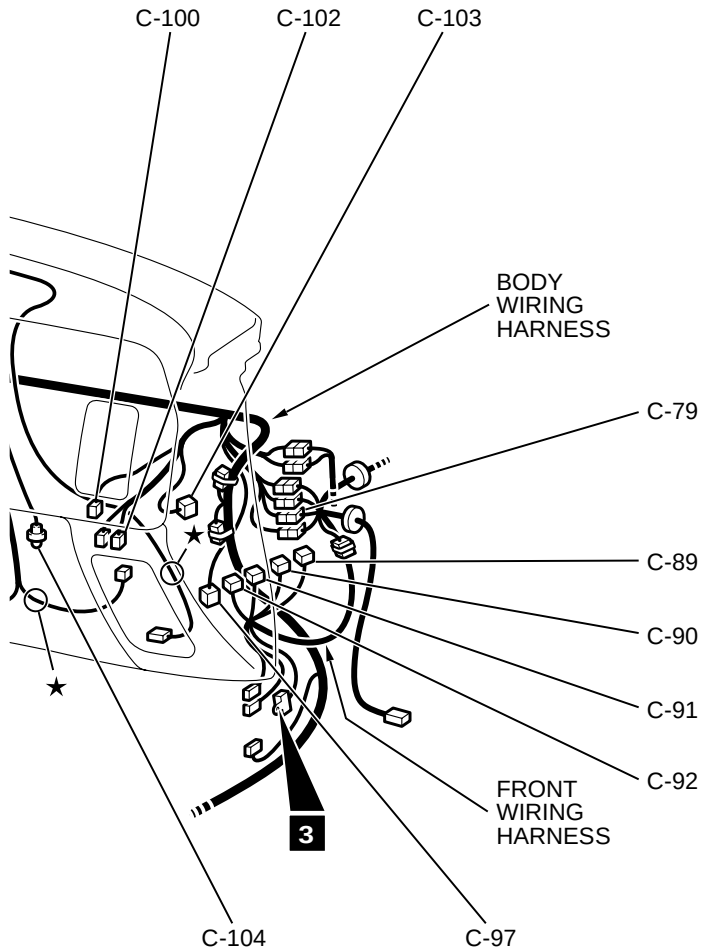

CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC102866 AC

C-91 (28-GR) POWERTRAIN CONTROL MODULE
C-92 (30-GR) POWERTRAIN CONTROL MODULE
C-94 (2) A/T SHIFT ILLUMINATION LIGHT
C-95 (2) CIGARETTE LIGHTER ILLUMINATION LIGHT
C-96 (22) FRONT WIRING HARNESS AND TRANSMISSION WIRING HARNESS COMBINATION
C-97 (4) A/T CONTROL RELAY
C-98 (6) OUTSIDE/INSIDE AIR SELECTION SWITCH
C-99 (8) OUTSIDE/INSIDE AIR DAMPER CONTROLLER

C-100 (4) THEFT-ALARM HORN RELAY
C-102 (8) HAZARD WARNING RELAY
C-103 (4-GR) OUTSIDE/INSIDE AIR SELECTION DAMPER CONTROL MOTOR
C-104 (2) GLOVE BOX LIGHT
C-105 (1) GLOVE BOX LIGHT SWITCH
C-106 (1) GLOVE BOX LIGHT SWITCH
C-107 (12) IMMOBILIZER-ECU
C-108 (2) SECURITY INDICATOR
C-110 (22-Y) SRS-ECU
C-111 (3-O) DIODE (FOR THEFT-ALARM SYSTEM)


JUNCTION BLOCK AND STEERING COLUMN

M1801002400102


Connector
symbol**D**

JUNCTION BLOCK

(FRONT SIDE)

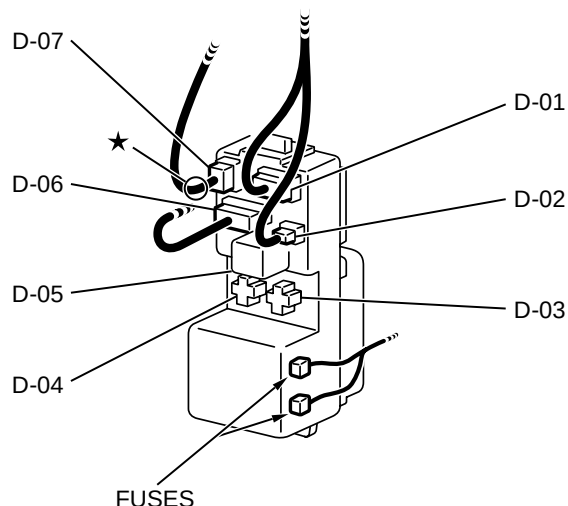

(REAR SIDE)

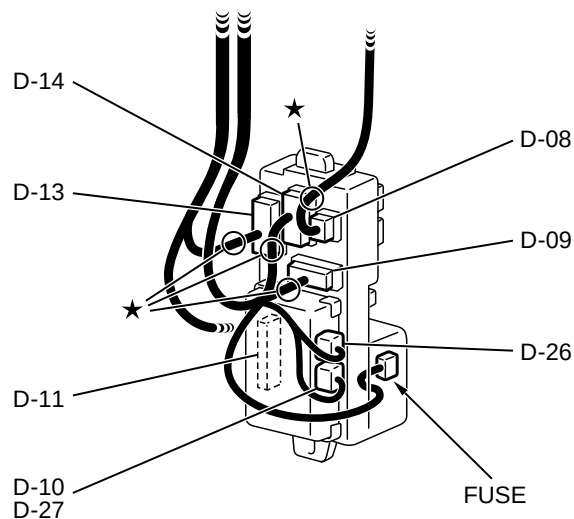


AC002421AC

D-01	(12)	FRONT WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-02	(1-GR)	FRONT WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-03	(5)	NO CONNECTION
D-04	(5)	NO CONNECTION
D-05	(3)	TURN-SIGNAL AND HAZARD WARNING FLASHER UNIT
D-06	(16)	BODY WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-07	(2)	ROOF WIRING HARNESS AND JUNCTION BLOCK COMBINATION

D-08	(4)	FRONT WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-09	(8)	BODY WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-10	(8)	ETACS-ECU <WITHOUT KEYLESS ENTRY SYSTEM>
D-11	(12)	ETACS-ECU
D-13	(20)	BODY WIRING HARNESS AND JUNCTION BLOCK COMBINATION
D-14	(16-B)	BODY WIRING HARNESS AND JUNCTION BLOCK COMBINATION

STEERING COLUMN

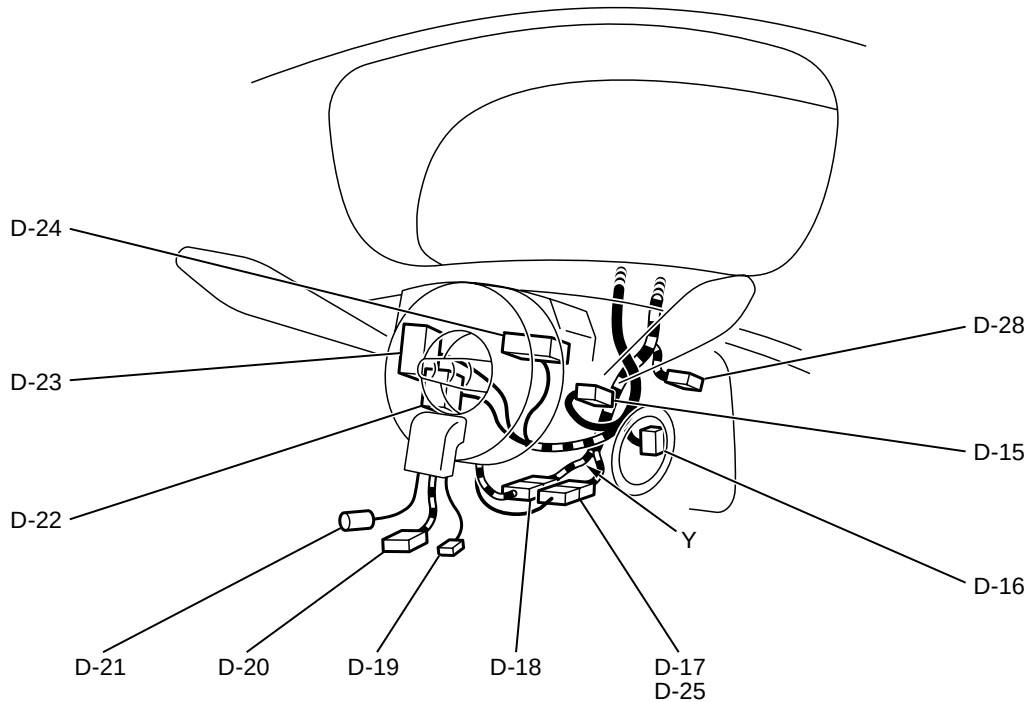



CONNECTOR COLOR CODE
B: BLACK NONE: MILK WHITE
BR: BROWN O: ORANGE
G: GREEN R: RED
GR: GRAY V: VIOLET
L: BLUE Y: YELLOW

AC002423AC

D-15	(6-B)	IGNITION SWITCH	D-23	(12)	COLUMN SWITCH
D-16	(7)	KEY REMINDER SWITCH	D-24	(10)	COLUMN SWITCH
D-17	(3)	CLOCK SPRING <WITHOUT AUTO-CRUISE CONTROL SYSTEM>	D-25	(4)	CLOCK SPRING <WITH AUTO-CRUISE CONTROL SYSTEM>
D-18	(2-R)	CLOCK SPRING	D-26	(12-B)	ETACS-ECU <WITH KEYLESS ENTRY SYSTEM>
D-19	(3-Y)	AUTO-CRUISE CONTROL SWITCH	D-27	(16-B)	ETACS-ECU <WITH KEYLESS ENTRY SYSTEM>
D-20	(2)	AIR BAG MODULE (SQUIB) (DRIVER'S SIDE)	D-28	(2)	IGNITION KEY RING ANTENNA <IMMOBILIZER SYSTEM>
D-21	(1)	HORN SWITCH			
D-22	(6)	COLUMN SWITCH			


FLOOR AND ROOF

M1801000900394

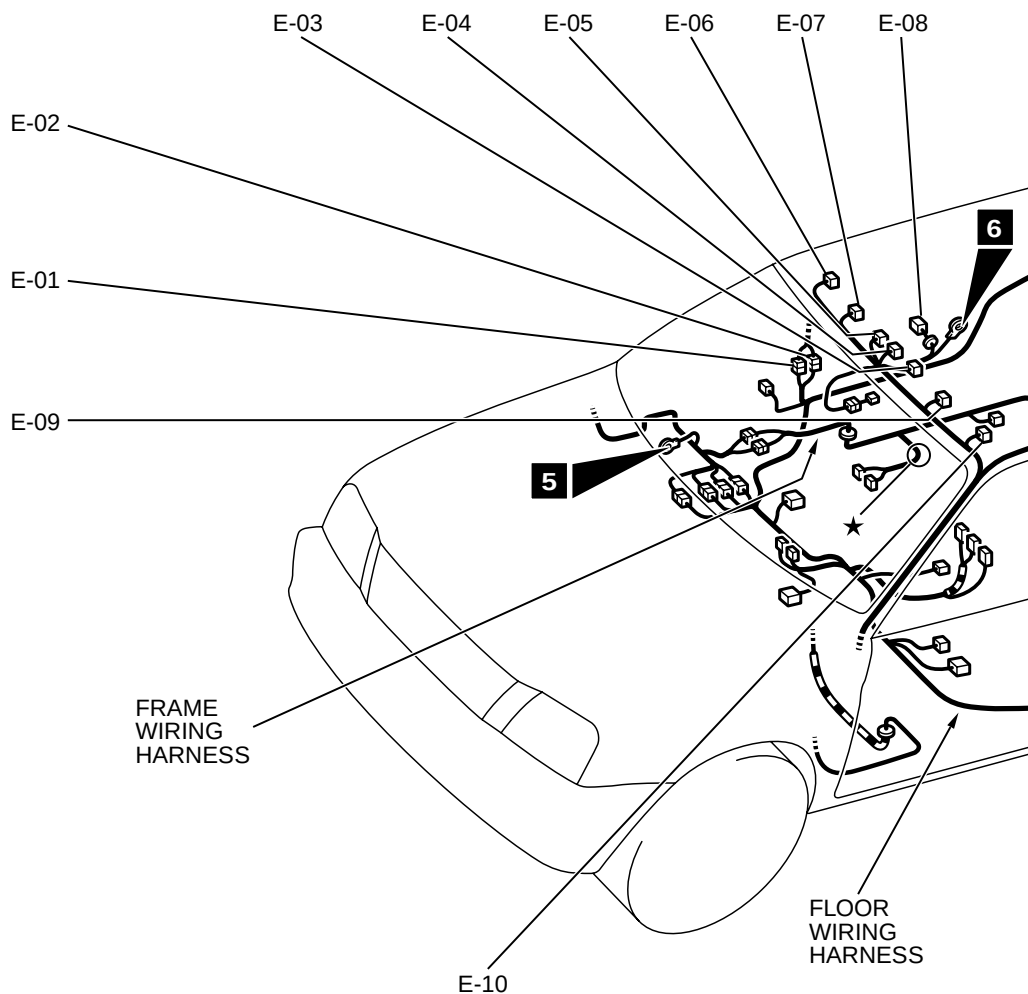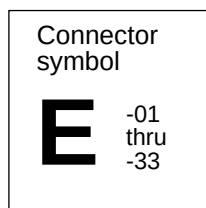

AC002479 AD

E-01	(7)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (RH) COMBINATION	E-09	(2)	SUNROOF SWITCH
E-02	(6)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (RH) COMBINATION	E-10	(2)	VANITY MIRROR LIGHT (LH)
E-03	(6)	SUNROOF SWITCH	E-11	(18)	AMPLIFIER
E-04	(4)	CLOCK	E-12	(1)	ACCESSORY SOCKET (2)
E-05	(2)	MAP LIGHT <WITHOUT SUNROOF>	E-13	(1-B)	ACCESSORY SOCKET (2)
E-06	(2)	VANITY MIRROR LIGHT (RH)	E-14	(2)	REAR WASHER MOTOR
E-07	(10)	SUNROOF-ECU	E-15	(6-B)	REAR COMBINATION LIGHT (RH)
E-08	(1-B)	REAR DOOR SWITCH (RH)	E-16	(2)	CARGO SPACE LIGHT
			E-18	(13)	ROOF WIRING HARNESS AND LIFTGATE WIRING HARNESS COMBINATION


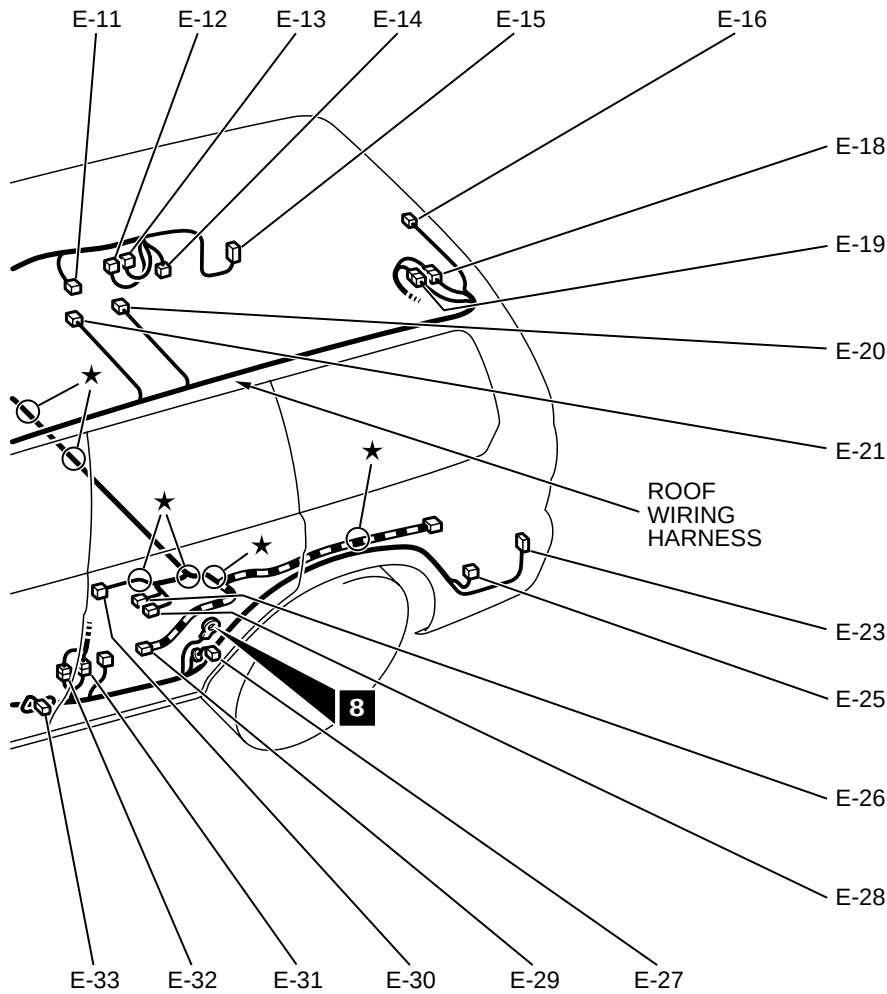


CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC002480 AD

E-19	(1)	ROOF WIRING HARNESS AND LIFTGATE WIRING HARNESS COMBINATION	E-29	(2-B)	WHEEL SPEED SENSOR (REAR: LH) <ABS>
E-20	(2-GR)	DOMELIGHT <WITH SUNROOF>	E-30	(3)	FUEL GAUGE UNIT
E-21	(2-GR)	DOMELIGHT <WITHOUT SUNROOF>	E-31	(7)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (LH) COMBINATION
E-23	(6-B)	REAR COMBINATION LIGHT (LH)	E-32	(6)	FLOOR WIRING HARNESS AND REAR DOOR WIRING HARNESS (LH) COMBINATION
E-25	(6-B)	KEYLESS ENTRY RECEIVER-ECU	E-33	(2)	FRONT DOOR SWITCH (LH)
E-26	(2)	FUEL PUMP			
E-27	(1-B)	REAR DOOR SWITCH (LH)			
E-28	(3-B)	FUEL TANK DIFFERENTIAL PRESSURE SENSOR			


FLOOR AND ROOF (CONTINUED)

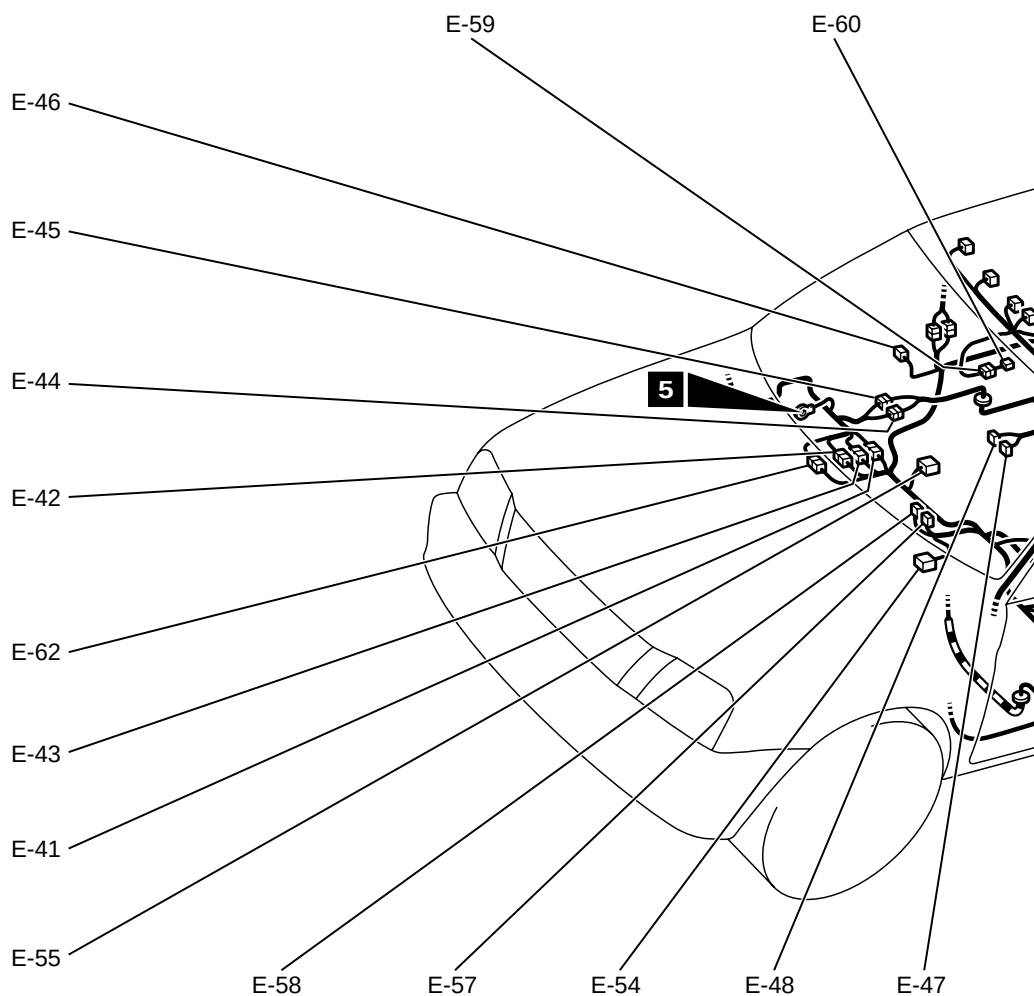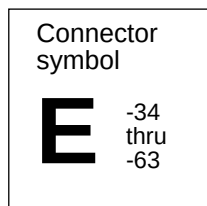

AC002481AC

E-34	(4)	REAR FAN MOTOR ASSEMBLY AND RESISTOR
E-35	(2)	SEAT BELT SWITCH
E-36	(6)	REAR HEATER SWITCH
E-37	(1-B)	PARKING BRAKE SWITCH
E-38	(2)	REAR HEATER CONTROL PANEL ILLUMINATION LIGHT
E-39	(2-B)	WHEEL SPEED SENSOR (REAR: RH) <ABS>
E-41	(22)	BODY WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION

E-42	(19)	BODY WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
E-43	(10)	BODY WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION <WITH AMPLIFIER>
E-44	(20)	BODY WIRING HARNESS AND FRAME WIRING HARNESS COMBINATION

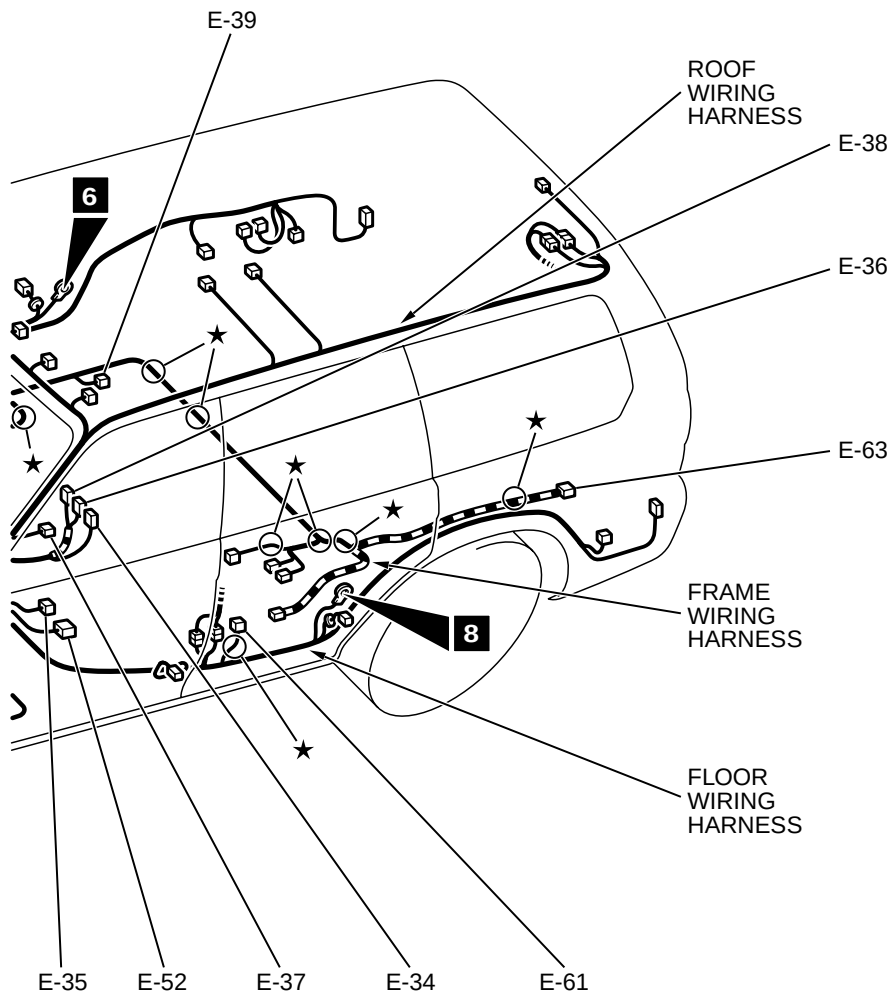

CONNECTOR COLOR
CODE
B: BLACK
BR: BROWN
G: GREEN
GR: GRAY
L: BLUE
NONE: MILK WHITE
O: ORANGE
R: RED
V: VIOLET
Y: YELLOW

AC002482AD


E-45	(20-B)	BODY WIRING HARNESS AND FRAME WIRING HARNESS COMBINATION	E-58	(1-B)	ACCESSORY SOCKET (1)
E-46	(2)	FRONT DOOR SWITCH (RH)	E-59	(7)	ROOF WIRING HARNESS AND INSIDE REAR VIEW MIRROR WIRING HARNESS COMBINATION
E-47	(4-GR)	RIGHT BANK HEATED OXYGEN SENSOR (REAR)	E-60	(7)	INSIDE REAR VIEW MIRROR ASSEMBLY
E-48	(4-B)	LEFT BANK HEATED OXYGEN SENSOR (REAR)	E-61	(2-R)	SEAT BELT PRETENSIONER
E-52	(3-B)	FRONT SEAT ASSEMBLY (LH)	E-62	(2-R)	BODY WIRING HARNESS AND FLOOR WIRING HARNESS COMBINATION
E-54	(9)	HEATED SEAT SWITCH	E-63	(2-B)	EVAPORATIVE VENTILATION SOLENOID
E-55	(3-B)	FRONT SEAT ASSEMBLY (RH)			
E-57	(1)	ACCESSORY SOCKET (1)			

DOOR

M1801001400400

Connector
symbol**F**


<DRIVER'S SIDE>

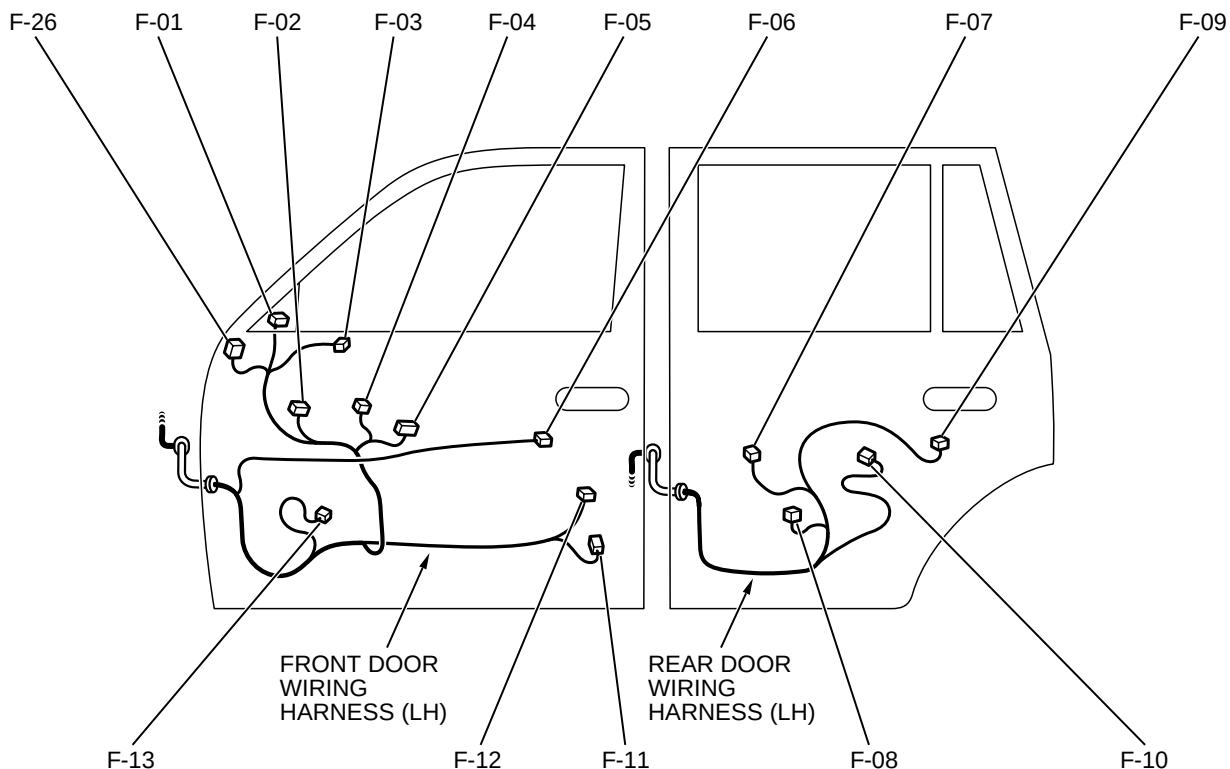

AC002483AC

F-01	(3)	REMOTE CONTROLLED MIRROR (LH) <WITHOUT MIRROR HEATER>	F-09	(5)	DOOR LOCK ACTUATOR (REAR: LH)
F-02	(2)	POWER WINDOW MOTOR (FRONT: LH)	F-10	(2-B)	REAR DOOR SPEAKER (LH)
F-03	(2)	TWEETER (LH)	F-11	(2)	DOOR LIGHT (LH)
F-04	(9)	REMOTE CONTROLLED MIRROR SWITCH	F-12	(6-B)	DOOR LOCK ACTUATOR (FRONT: LH)
F-05	(14)	POWER WINDOW MAIN SWITCH	F-13	(2-B)	FRONT DOOR SPEAKER (LH)
F-06	(3)	DOOR LOCK KEY CYLINDER SWITCH (LH)	F-14	(3)	REMOTE CONTROLLED MIRROR (RH) <WITHOUT MIRROR HEATER>
F-07	(8)	POWER WINDOW SUB SWITCH (REAR: LH)	F-15	(2)	POWER WINDOW MOTOR (FRONT: RH)
F-08	(2)	POWER WINDOW MOTOR (REAR: LH)			


<PASSENGER'S SIDE>

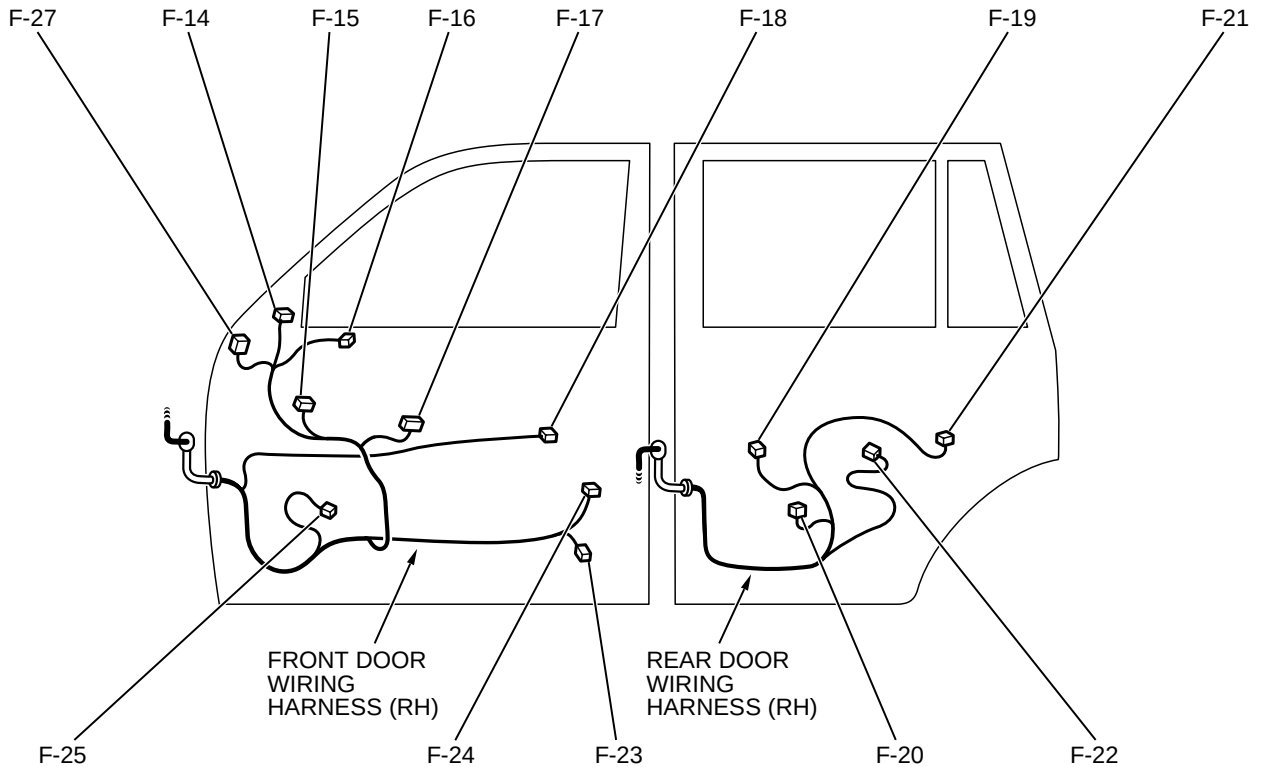

AC002484AC

F-16	(2)	TWEETER (RH)	F-22	(2-B)	REAR DOOR SPEAKER (RH)
F-17	(8)	POWER WINDOW SUB SWITCH (FRONT: RH)	F-23	(2)	DOOR LIGHT (RH)
F-18	(3)	DOOR LOCK KEY CYLINDER SWITCH (RH)	F-24	(6-B)	DOOR LOCK ACTUATOR (FRONT: RH)
F-19	(8)	POWER WINDOW SUB SWITCH (REAR: RH)	F-25	(2-B)	FRONT DOOR SPEAKER (RH)
F-20	(2)	POWER WINDOW MOTOR (REAR: RH)	F-26	(7)	REMOTE CONTROLLED MIRROR (LH) <WITH MIRROR HEATER>
F-21	(5)	DOOR LOCK ACTUATOR (REAR: RH)	F-27	(7)	REMOTE CONTROLLED MIRROR (RH) <WITH MIRROR HEATER>

LIFTGATE

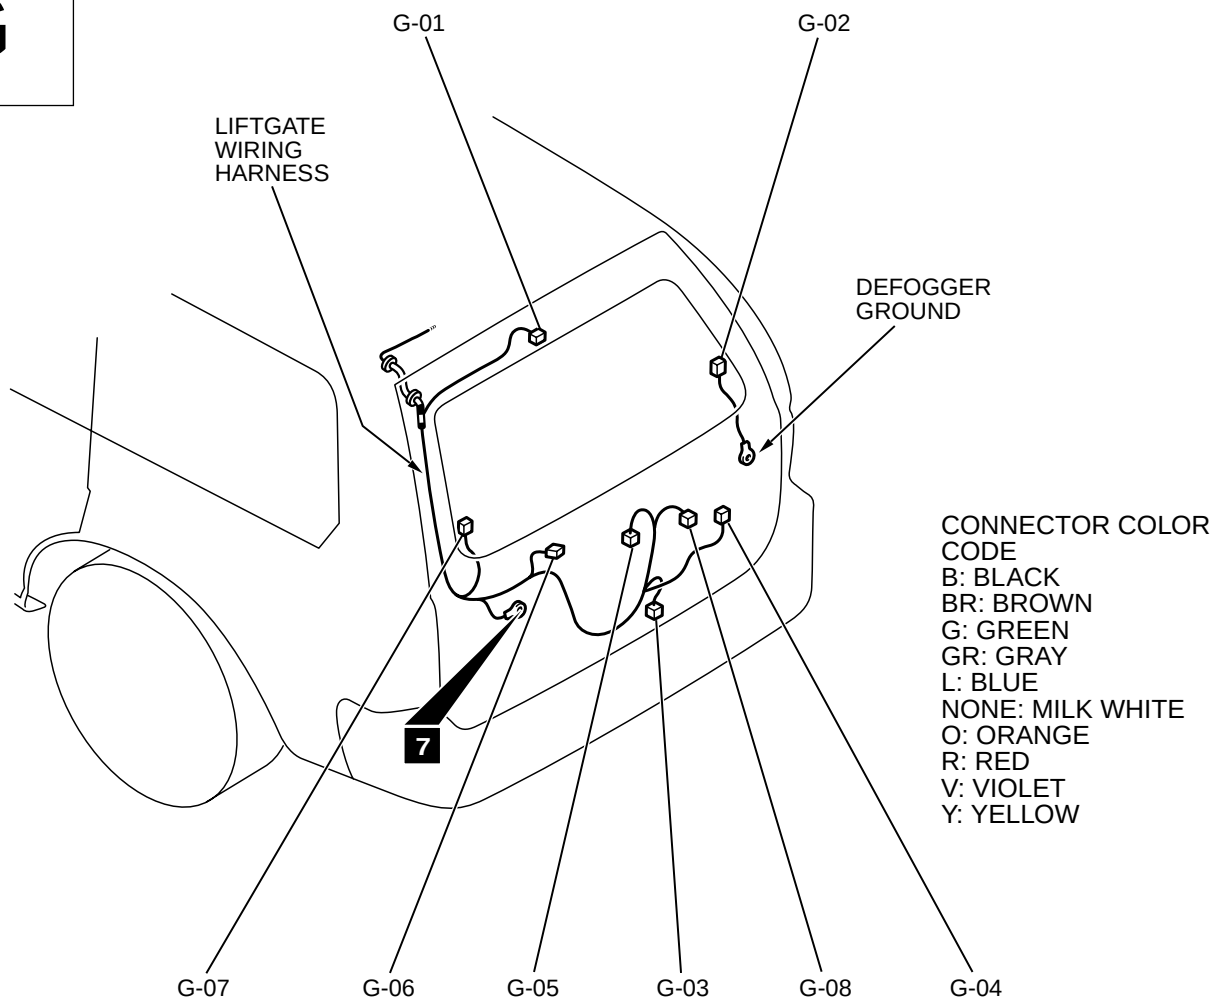Connector
symbol**G**

AC002485 AD

G-01 (2) HIGH-MOUNTED STOPLIGHT
 G-02 (1-B) DEFOGGER (-)
 G-03 (1-B) LIFTGATE SWITCH
 G-04 (5) DOOR LOCK ACTUATOR (LIFTGATE)
 G-05 (4) REAR WIPER MOTOR

G-06 (2) LICENSE PLATE LIGHT
 G-07 (1-B) DEFOGGER (+)
 G-08 (3) LIFTGATE LOCK KEY CYLINDER SWITCH <WITH KEYLESS ENTRY SYSTEM>