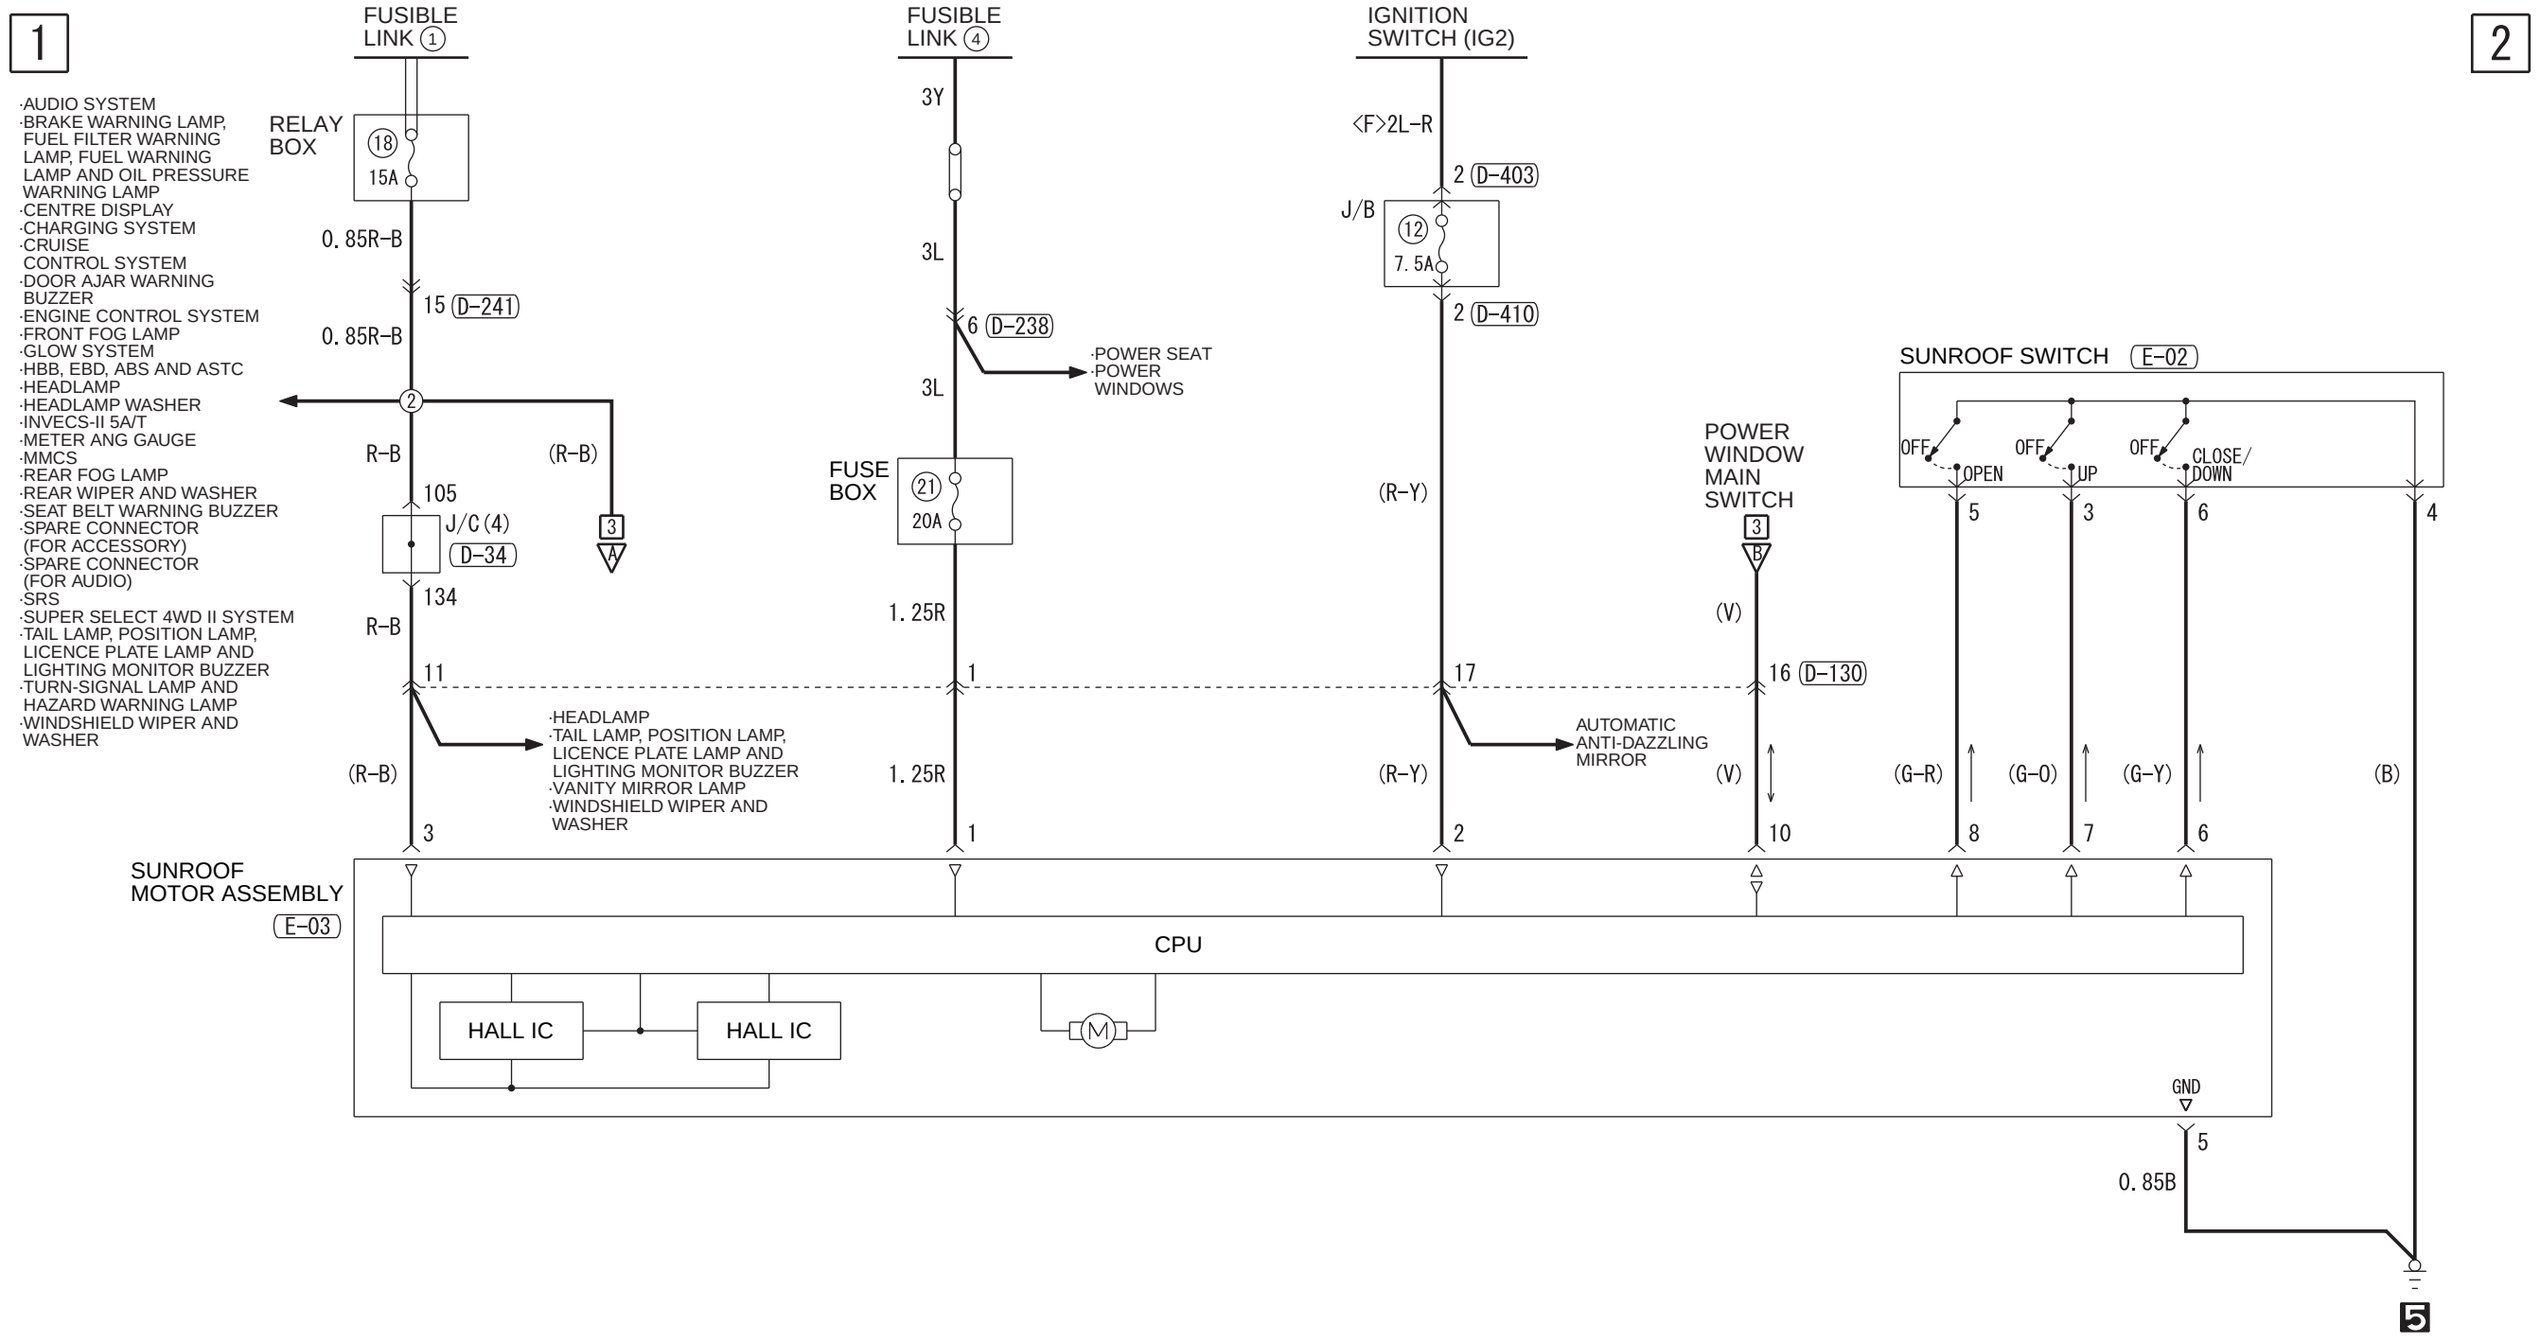
1
2
FUSIBLE LINK 1
FUSIBLE LINK 4
IGNITION SWITCH (IG2)
·AUDIO SYSTEM
·BRAKE WARNING LAMP, FUEL FILTER WARNING LAMP, FUEL WARNING LAMP AND OIL PRESSURE WARNING LAMP
·CENTRE DISPLAY
·CHARGING SYSTEM
·CRUISE CONTROL SYSTEM
·DOOR AJAR WARNING BUZZER
·ENGINE CONTROL SYSTEM
·FRONT FOG LAMP
·GLOW SYSTEM
·HBB, EBD, ABS AND ASTC
·HEADLAMP
·HEADLAMP WASHER
·INVECS-II 5A/T
·METER ANG GAUGE
·MMCS
·REAR FOG LAMP
·REAR WIPER AND WASHER
·SEAT BELT WARNING BUZZER
·SPARE CONNECTOR (FOR ACCESSORY)
·SPARE CONNECTOR (FOR AUDIO)
·SRS
·SUPER SELECT 4WD II SYSTEM
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·TURN-SIGNAL LAMP AND HAZARD WARNING LAMP
·WINDSHIELD WIPER AND WASHER
RELAY BOX
18
15A
0.85R-B
15 D-241
0.85R-B
2
R-B
(R-B)
105
J/C (4)
D-34
3
A
134
R-B
11
(R-B)
3
·HEADLAMP
·TAIL LAMP, POSITION LAMP, LICENCE PLATE LAMP AND LIGHTING MONITOR BUZZER
·VANITY MIRROR LAMP
·WINDSHIELD WIPER AND WASHER
3Y
3L
6 D-238
·POWER SEAT
·POWER WINDOWS
3L
FUSE BOX
21
20A
1.25R
1
1.25R
1
<F>2L-R
2 D-403
J/B
12
7.5A
2 D-410
(R-Y)
17
(R-Y)
2
AUTOMATIC ANTI-DAZZLING MIRROR
POWER WINDOW MAIN SWITCH
3
B
(V)
16 D-130
(V)
10
SUNROOF SWITCH E-02
OFF
OPEN
OFF
UP
OFF
CLOSE/DOWN
5
3
6
4
(G-R)
(G-O)
(G-Y)
(B)
8
7
6
SUNROOF MOTOR ASSEMBLY
E-03
CPU
HALL IC
HALL IC
M
GND
5
0.85B
5
D-34
Refer to J/C circuit
D-130
D-238
MU801333
D-241
D-403
MU801331
D-410
MU801685
E-02
(MU801581)
E-03
(MU801845)
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver
H9B15E09AC